

# Fantasea Flex Arm

(Cat. No. 3040)

## Instruction Manual

### 1. Introduction

The **Fantasea Flex Arm** is a flexible arm made of rugged plastic polycarbonate material, designed for attaching a flash, focus light or night dive to a tray. The **Flex Arm** features a standard C1 connector at the bottom, allowing it to be mounted directly on a tray. It also features a standard Y-S connector at the top, designed for easy attachment of underwater flashes and lights. The flexible design of the arm allows for the light or flash mounted on top of it to be positioned within different angles and distances from the camera housing. An EyeGrabber Lens Holder (caddy) for safely securing lens accessories when removed from the housing lens port can be ordered separately and attached to the arm.


Size: 30 cm/12 inch.

Weight: .26 kg



### 2. Mounting the Flex Arm on a Tray

- The Flex Arm features a C1 Connector at the bottom, which should be attached to the T1 Connector featured on the tray (images #1 and #2).
- Glide the Flex Arm's C1 connector on the Tray's T1 connector till they are perfectly aligned with each other.
- Tighten the screw featured on the Flex Arm's C1 connector in order to lock the arm on the tray.

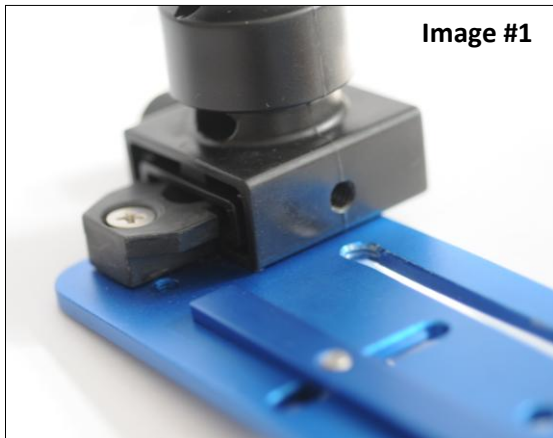


- After tightening the screw, in order to ensure that the arm is completely locked, try to push it out of the tray by gliding the Flex Arm's C1 connector in the opposite direction to the one used to glide it in. If the Flex Arm comes out, repeat steps 1-3 again and make sure that the C1 and T1 connectors are perfectly aligned prior to tightening the screw.

### 3. Mounting a Flash or Light on the Flex Arm

- Remove the screw from the Y-S Connector at the bottom of the flash or light by unscrewing it all the way out.
- Position the flash/light on top of the Flex Arm so that the Y-S Mount on top of the arm is aligned with the Y-S Connector at the bottom of the flash/light (image #3 on the following page).

- c. Install the screw all the way through the flash or light and arm. Tighten it enough to keep the flash or light within a fixed position (image #4).

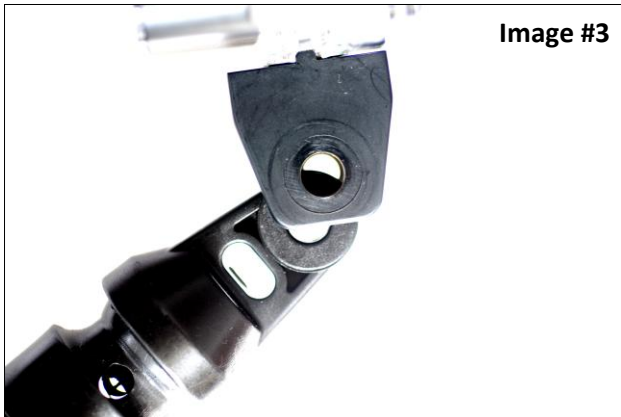

#### 4. Fantasea Products Consumer Limited Warranty

“Fantasea” warrants this Fantasea Line branded product against defects in materials and workmanship under reasonable use for a period of ONE (1) YEAR, (two years, where required by law as determined by the origin of the authorized dealer). This warranty is effective from the date of retail purchase from Fantasea or an authorized Fantasea dealer, by the original end-user purchaser (“Warranty Period”). This warranty does not cover any commercial use of the product. If a product defect arises and a valid claim is received within the Warranty Period, at its option, Fantasea, or its authorized service facilities will either (1) repair the product defect at no charge, (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product. The warranty will not extend beyond the original warranty period.

Your Fantasea Product should be registered within 30 days of purchase. You must keep the proof of purchase which indicates the date on which the purchase was made; as you may be required to show proof of purchase if you need warranty service. The following conditions apply: 1. This warranty extends to the original purchaser only. It is not assignable or transferable. 2. The warranty does not cover damage resulting from misuse, abuse, negligence, or accidents. Proper maintenance of the Product is the responsibility of the owner. 3. The warranty does not cover damage directly or indirectly resulting from the use of unauthorized replacement parts or service performed by unauthorized facilities. 4. This warranty does not cover any damage to any other product used in conjunction with the Fantasea product, including cameras and lenses, and resulting from any defect in the product materials or workmanship. 5. The cost of sending the product back to Fantasea or its authorized service facilities is the responsibility of the customer. 6. The warranty does not cover any incidental damages resulting from any defects in the product. This expressly includes any travel reimbursements or any other costs associated with the purchaser’s optional use of the product. The conditions of this warranty are expressly in lieu of all other expressed warranties, including the payment of consequential or incidental damages for the breach of any warranty. Please register your product on line at this URL: <http://www.fantasea.com/registration>.

For further information, please contact us at [www.fantasea.com/contact](http://www.fantasea.com/contact)  
or visit our website [www.fantasea.com](http://www.fantasea.com)