

# Fantasea EyeGrabber Canon G Series

## (Cat. No. 4054)

### Instruction Manual

The **EyeGrabber Canon G Series** allows for secure storage of Fantasea accessory lenses and filters when not installed on the housing.

#### Compatible with the Following Lens Accessories:

- BigEye Lens G Series (Cat. No. 5135)
- BigEye Lens S90/S95 (Cat. No. 5139)
- EyeDaptor G Series-F67 (Cat. No. 4701) - with any lens accessory mounted on top of the adaptor
- EyeDaptor S90/S95-F67 (Cat. No. 4710) - with any lens accessory mounted on top of the adaptor
- RedEye Filter G Series (Cat. No. 5201)
- PinkEye Filter G Series (Cat. No. 5303)
- RedEye Filter S90/S95 (Cat. No. 5305)
- PinkEye Filter S90/S95 (Cat. No. 5307)
- SharpEye Lens M67 (Cat. No. 5128) - only when mounted on top of the EyeDaptor G Series-F67 (Cat. No. 4701) or the EyeDaptor S90/S95-F67 (Cat. No. 4710)
- Using the EyeDaptor G9-G10 (Cat. No. 4703) or the EyeDaptor S90/S95-G Series (Cat. No. 4707) with any of the lens accessories mentioned above, still allows mounting these lens accessories on the **EyeGrabber**
- Any of the lens accessories mentioned above can still be mounted on the **EyeGrabber** when color correction inserts are installed inside
- Please note that this **EyeGrabber** is not compatible with the RedEye Filter G7/G9 (Cat. No. 5203)

#### Included in the Kit:



EyeGrabber Canon G Series



T2 Connector



Set of 2 shorter screws

#### Instructions for Use:

##### 1. Assembling the EyeGrabber Lens Holder on a Flex or Ball & Joint Arm

- Please use the utmost care and do not use excessive force when assembling and disassembling the different accessories, in order to not cause any damage to the products.
- It is advisable to mount the **EyeGrabber** on the arm prior to installing the arm on the housing tray or handle.
- Remove the screws from the T2 Connector so that the two parts of the T2 Connector are disconnected. Please note that there are two sets of screws included in the kit. The type of screws compatible with your arm depends on the model of the arm. In general, longer screws are compatible with wider arms, such as Fantasea

Flex arms, while shorter screws are compatible with narrower arms, such as Ball & Joint arms. Choose the proper set of screws for your system and leave the screws installed only inside the front part of the T2 Connector (image #1). Keep the other set of screws in storage for future use, in case you replace the arms used in your system.

- d. If assembling the **EyeGrabber** on a Flex arm, gently rotate the links of the arm so that two sequential holes positioned on the upper half of the arm are aligned in a way that enables inserting screws inside (image #2). If assembling the **EyeGrabber** on a Ball & Joint arm, simply choose two slots on the upper half of the arm which the **EyeGrabber** will be assembled through.

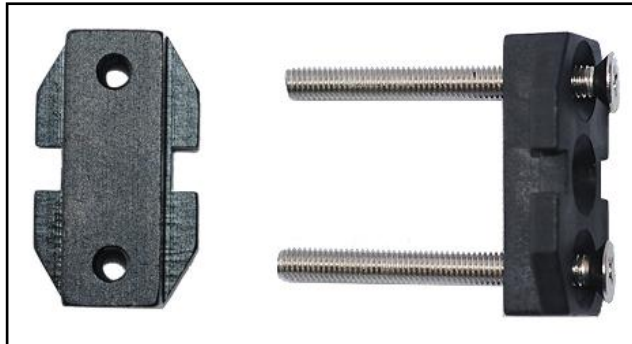


Image #1

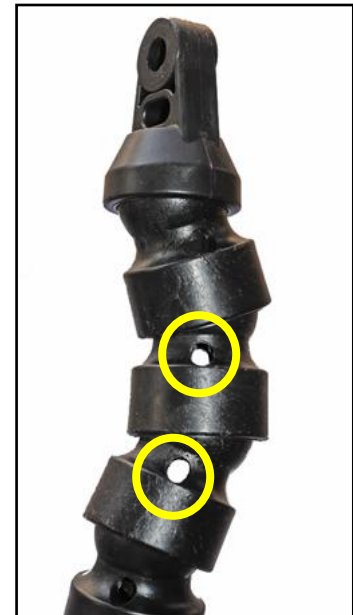


Image #2

- e. Hold the front part of the T2 connector with the two screws installed inside in front of the arm, so that the screws are aligned with the two holes or slots in the arm. Insert the screws through the holes or slots of the arm (image #3). Any resistance encountered might be due to improper alignment of the holes on the Flex arm or due to the resistance of the Nylon support line found inside the Flex arm. In such a case, please repeat step 1c and make sure the support line doesn't get in your way.
- f. Hold the rear part of the T2 Connector on the other side of the arm, so the narrow side of it is facing the arm and aligned with the screws (the flared side with conical holes should be facing outward). Insert the screws into this part of the connector as well and tighten them until both sides of the T2 Connector are stable on the arm (image #4). If the screws are too short to reach the end of the rear connector, replace them with the set of longer screws. If the screws are too long and stick out from the back of the connector, replace them with the set of shorter screws.



Image #3



Image #4

- g. Hold the lens holder against one of the sides of the T2 Connector attached to the arm, so that the lens holder is facing out of the arm and the lens holder's connector is aligned with the T2 Connector. Make sure that you attach the lens holder on the T2 Connector that faces outward from the housing, so you will have more space to mount the lens on the **EyeGrabber**. Slide the lens holder on the T2 Connector and tighten the screw on the lens holder in order to fix its position (image #5). It is important to ensure that the lens holder connector and the T2 Connector are perfectly aligned prior to tightening the screw, or else the lens holder cannot be stabilized on the arm.
- h. Install the snap cord of the accessory lens on the arm. If you had the snap cord attached to the housing before, remove it and install it on the arm instead, so the accessory lens can be secured when mounted both on the housing lens port and the **EyeGrabber**.
- i. Mount the arm, with the **EyeGrabber** installed, on your housing tray or handle.



## 2. Installing and Removing Lens Accessories from the EyeGrabber

- a. Installing and removing lens accessories from the **EyeGrabber** during the dive is the same as when installing and removing from the housing lens port. In order to install the lens accessory on the **EyeGrabber**, first hold it in your hand so it is aligned with the **EyeGrabber** (image #6). Place the lens over the **EyeGrabber** and follow by securing the four bungee cords to the slots featured at the back of the **EyeGrabber** diagonally (image #7). **Please note that the lanyards are essential in order to keep the lens accessory in place.** Make sure that the accessory lens is properly mounted on the **EyeGrabber** by gently trying to pull it out. If properly installed, the lens should not easily come off the **EyeGrabber**.
- b. It is recommended not to detach the secure line from the accessory lens during the dive, whether if mounted on the arm or on the housing lens port.
- c. In order to remove the accessory lens from the **EyeGrabber**, start by detaching the lens lanyards from the **EyeGrabber** and follow by removing the accessory lens from the **EyeGrabber**.
- d. After the dive, detach the lens accessory from the **EyeGrabber** and rinse all components in fresh water. Dry with a soft clean cloth and store safely.



Image #6



Image #7



### **Fantasea Product Consumer Limited Warranty:**

"Fantasea" warrants this Fantasea Line branded product against defects in materials and workmanship under reasonable use for a period of ONE (1) YEAR, (two years, where required by law as determined by the origin of the authorized dealer). This warranty is effective from the date of retail purchase from Fantasea or an authorized Fantasea dealer, by the original end-user purchaser ("Warranty Period"). This warranty does not cover any commercial use of the product. If a product defect arises and a valid claim is received within the Warranty Period, at its option, Fantasea, or its authorized service facilities will either (1) repair the product defect at no charge, (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product. The warranty will not extend beyond the original warranty period. Your Fantasea Product should be registered within 30 days of purchase. You must keep the proof of purchase which indicates the date on which the purchase was made; as you may be required to show proof of purchase if you need warranty service. The following conditions apply: 1. This warranty extends to the original purchaser only. It is not assignable or transferable. 2. The warranty does not cover damage resulting from misuse, abuse, negligence, or accidents. Proper maintenance of the Product is the responsibility of the owner. 3. The warranty does not cover damage directly or indirectly resulting from the use of unauthorized replacement parts or service performed by unauthorized facilities. 4. This warranty does not cover any damage to any other product used in conjunction with the Fantasea product, including cameras and lenses, and resulting from any defect in the product materials or workmanship. 5. The cost of sending the product back to Fantasea or its authorized service facilities is the responsibility of the customer. 6. The warranty does not cover any incidental damages resulting from any defects in the product. This expressly includes any travel reimbursements or any other costs associated with the purchaser's optional use of the product. The conditions of this warranty are expressly in lieu of all other expressed warranties, including the payment of consequential or incidental damages for the breach of any warranty. Please register your product on line at this URL: <http://www.fantasea.com/registration>.

For further information, please contact us at [www.fantasea.com/contact](http://www.fantasea.com/contact)  
or visit our website [www.fantasea.com](http://www.fantasea.com)