

Fantasea Nano Premium

(Cat. No. 6023p)

Instruction Manual

1. Installing and Removing Batteries

- A. To open the Nano Premium, hold the hand grip firmly in one hand and turn the grey flashlight head counterclockwise until it separates. Pull the grey flashlight head off. Please make sure that the light is pointed in an upward position so the contents do not fall out when opened.
- B. Gently remove the LED head (white component with 5 LED bulbs) by pulling out.
- C. Install or remove the 4 AAA Ni Cad or Alkaline batteries carefully. **Please note that this light should not be used with rechargeable batteries.** Make sure to follow the instructions diagram printed on the interior of the light. Note that there are two sets of two batteries, each set pointing towards a different direction.
- D. Replace the LED head carefully, making sure that the two protrusions on the inside of the battery compartment correspond with the two niches on the LED head. This is the only way it will fit properly.
- E. Carefully place the grey flashlight head over the threads, and tighten evenly in a clockwise fashion. Do not use force and do not allow it to screw down unevenly.
- F. It is recommended to occasionally apply a slight amount of silicone grease to the black O-ring seal found on the flashlight.

2. Turning the Nano Premium On/Off

- A. In order to switch the light on, carefully turn the grey flashlight head counterclockwise just enough for the light to turn on. **Once the light is turned on, do not keep turning the flashlight head counterclockwise, or else the watertight seal of the light will be damaged.**
- B. In order to switch the light back off, turn the grey flashlight head in a clockwise fashion all the way to the end. If you are turning the flashlight head more than half a turn and nothing happens, you are probably turning it the wrong way.
- C. Please note that there is never a need to use force when closing or opening the light or when turning it on and off.

3. Care & Maintenance

- A. After each dive, carefully soak and rinse exterior components in fresh water.
- B. Store the Nano Premium in a protected, dry and shaded area.
- C. Remove batteries when storing the Nano Premium for an extended period of time.

4. Specifications

- Batteries: 4 x AAA batteries
- Burn time: Up to 60 hours per set of batteries
- Bulbs: 5 super bright LED bulbs
- Luminance: 500,000 mcd
- Color: Yellow
- Depth ratio: 30 meters/100 feet

5. Fantasea Products Consumer Limited Warranty

“Fantasea” warrants this Fantasea Line branded product against defects in materials and workmanship under reasonable use for a period of ONE (1) YEAR, (two years, where required by law as determined by the origin of the authorized dealer). This warranty is effective from the date of retail purchase from Fantasea or an authorized Fantasea dealer, by the original end-user purchaser (“Warranty Period”). This warranty does not cover any commercial use of the product. If a product defect arises and a valid claim is received within the Warranty Period, at its option, Fantasea, or its authorized service facilities will either (1) repair the product defect at no charge, (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product. The warranty will not extend beyond the original warranty period.

Your Fantasea Product should be registered within 30 days of purchase. You must keep the proof of purchase which indicates the date on which the purchase was made; as you may be required to show proof of purchase if you need warranty service.

The following conditions apply:

1. This warranty extends to the original purchaser only. It is not assignable or transferable.
2. The warranty does not cover damage resulting from misuse, abuse, negligence, or accidents. Proper maintenance of the Product is the responsibility of the owner.
3. The warranty does not cover damage directly or indirectly resulting from the use of unauthorized replacement parts or service performed by unauthorized facilities.
4. This warranty does not cover any damage to any other product used in conjunction with the Fantasea product, including cameras and lenses, and resulting from any defect in the product materials or workmanship.
5. The cost of sending the product back to Fantasea or its authorized service facilities is the responsibility of the customer.
6. The warranty does not cover any incidental damages resulting from any defects in the product. This expressly includes any travel reimbursements or any other costs associated with the purchaser’s optional use of the product.

The conditions of this warranty are expressly in lieu of all other expressed warranties, including the payment of consequential or incidental damages for the breach of any warranty. Please register your product on line at this URL: <http://www.fantasea.com/registration>.

For further information, please contact us at www.fantasea.com/contact
or visit our website www.fantasea.com