



# INSTRUCTIONS

## HARLEY-DAVIDSON® NEON SIGN

**Please read the following instructions carefully.**  
**This product is EXTREMELY FRAGILE – please handle with care.**

### INSPECTION PROCEDURES:

This carton contains your neon sign. Do not discard the carton until the neon has been fully inspected. This neon sign has been tested at the factory before shipping. Exercise care when removing shipping materials.

**Inspecting the unit** - Does the unit have any visible damage? Is there any broken or cracked glass? If the answer is no, please proceed to testing the unit. If the answer is yes; please contact customer service at [BrandedProducts.com](http://BrandedProducts.com).

**Testing the unit** – Plug the neon sign into a standard 120V/60Hz electrical outlet. If the unit illuminates, please unplug and prepare to hang it. If it does not illuminate, please check the following:

- Check the outlet for power.
- Turn switch on cord on/off.

If the unit illuminates but the neon tube flickers, turn the unit off, wait five minutes and turn it back on. If it still flickers, leave the unit on for 24 hours. *(Sometimes the internal gas needs time to distribute properly.)*

Should the unit not function properly after leaving it on for 24 hours contact customer service at [BrandedProducts.com](http://BrandedProducts.com) within seven days of signed receipt.

### HANGING YOUR NEON SIGN:

1. Disconnect the unit when hanging.
2. Measure the space between the top center of each keyhole opening on the hanging bracket.
3. Secure two screws to the wall; spacing them to match the measurement between the keyholes of the hanging bracket.  
To safely hang the neon wall art it is necessary to use wall anchors or toggle bolts.
4. Be sure the head of the screw is  $\frac{1}{4}$  inch from the wall.
5. Align the keyhole openings on the hanging bracket with the secure screws and hang.
6. Plug the unit into a properly grounded 120V/60Hz electrical outlet. Turn switch on cord to turn your neon sign on.
7. Step back and enjoy!

### CLEANING:

Disconnect the unit from the power source before cleaning. Carefully wipe surface with a soft damp cloth to remove dust. Wipe off any moisture immediately. Avoid excessive rubbing. Do not use abrasives, solvents, or cleaning agents.

### WARNING:

- Keep out of reach of children.
- Do not touch or handle while the unit is plugged in.
- Misuse of this product could result in injury or death.
- Always disconnect power before handling.
- Do not install this unit outdoors or near wet areas.
- Do not disconnect or disable the grounding means.
- Do not connect this unit to an extension cord.
- Do not operate this unit while unattended.
- Do not operate when any portion of the unit does not light.
- NEVER ATTEMPT TO REPAIR NEON UNITS!

### WARRANTY:

Free replacement of any part that fails within 90 days from date of purchase, excluding shipping costs. Void if damaged by misuse, accidents, alterations, failure to follow instructions, fire, flood, and acts of God.

If you have any questions or comments. Please contact us at:

**[BrandedProducts.com](http://BrandedProducts.com)**



Ace Product Management Group, Inc. Milwaukee, WI U.S.A.  
Manufactured under license from Harley-Davidson Motor Co.  
© 2011 All Rights Reserved.

Ace Product Management Group, Inc.  
Milwaukee, WI U.S.A.