CD/DVD Tower Assembly Instructions

STEP 1: Place tower upside down on a smooth clean surface.

STEP 2: Place swivel base onto tower.

STEP 3: Using the access hole, align holes of swivel base to the pre drill holes located on the bottom of the tower.

STEP 4: Secure the base in place through the access hole using the four screws provided.

STEP 5: Turn your tower right side up and enjoy!

WARRANTY:

Free replacement of any part that fails within one year from day of manufacture, excluding shipping costs. Void if damaged by misuse, accidents, alterations, failure to follow instructions, fire, flood, and acts of God.

If you have any questions or comments, please contact your retailer.

Ace Product Management Group, Inc. www.brandedproducts.com



