

JACK DANIEL'S

Tennessee Traditions



JACK DANIEL'S® BEVERAGE CHILLER

OWNERS MANUAL

Ace
PRODUCT MANAGEMENT GROUP, INC.
MILWAUKEE, WISCONSIN U.S.A.
WWW.TENNESSEE-TRADITIONS.COM



JACK DANIEL'S and OLD NO.7 are registered trademarks used under license to Ace Product Management Group, Inc. © 2004 Jack Daniel's. All Rights Reserved.

JACK DANIEL'S® BEVERAGE CHILLER

Thank you for buying this Jack Daniel's Beverage Chiller. It has been designed and manufactured for many years of trouble-free service. Operation is very simple, but please take a few minutes to read this booklet. It contains important safety information, and tips to ensure you receive the best possible service from your Jack Daniel's Beverage Chiller.



WARNING: RISK OF ELECTRICAL SHOCK HAZARD

USERS IN NORTH AMERICA This unit must be plugged into a grounded 120V AC circuit. If the power cable is damaged, it must be replaced by a qualified engineer to avoid shock hazard. **DO NOT ATTEMPT TO SERVICE THE ITEM YOURSELF.** Ensure that the appliance is properly grounded. Stop using the appliance immediately if electric shock is felt when touching the chiller.

USERS IN EUROPE This unit must be earthed. If the power cable is damaged, it must be replaced by a qualified engineer to avoid shock hazard. **DO NOT ATTEMPT TO SERVICE THE ITEM YOURSELF.** Ensure that the appliance is properly earthed. Stop using the appliance immediately if electric shock is felt when touching the chiller.

DISPOSAL OF OLD REFRIGERATORS

BE SURE TO MAKE ANY LOCKS UNUSABLE. IF POSSIBLE, REMOVE THE DOOR(S) AND DISCARD SEPARATELY.

WARNING – CHEMICAL HAZARD: DO NOT ALLOW CHILDREN TO PLAY WITH THE OLD APPLIANCE. CONTACT YOUR LOCAL AUTHORITY FOR PROPER DISPOSAL PROCEDURES.

Before disposing of an old appliance, please make sure it is switched off and safe. Unplug the appliance and break any locks in order to avoid children becoming trapped.

Please note: the refrigeration system contains gases and refrigerants which require specialist waste disposal. The valuable materials contained in a refrigerator can be recycled. Contact your local waste disposal depot for proper disposal of an old appliance and contact your local authority or dealer if you have any questions. Please ensure the pipework of your refrigerator is not damaged prior to disposal. You can contribute to environmental awareness by insisting on an appropriate non-polluting method of disposal.

DISPOSAL OF PACKAGING

All the packaging materials with your Jack Daniel's Beverage Chiller.

may be disposed of without danger to the environment. The cardboard may be broken or cut into smaller pieces and given to a waste paper disposal service. The wrapping foil is made of polyethylene. The polyethylene pads and stuffing contain no fluorochloric hydrocarbons. All these valuable materials may be taken to a waste collecting depot and used again after adequate recycling. Consult your local authority for the name and address of the waste paper disposal services nearest to you.

SAFETY INSTRUCTION & WARNINGS

Before switching on your Jack Daniel's® Beverage Chiller, read the information in this User Guide carefully. The User Guide contains important observations relating to the assembly, operation and maintenance of the appliance. Please keep this booklet in a safe place for future reference. If you ever sell your Jack Daniel's Beverage Chiller, hand this User Guide to the new owner. The manufacturer does not accept responsibility for any damages that may arise due to non-observation of these instructions.

- Do not use damaged appliances. If you are in any doubt, consult the supplier.
- Connection and installation of your Jack Daniel's Beverage Chiller are to be carried out in strict compliance with the relative instructions in this User Guide.
- For safety, the appliance must be properly earthed in accordance with specifications.
- Always remember to unplug the appliance before cleaning. Never unplug your refrigerator by pulling on the power cable. Always grip plug firmly and pull straight out from the socket.
- All electrical repairs must be carried out by qualified engineers. Inadequate repairs may be dangerous.
- **DANGER OF FERMENTATION:** Keep alcoholic beverages in airtight bottles or containers and always store in an upright position.
- Do not damage any parts of the appliance which carry refrigerant by piercing, perforating, crushing, twisting or scraping. If the refrigerant comes into contact with the eyes, it may cause serious eye injury.
- Do not obstruct or cover the ventilation aperture.
- Do not allow children to play with your Jack Daniel's Beverage Chiller, or to sit on it or hang onto the door.



SPECIFICATIONS

- This appliance is designed as a chiller for drinks and other small items, **NOT** food.
- It is intended strictly for domestic use.
- The refrigerating circuit is leak-proof.

BEFORE USING FOR THE FIRST TIME


- The appliance may be placed with its rear panel directly against the wall.
For good circulation, the vent at the back of the unit must not be blocked. Your Jack Daniel's® Beverage Chiller should be placed on flat and firm surface for quieter operation.
- Do not expose the appliance to direct sunlight or a heat source such as ovens, radiators, heaters, etc.
- Do not under any circumstances place heated beverages or food in your Jack Daniel's Beverage Chiller.
- Do not open the door more often than necessary to lessen the escape of cold air.
- For better air circulation, do not overfill your Jack Daniel's Beverage Chiller.
- Adjust the temperature regulator according to the amount of product and the ambient temperature.

BASIC OPERATION

Your Jack Daniel's Beverage Chiller must stand on an even surface. If the appliance is to be placed on carpet, support it with a wooden board underneath. Be aware that placing the appliance on carpet may mean that heat from the compressor may cause the carpet to fade.

TO OPERATE

1. Clean the inner compartment.
2. Plug in your Jack Daniel's Beverage Chiller.
3. The first time you turn the unit on, set the temperature control located on the back, left side of the unit to the max. position "5".
4. After 20 minutes, adjust the temperature control setting to "3". This setting should be correct for home or office use.
5. To turn your Beverage Chiller off, turn the temperature control to "0."

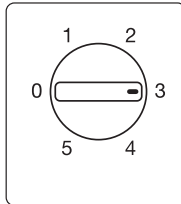

- NOTE:**
- Turning the temperature control to "0" stops the cooling cycle but does not shut off power to the unit.
 - If the unit is unplugged, power lost, or turned off you must wait 3 to 5 minutes before restarting. If you attempt to restart the unit before this delay, the unit will not start.

TIPS FOR REFRIGERATION

Adjust the internal temperature according to the amount of product and the ambient temperature.

Winter (5-10°C/41-50°F) — Setting 1-2

Spring and Autumn (10-15°C/50-59°F) — Setting 2-4

Summer (15-25°C/59-77°F) — Setting 4-5

The inner temperature varies in different parts of the chiller. The back of the chiller is coldest.

WARNING

If temperature selector is set to too low a setting, drinks become frozen. In extreme circumstances, glass bottles may even break. Always exercise caution when setting temperature.



- Do not store frozen foods or ice cream in the chiller!
- Do not place heavy items (more than 20kg/44lbs) on top of the chiller.
- Do not place any items on top of the chiller which may fall off when the door is opened.
- After the appliance has been unplugged, leave for three minutes before plugging it in again.

WHEN NOT IN USE

If the unit is not being used for long periods:

- Unplug your Jack Daniel's® Beverage Chiller.
- Clean and dry the inside of the appliance. Leave the door slightly open to allow it to dry completely.
- A chiller which is unused without being cleaned may start to smell musty or develop mildew.

DEFROSTING AND CLEANING

DEFROSTING

- The surface of the evaporator ices up when the chiller is working. This is an entirely normal part of operation. If the frost layer is more than 3mm/1/8" thick, the chiller must be defrosted and cleaned to avoid unnecessary energy consumption and inefficient operation.
1. Remove all items inside.
 2. Set the temperature selector to '0' position.
 3. After defrosting, reset the temperature selector to original position.

CLEANING

1. Unplug your Jack Daniel's Beverage Chiller.
 2. Wash the inner compartment with warm water and neutral detergent.
 3. Dry all surfaces thoroughly.
- Note: Do not use abrasive cleaners!
To ensure efficient operation the back and bottom of the chiller should be cleaned thoroughly.
Use mild soapy water to clean the door seal.

MOVING YOUR JACK DANIEL'S® BEVERAGE CHILLER

- Unplug the appliance
 - Remove all items inside
- Note: Never hold the appliance by the door.

POWER FAILURE

- If a power cut occurs, do not open the door more often than necessary in order to conserve cold air.

TROUBLESHOOTING

Before returning your Jack Daniel's Beverage Chiller to the store, check the following points: you may be able to solve any problem yourself.

<u>PROBLEM</u>	<u>SOLUTION</u>
<i>NOT COOLING</i>	<ul style="list-style-type: none"> • Check power cable is connected and fuse is intact. • Wrong temperature selected. Adjust setting on controller to position shown (see page 4) • Chiller is overfilled. • Appliance exposed to direct sunlight or a heat source. • Door is opened too often.
<i>UNUSUAL NOISES OR NOISY OPERATION</i>	<ul style="list-style-type: none"> • Appliance is not on a level, firm surface or may be touching other items. • Note: It is normal to hear refrigerant flowing as the compressor stops and starts.
<i>OUTER SURFACES ARE WET</i>	<ul style="list-style-type: none"> • Water source or leak too near the appliance – dry surfaces thoroughly and move the appliance.
<i>INNER SURFACES ARE WET</i>	<ul style="list-style-type: none"> • Door opened too often or kept open too often.

Warranty

This Jack Daniel's® Beverage Chiller is guaranteed to be free from defects in parts and manufacture for 12 months from date of purchase, provided that the unit is used under the normal operating conditions shown within the manual. Your attention is drawn to the following:

- This Jack Daniel's Beverage Chiller is designed for storing drinks. APMGI will not accept any liability for damage or injury caused by improper use.
- APMGI will not be liable for any damage caused by moving the appliance; improper power supply; defective wiring or fuses; accident, alteration, abuse or misuse of the appliance; abnormal operating conditions; commercial or industrial use; fire; water damage; Acts of God; or customer misuse.
- This warranty is void if service on the unit is performed by any person other than an approved technician, or if the appliance is used for commercial purposes.

This warranty is available only to the original purchaser and is not transferable. Your normal consumer rights are not affected.

If service is required, DO NOT ATTEMPT TO REPAIR UNIT YOURSELF. Please return unit to store. Proof of purchase will be required for any warranty claims. You must retain your original receipt. If service under warranty is required, you will be required to produce this. Please also retain the original packaging should the unit need to be returned.

Please note: As part of our policy of continuous product improvement, APMGI reserves the right to amend specifications without notice.

**ACE PRODUCT MANAGEMENT GROUP, INC.
9053 N. DEERBROOK TRAIL
MILWAUKEE, WI 53223**

**TEL: 414-365-5400
800-294-9007**

FAX: 414-365-5410

WWW.TENNESSEE-TRADITIONS.COM