Did you know.....

- A network connection is only necessary when loading CDs? If you don't have a broadband connection, Wireless Bridge and Dial-Up Adapter kits are available for use with your Music Center. See your manual for details.
- Instead of using the onscreen touch keypads, you can plug any USB keyboard into the port next to the blue power button. Use it to easily and comfortably enter information.
- You can burn a CD of your favorite playlist? Simply select a playlist, touch the down-arrow symbol next to "Playlists".
- You can "sample" a track by double-tapping on the tract title?
- The Music Center can automatically generate a playlist based on theme, tone, style, even mood. From the VIEW MODE MENU, simply select "Tapestry" and a range of themes and styles, based on your music library, appears. Allow Tapestry to guide you through the settings, then let your Music Center compile a unique and pleasantly surprising playlist!

This sheet is intended to get you started for enjoying your Rock-Ola Music Center. Please refer to your Music Center manual for complete instructions, as well as service and parts information.

Visit the Rock-Ola website for product news and updates.





- USB Port
- Power Button
- CD-RW Drive
- 4 Remote Receiver
- 6 Audio Input
- 6 Output Connections
 (Refer to CD Manual)
- Zone Toggle Switch
- 8 Speaker Connections
- Q LAN
- 10 Main Power Switch
- Power Inlet





2335 208th Street • Torrance, CA 90501 • Phone (310) 328-1306 • Fax (310) 328-3736 **www.rock-ola.com**

Rock-Ola and "Auto Magic Touch Screen" are registered trademarks of the Rock-Ola Manufacturing Corp.

Qsonix™ is a registered trademark of Qsonix, Inc.

All specifics are subject to change without notice.

ROCK-OLA® MUSIC CENTER

QUICK START GUIDE

Version 2.4 and up

STEP 1

You will need:

- 1. A broadband Internet Connection*
- 2. Power
- 3. CDs to load onto the hard drive
- 4. Optional: additional speakers

Get Connected

- 1. Connect your Ethernet cable to your modem or router.
- 2. Connect the other end of the Ethernet cable to the network port on your Music Center (see diagram for location on your model).
- 3. Connect power cord to power source.
- Turn the main system power switch to the ON position.
- **5.** When the amplifier/cabinet power supply powers up, press the **blue power button**.
- 6. Wait a few minutes while the core and lights power up and the operating system and application software load. When this is done, the main screen appears.
- 7. Follow the "First Time Start-up Wizard" on the Welcome screen.
- **8.** Complete the series of 5 set-up screens. The system will do the rest.
- 9. When you reach the "Connectivity-Success" screen, you've made it. Tap the "Done" button on the screen. You are now ready to listen to and load some music!

Loading CDs

- 1. Gather at least 4 or 5 CDs to load.
- 2. Confirm that your internet connection is available.
- **3.** Open the disk drive and insert a CD in the tray. Close the drive and wait until the disk information is displayed on the screen.
- 4. Confirm that the CD information shown matches the CD in the tray. If it's a match, select "Begin Loading." The system will take care of the rest.
- If CD information is not found, follow onscreen instructions for using the CD Loading Wizard. (See User's Manual for details.)

STEP 2

Start Enjoying Your Music Center Now

Play Music

- 1. Select an album.
- 2. Select a track.
- **3.** Drag the highlighted track and drop into the NOW PLAYING area of the screen.
- You can drag the whole album into the NOW PLAYING area, or
- **5.** Touch the drop-down menu arrow and select PLAY NOW.

Build a Playlist

- 1. Select the tracks or albums and drag them into the NOW PLAYING area of the screen.
- 2. Tap the drop-down menu arrow next to NOW PLAYING and select the "Save All to New Playlist" option.
- **3.** Follow the onscreen prompts to save your playlist for future enjoyment.

Burn a Custom CD

- 1. From the NOW PLAYING list, tap the drop-down menu arrow and select "Burn to CD".
- 2. From the PLAYLISTS group, select a playlist, tap the drop-down menu arrow and select "Burn to CD".
- 3. From the ALBUM VIEW, select an album, tap the drop-down menu arrow and select "Burn to CD".

MP3 Player on the Music Center

- 1. Connect your iPod® or other MP3 player to the red and white audio input ports.
- 2. Listen to your MP3 tracks on your Music Center system. (Note: For direct MP3 play, the Music Center must not have tracks playing in the NOW PLAYING queue.)

USB Port

The USB Port allows connection of:

- 1. USB flash or hard drive connection for direct music import.
- 2. USB keyboard for data input.

*Cable or DSL only, not Satellite. P/N 61651-02

AUTO-MAGIC TOUCH SCREEN® GUIDE AT-A-GLANCE

