BOX ALARM CLOCK

Manufacturer of Fine Kautical & Weather Instruments

Weems & Plath[®]

OPERATING INSTRUCTIONS

- 1. **Insert battery:** Remove back plate on the rear of the clock by twisting two brass knobs counter clockwise. Insert premium AA battery as indicated on diagram in battery housing. Replace back plate and twist knobs clockwise until tight.
- 2. Set time: Gently pull out the black set knob on the back of the case and turn in either direction until hands are in correct position. Push knob in again when time is set.
- 3. **To Set Alarm:** Press the black set knob firmly and twist counter clockwise. This will move the gold alarm hand. Set to desired alarm time. Gently slide the black alarm switch to the "ON" position. The alarm will sound at the selected time.
- 4. **To Silence Alarm:** Gently slide alarm switch to "OFF" position.
- 5. If clock stops, it is most likely due to a dead battery. Remove the battery immediately as it might leak acid causing damage to the movement which will void warranty.*
- 6. If clock is to be left unattended for long periods of time, the battery must be removed. Otherwise it will die and leak acid causing damage to the movement which will void warranty.*
- * Movement damage caused by battery leakage will void the warranty.

TROUBLE SHOOTING

Clock stopped or is not keeping proper time:

- A. Remove battery and inspect battery contact points, remove corrosion if present. Follow diagram on battery housing to make certain battery is installed properly. Install fresh premium AA battery. Set time.
- B. Remove battery and return for service**
- **When returning for service, package carefully as Weems & Plath® cannot be responsible for damage in transit. Fill out and include the Customer Request Repair Form found on the Customer Service page of the Weems & Plath website (weems-plath.com/pdf/csreturns.pdf) or write a note with your contact information and a description of the problem.

Send to: