

# Installation Instructions

## Rock-Ola® RockStar Credit Card Reader Kit #26677524

This kit contains the parts and instruction to replace the existing card reader with an encrypted swipe card reader.

### Tools Required

#2 Phillips Head Screwdriver

11/32 nut driver

### Parts Included with this Kit

<u>Item #</u>	<u>Part Number</u>	<u>Description</u>	<u>Quantity</u>
1	22325001	Mtg Plate - Credit Card Reader	1
2	34091602	Spacer - Credit Card Reader	1
3	22185303	Card Reader - Swipe	1
4	28277901	Screw - M3	2
5	87843000	Nut, KEPS #8-32 HEX	2
6	22000221	These Instructions	1
7	22207602	Label - Credit Card Reader	1

## Instructions

1. Turn the jukebox power OFF, unplug the Power Cord from the wall, and open the jukebox door.
2. The Credit Card Reader will be installed at this location. See Figure 1.


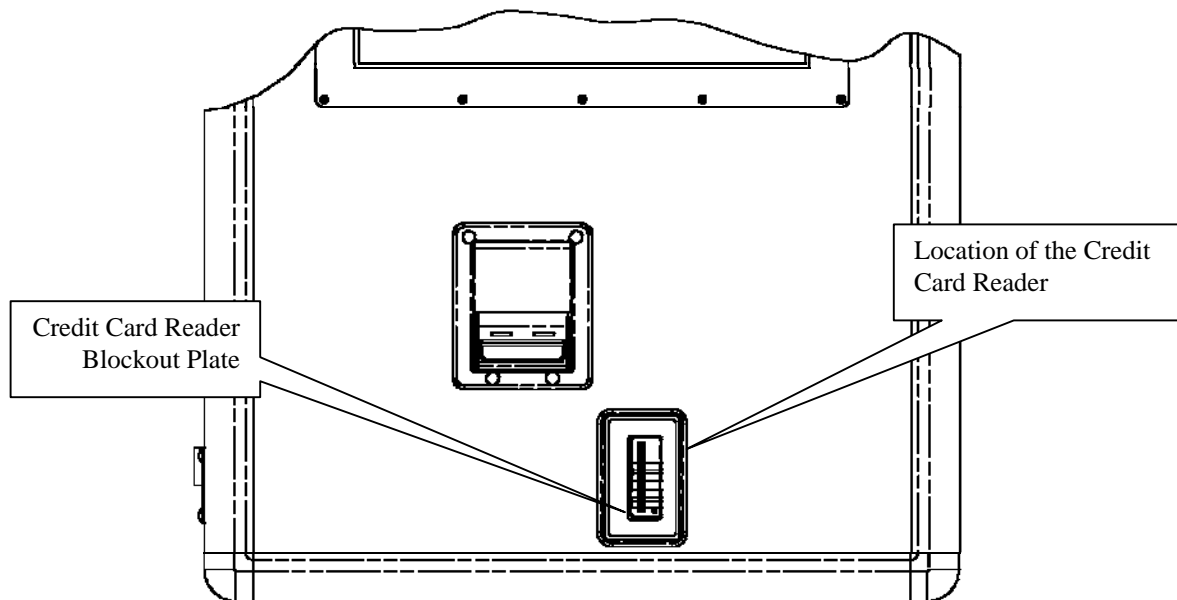


Figure 1

**Remove the existing Credit Card Reader Bezel and Bracket and Mounting Plate. See Figure 2**


- A. Remove the two screws securing the Credit Card Reader and set aside. (Remove the Card Reader. See Figure 2..
- B. Remove the four nuts securing the Credit Card Reader Mounting Plate and Mounting Brackets. Mounting Brackets will be reused. The Mounting Plate will not be reused.

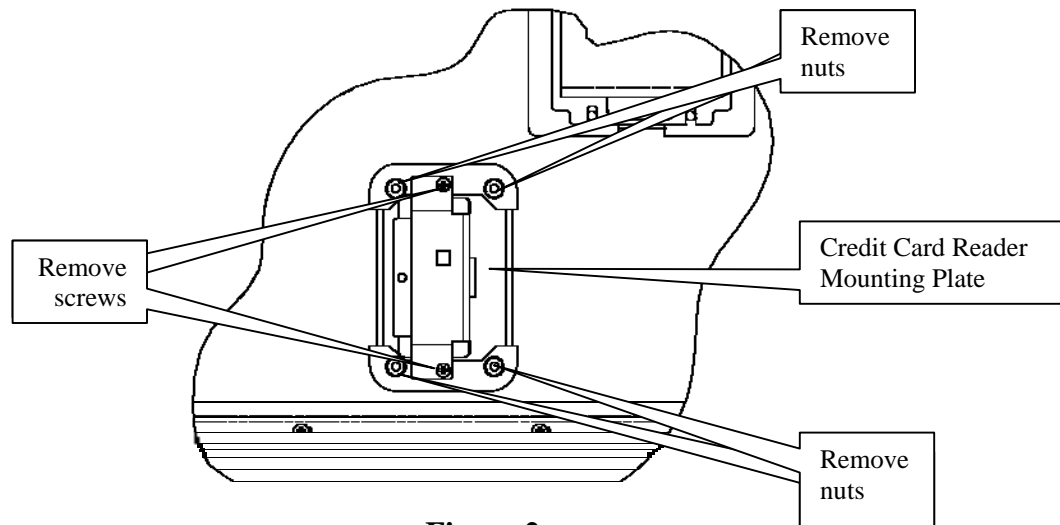

**Figure 2**


- 3. Fasten the Swipe Card Reader (Item #3) to the Credit Card Reader Spacer (Item 2) using the two M3 Screws (Item #4). See Figure 3.

**Note:** Orient the Swipe Card Reader so the USB Cable feeds through the cutout on the Spacer (Item 2). See Figure 3.

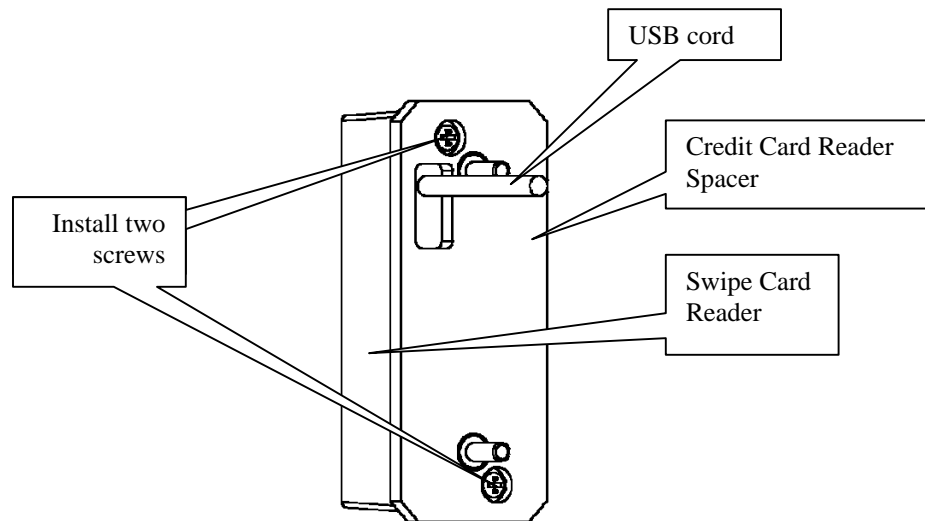

**Figure 3**


4. Install the Credit Card Reader Label (Item #7).
  - A. Install the Credit Card Reader Label on the Mounting Plate aligning the left edge and approximately centered as shown in Figure 4.

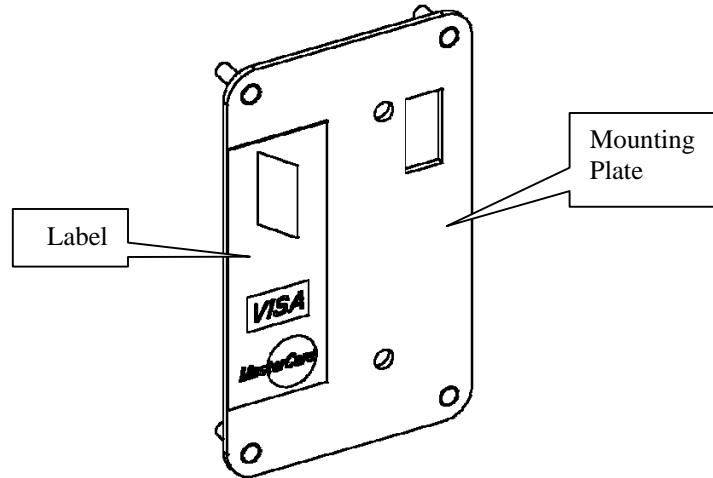

**Figure 4**


5. Install the Bezel, Mounting Plate (Item 1) and the Bracket and nuts as shown in Figure 5.

**Note:** The rectangular cutout on the bracket must be toward the top of the Door.

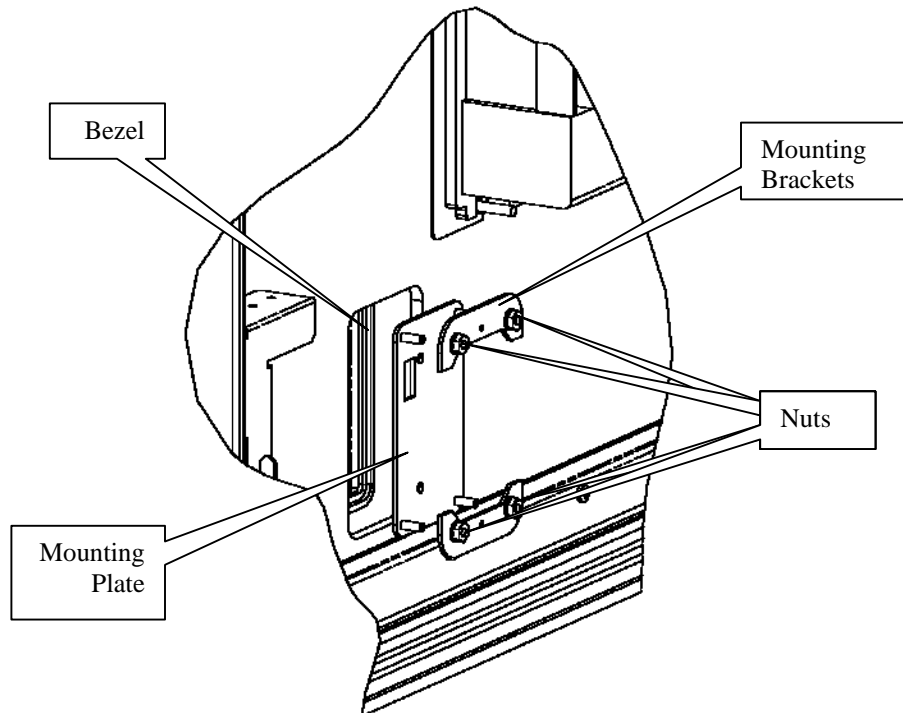


**Figure 5**

6. Install the Credit Card Reader Spacer with the Swipe Card Reader attached.  
(If your RockStar has a serial to USB converter for the old credit card reader, remove the converter board and USB cable. They will no longer be used.)
  - A. From the outside of the Door, feed the USB Cable from the Card Reader/Spacer, through the rectangular cutout on the Mounting Plate. See Figure 6.
  - B. Place the Card Reader/Spacer onto the Mounting Plate and fasten (from the back of the door) using two nuts. See Figure 6.
  - C. The Swipe Card Reader is now installed. See Figure 6.

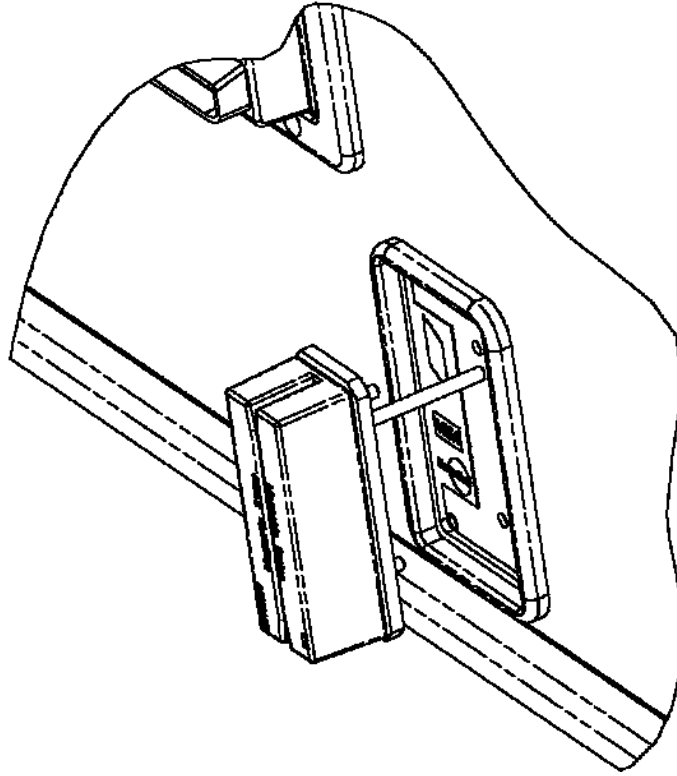

**Figure 6**

7. Route the USB Cable from the Door into the Cabinet through the Cable Clamps and over to the Rowe CPU Assembly. Plug the USB Cable into the USB Jack closest to the rear of the Cabinet (You may need to temporarily remove the Ethernet cable to make the installation easier). See Figure 7.

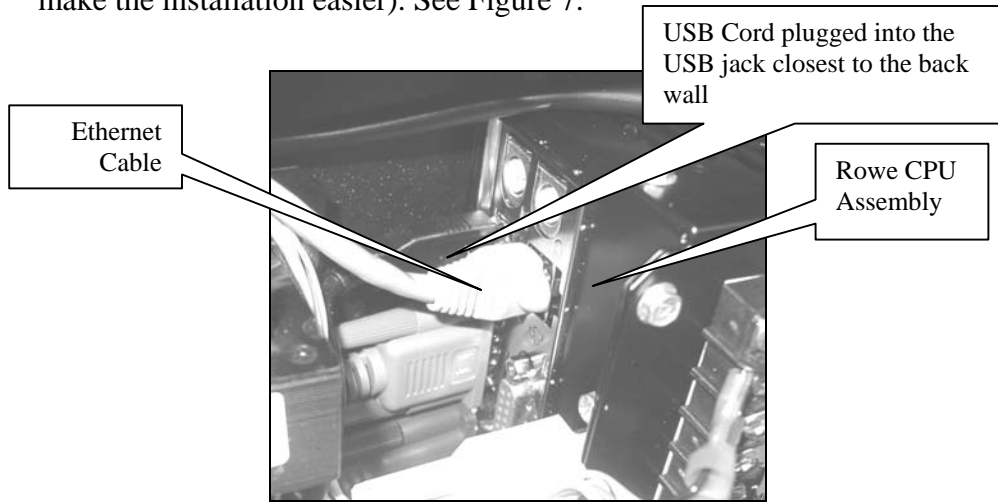

**Figure 7**

8. Power Up and Operational Check

**Note:** The jukebox must have software Version V3.2.1 or higher and have a Broadband connection to the server for credit card acceptance to function.

Power ON the jukebox and wait for the User Interface (Selection Screen) to come up. Swipe a valid credit card through the Card Reader. If the Card Reader is connected properly, the jukebox screen will display a pop-up window as shown here.



**Figure 8**

Touch the Cancel Button to close the window and cancel the credit transaction.

9. Change the Attract Loop to Highlight Credit Card Acceptance

Enter the Service Mode by pushing service on the Rowelink Controller. Touch "Location/System Setup" then touch "Attract Mode". Touch "Default Loop with Credit Card" from the list to select it.

