

Installation Instructions

CREDIT CARD READER - NETSTAR KIT #22185001

Purpose:

This kit is used to install the Credit Card Reader into the Netstar Jukebox.

Tools Required:

1/4" and 5/16" nut drivers

Parts Included in this Kit:

Item No.	Part Number	Description	Qty.
1	40950404	Card Reader Assembly	1
2.	22185101	These Instructions	1

Step by Step Instructions

1. Turn off jukebox power.
2. Open the top door. Refer to *Figure 1* for the following steps:
3. Remove the stiffener bracket being sure to hold the stiffener bracket against the door as you remove the 12 screws securing the stiffener bracket to the door. There are 3 pieces of glass held by the stiffener bracket. Carefully lower the stiffener bracket with the 3 pieces of glass resting on top of the bracket.
4. Remove the piece of glass and the decal from the right side of the stiffener bracket, and install in its place, the above Card Reader Assembly. Make sure the graphics is right side up.
5. Carefully reinstall the stiffener bracket to the door using the screws removed in step 3.
6. Plug the Credit Card Reader Cable into one of the USB connectors on the Computer Core. Route the cable through the cable clamps along the back wall.



7. Installation complete. Turn the power on. After User Interface Screen appears on the monitor test the Credit Card Reader for proper operation.

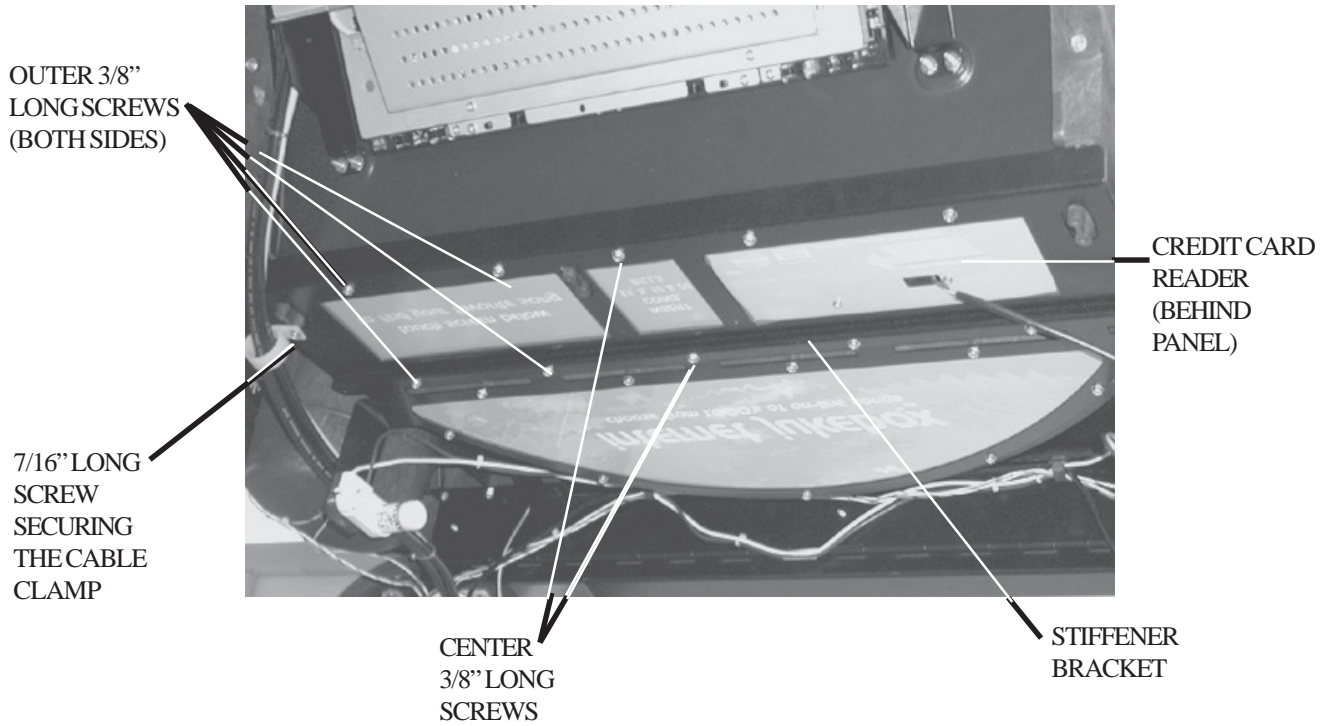


FIGURE 1