

Installation Instructions

Credit Card Reader Kit #26677505 Use with CD100, 100-A or 100-B JUMP™ Kit

Purpose:

This kit contains the parts and instructions to install a swipe card reader to your CD100, 100A or 100B jukebox with a previously installed Jump Kit.

Tools Required:

1/4" Nut Driver, #2 Phillips Head Screwdriver

Parts Included in this Kit:

Part Number	Description	Qty.
22185303	Card Reader	1
40956701	Card Reader Bezel	1
28277902	Screw - M3 x 10mm Phillips Pan Head	2
70800101	Tie Wrap	1
70093102	Cable Clamp (3/16)	1
22000202	These Installation Instructions	1

Step-by-Step Instructions:

1. REMOVE PARTS (see Figure 1):

Insure that the power to the jukebox is turned OFF. Remove the Fluorescent Bulb and the Lower Console Graphics from the door by loosening six #8 screws which fasten the graphics panel retaining bracket. This panel will not be needed with the card reader installed.



Remove Graphics
Panel from this
location

Figure 1



2. ASSEMBLE CARD READER TO BEZEL (see Figure 2)

Route the cable from the card reader through the rectangular opening in the bezel. Fasten the card reader to the bezel using the two M3 X 10mm Phillips screws included with this kit.

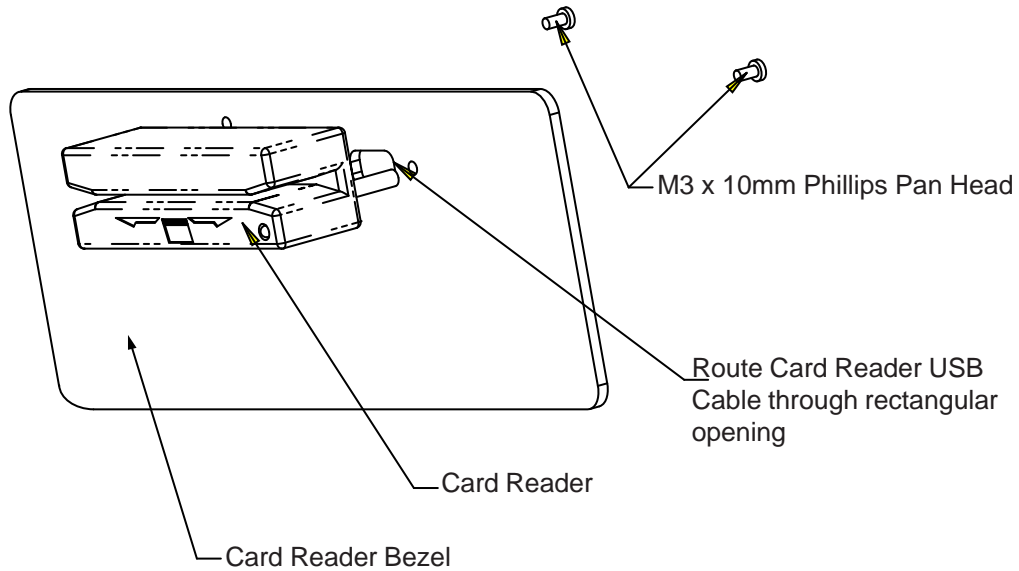


Figure 2

3. ASSEMBLE TO DOOR (see Figure 3):

From the back of the door, insert the card reader and bezel into the space previously occupied by the console graphics panel. Tighten the screws loosened in step 1. Route the USB cable to flatscreen cable and wire tie. Use existing flat screen cable clamps and route toward computer core. Use cable clamp to prevent contact to fluorescent bulb.

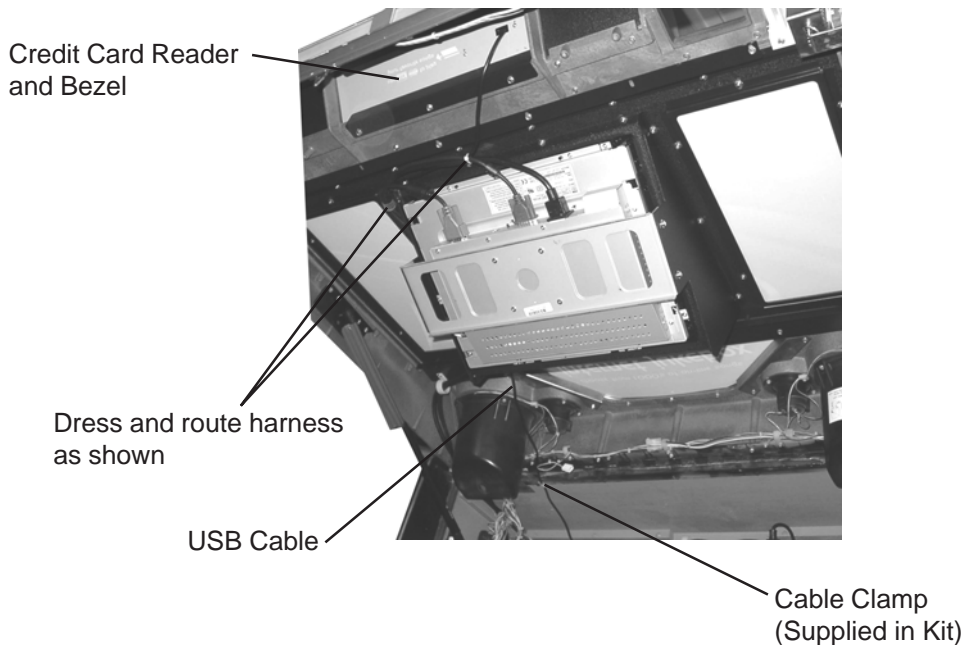


Figure 3

4. CARD READER TO COMPUTER (see Figure 4):

Remove the fluorescent bulb in front of the computer core. Swing the hard drive bay, on the computer core, out for better access to the USB port. Plug the card reader cable into an available USB port on the computer. Dress the card reader cable to prevent snagging on other parts within the jukebox during service. Close the hard drive bay and replace the fluorescent bulb.

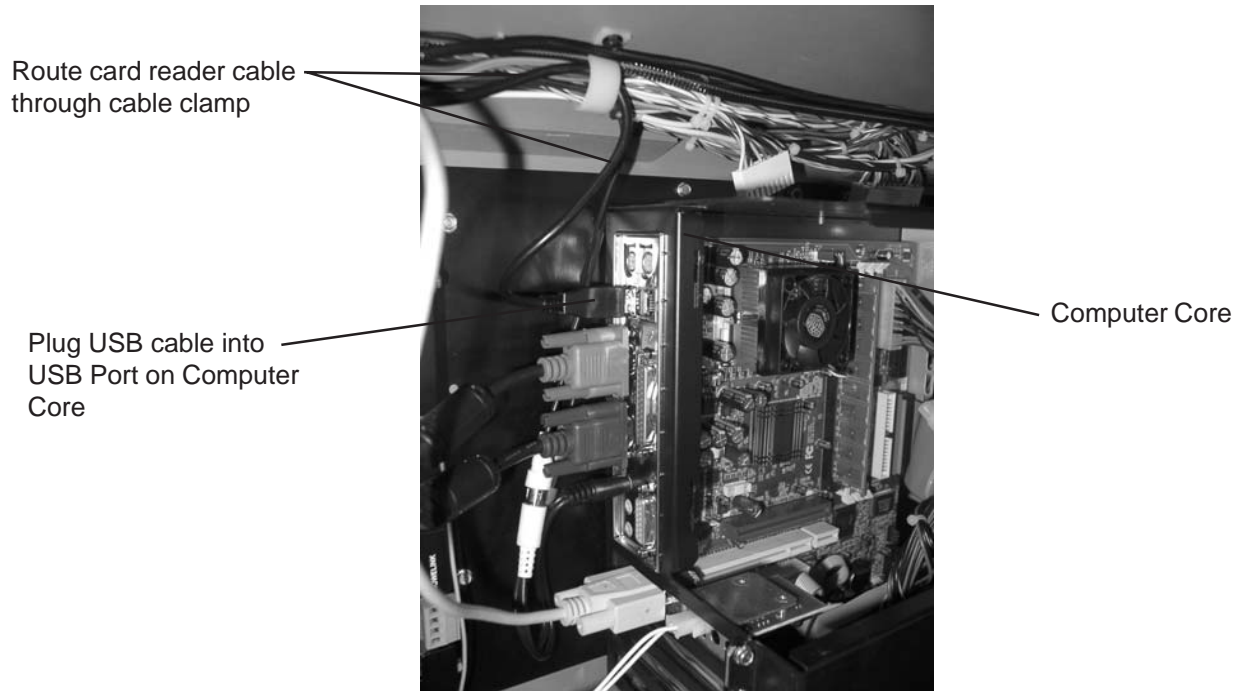


Figure 4

5. POWER UP AND OPERATIONAL CHECK

Note: The jukebox must have software version V2.3.0 or higher and be connected to the server for credit card acceptance to work.

Power on the jukebox and wait for the User Interface (Selection Screen) to come up. Swipe a valid credit card through the card reader. If the card reader is connected properly the jukebox screen will display a pop up window as shown in Figure 5:



Figure 5

Touch the Cancel button to close the window and cancel the credit transaction.

6. CHANGE ATTRACT LOOP TO HIGHLIGHT CREDIT CARD ACCEPTANCE

Enter the Service Mode by pushing the SERVICE button on the Rowelink Controller. Touch "Location/System Setup" then touch "Attract Mode". Touch "Default Loop with Credit Card" from the list to select it.