

Installation Instructions

Credit Card Reader Kit #26677509 Use with Eagle JUMP™ Kits

Purpose:

This kit contains the parts and instructions to install a swipe card reader to your Eagle jukebox with a previously installed Jump Kit.

Tools Required:

1/4" Nut Driver, #2 Phillips Head Screwdriver

Parts Included in this Kit:

Part Number	Description	Qty.
22185303	Card Reader	1
40940503	Card Reader Bezel	1
28277902	Screw - M3 x 10mm Phillips Pan Head	2
22000207	These Installation Instructions	1

Step-by-Step Instructions:

1. REMOVE PARTS (see Figure 1):

Insure that the power to the jukebox is turned OFF. Remove the Right Graphics Panel from the door by loosening four #8 screws which fasten the graphics panel retaining bracket. This graphics panel will not be needed with the card reader installed.

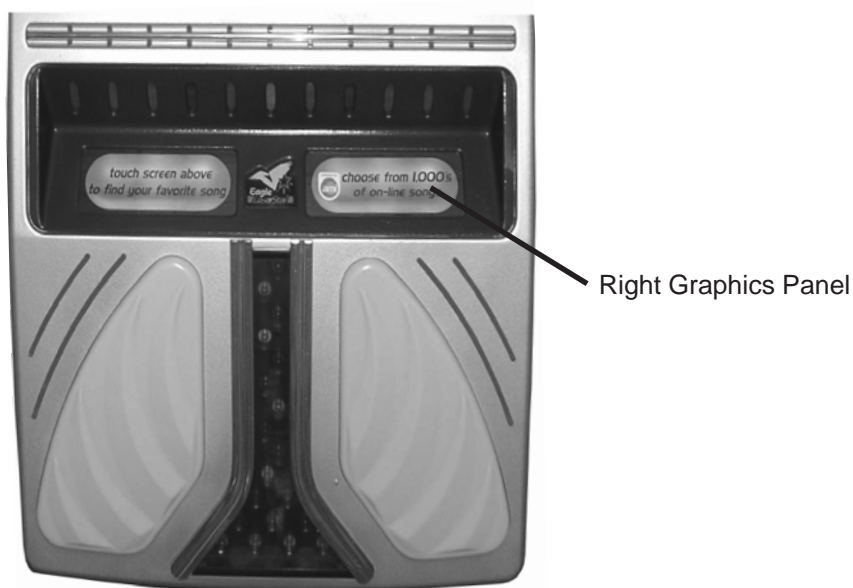


Figure 1



2. ASSEMBLE CARD READER TO BEZEL (see Figure 2)

Route the cable from the card reader through the rectangular opening in the bezel. Fasten the card reader to the bezel using the two M3 X 10mm Phillips screws included with this kit.

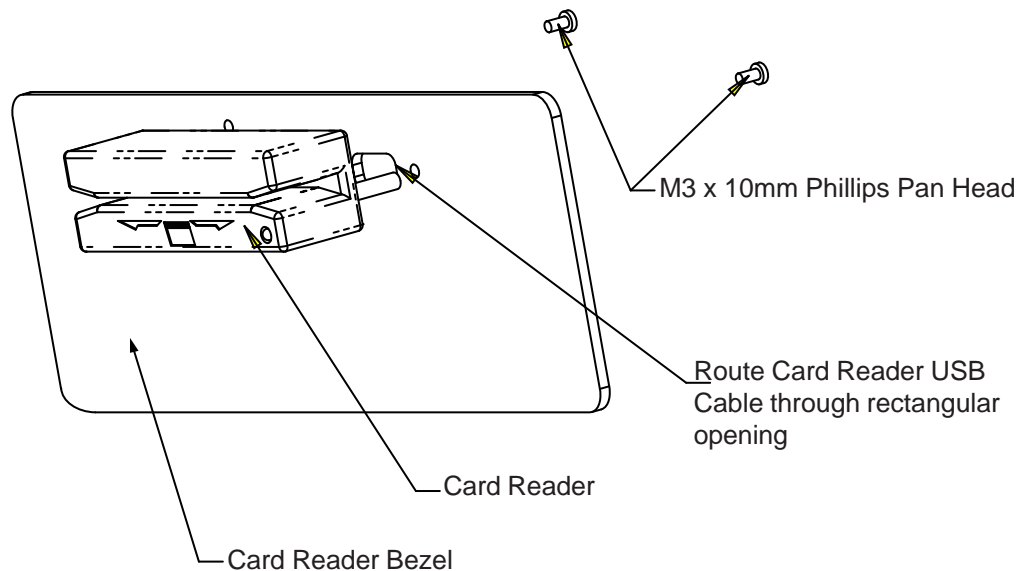


Figure 2

3. ASSEMBLE TO DOOR (see Figure 3):

From the back of the door, insert the card reader and bezel into the space previously occupied by the right graphics panel. Attach ground wire and tighten the screws loosened in step 1. Route the cable up and thru the existing cable clamps on the jukebox door and into the cabinet.

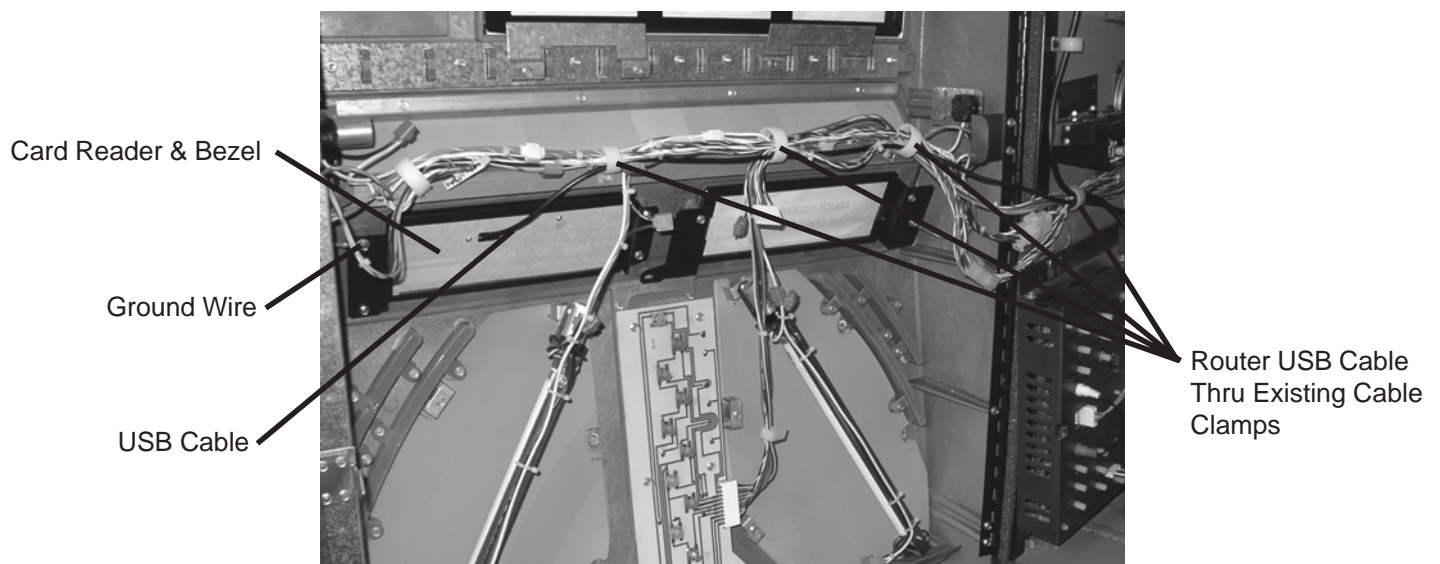


Figure 3

4. CARD READER TO COMPUTER (see Figure 4):

Continue routing the USB cable to the back of the jukebox cabinet, and down into the left harness access hole, then thru the existing cable clamp. Plug the card reader cable into an available USB port on the computer core.

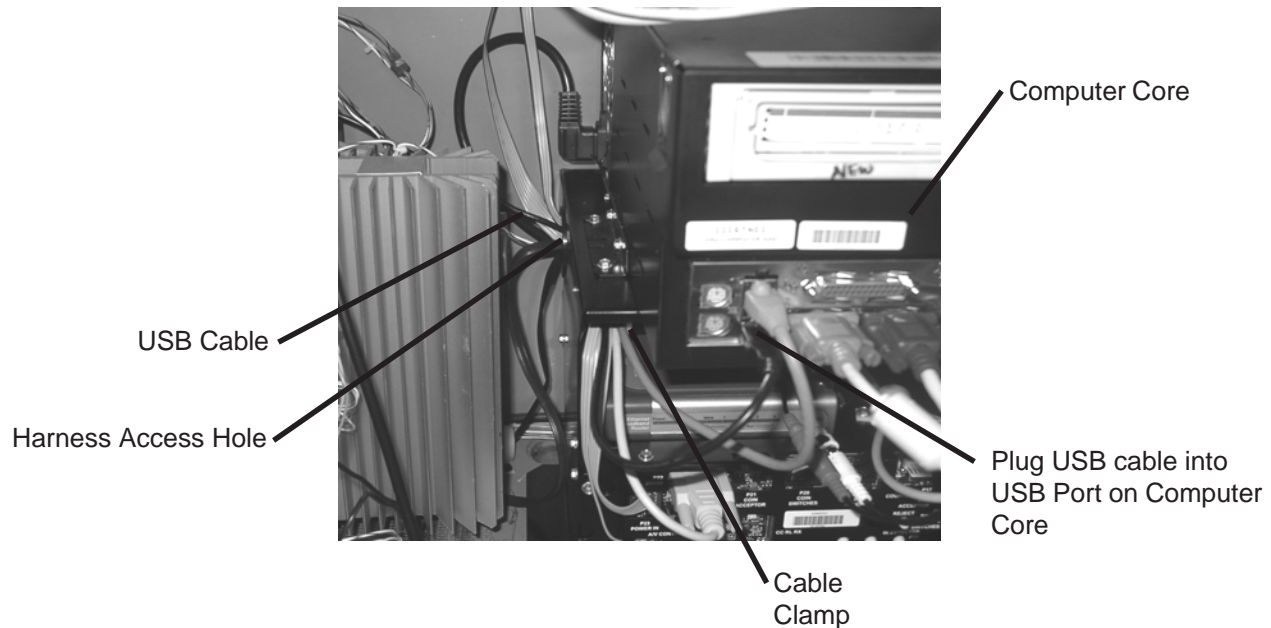


Figure 4

5. POWER UP AND OPERATIONAL CHECK

Note: The jukebox must have software version V2.3.0 or higher and have a broadband connection to the server for credit card acceptance to work.

Power on the jukebox and wait for the User Interface (Selection Screen) to come up. Swipe a valid credit card through the card reader. If the card reader is connected properly the jukebox screen will display a pop up window as shown in Figure 5:



Figure 5

Touch the Cancel button to close the window and cancel the credit transaction.

6. CHANGE ATTRACT LOOP TO HIGHLIGHT CREDIT CARD ACCEPTANCE

Enter the Service Mode by pushing the SERVICE button on the Rowelink Controller. Touch "Location/System Setup" then touch "Attract Mode". Touch "Default Loop with Credit Card" from the list to select it.