

Installation Instructions

Credit Card Reader Kit #26677511

Purpose:

This kit contains the parts and instructions to install a swipe card reader to your CD100G and CD100H jukebox with a previously installed Jump™ Kit.

Tools Required

1/4" Nut Driver, #2 Phillips Head Screwdriver

Parts Included with this Kit

Part Number	Description	Quantity
22185303	Card Reader	1
40940504	Card Reader Bezel	1
28277902	Screw - M3 x 10mm Phillips	2
70093102	Cable Clamp (3/16)	1
22000209	These Installation Instructions	1

Step-by-Step Instructions:

1.REMOVE PARTS (*see Figure 1*):

Turn off all power to the jukebox. Remove the Console Graphics Panel from the door by loosening Five #8 screws on the lower retaining bracket, and remove two #8 screws which fasten the graphics panel retaining bracket. This Graphics panel will not be needed with the card reader installed.



Figure 1



2. ASSEMBLE CARD READER TO BEZEL

Route the cable from the card reader (22185303) through the rectangular opening in the Card Reader Bezel (40940504). Fasten the card reader to the bezel using the two M3 X 10mm Phillips screws (28277902) included with this kit.

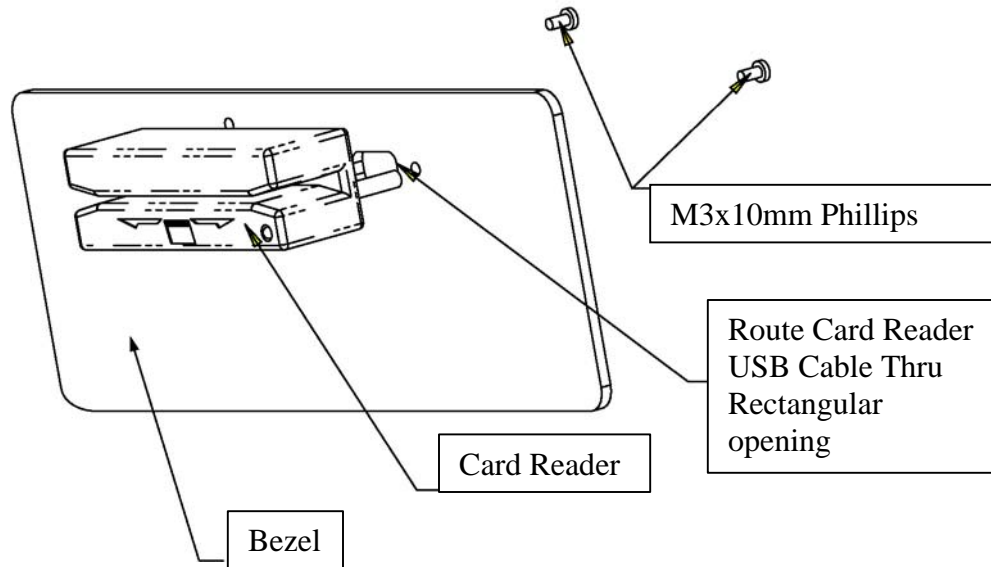


Figure 2

3. ASSEMBLE TO DOOR (see Figure 3):

From the back of the door, insert the card reader and bezel into the space previously occupied by the console graphics panel. Tighten the screws and replace the retaining bracket removed in step 1. Route the USB cable as shown using the cable clamp (70093102) provided in this kit to the left and down toward Computer Core.

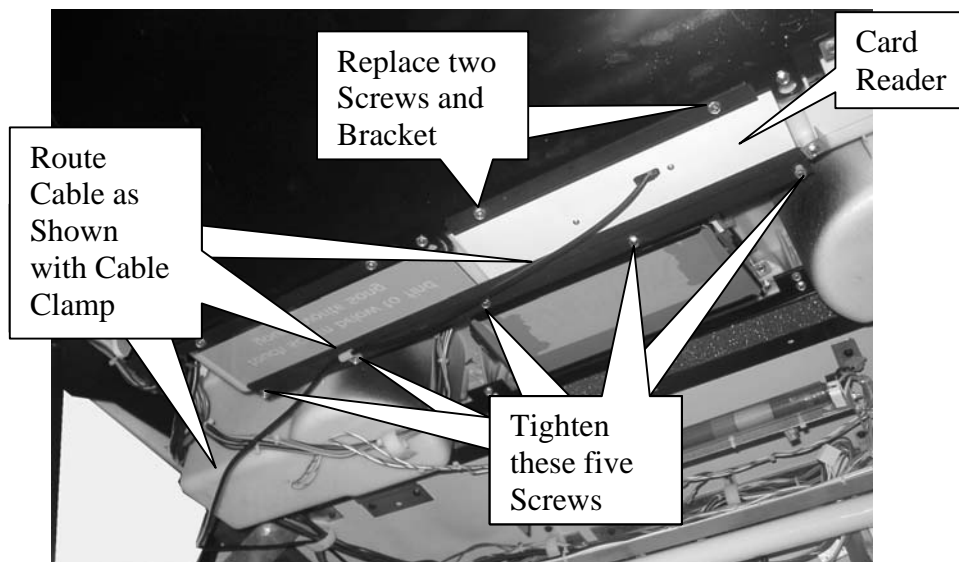


Figure 3



4. CARD READER TO COMPUTER (see Figure 4):

Swing the hard drive bay on the computer core, out for better access to the USB port. Plug the card reader cable into an available USB port on the computer. Dress the card reader cable to prevent snagging on other parts within the jukebox during service. Close the hard drive bay.

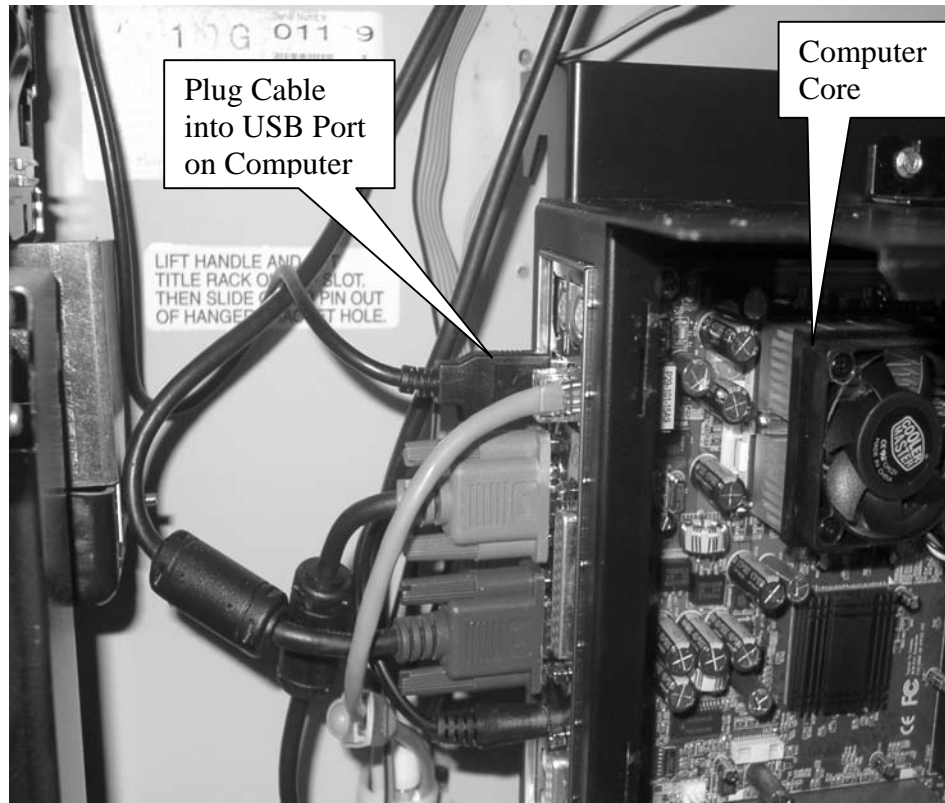


Figure 4

POWER UP AND OPERATIONAL CHECK

Note: The jukebox must have software version V2.3.0 or higher and must have a Broadband connection to the server for credit card acceptance to work.

Power on the jukebox and wait for the User Interface (Selection Screen) to come up. Swipe a valid credit card through the card reader. If the card reader is connected properly the jukebox screen will display a pop up window as shown in Figure 5:





Figure 5

Touch the Cancel button to close the window and cancel the credit transaction.

6. CHANGE ATTRACT LOOP TO HIGHLIGHT CREDIT CARD ACCEPTANCE

Enter the Service Mode by pushing the SERVICE button on the Rowelink Controller. Touch “Location/System Setup” then touch “Attract Mode”. Touch “Default Loop with Credit Card” from the list to select it.

