
Affix Stamp Here

> 162 Clapgate Lane Woodgate Business Park Birmingham B32 3DE United Kingdom

Maypole Stronghold

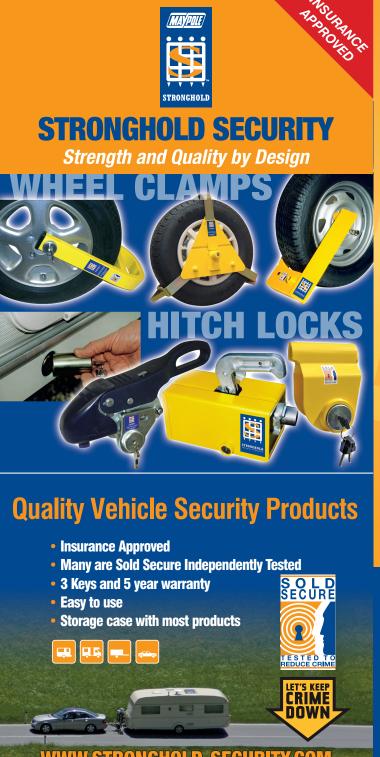





NO SUPPLICE

ATLAS Wheel Clamp

Assembly & Fitting Instructions for ATLAS Caravan & ATLAS Auto

Wheel sizes: This product can be used on Alloy and Steel wheel rims, with maximum tyre width of 265mm (see size guide).

Note: A minimum of 20mm clearance between the wheel rim and any brake assemblies is required. If this is not available on one wheel, it may be available on another. This product can be fitted to nearside and offside wheels.

Maintenance:

- Lubricate lock regularly with a light oil spray. This is a warranty condition.
 - When cleaning this product use a cloth and mild detergent.

PATENTED - LOCKING SYSTEM



This box contains:

- A 2 x M12x1.5 locking wheel bolts & key (SH5438 only)
- B Front arm
- C Rear Arm
- D Lock assembly & three keys
- E Lock cover

Fitting instructions & warranty card

Please note:

- Familiarise yourself with all parts prior to assembly & fitting.
 - This product is supplied with three keys. Separate and keep a key in a designated place of safety.
 - Store the locking wheel bolt key so it is available whenever a wheel might need to be removed.
 - Record your key number here:
- Record your locking wheel bolt key number here:



You will need these in order to obtain replacements

 Keep this instruction card and your proof of purchase (receipt or invoice) for future reference
 Always remove this clamp before attempting to move your vehicle.

Fitting Instructions - For ease of fitting we suggest sitting on a portable step, or the use of a kneeling pad.



Fig 1- Wheel Selection:

Select a wheel with the 20mm minimum necessary clearance between the brake assembly and wheel rim.



20mm Min gap between brake assembly and wheel rim



Fig 2: Fitting Locking Wheel Bolts:

• Remove two diagonally opposed wheel bolts from your wheel.

IMPORTANT: For approval purposes Atlas Wheel Clamps must be used in conjunction with Sold Secure approved locking wheel bolts. (Not supplied in SH5439)

Note: If fitting to a 5-bolt wheel do not remove two adjacent wheel bolts.

- Ensure that the removed bolts are of the same thread length, size and pitch as the locking wheel bolts (A) provided in this product. If in doubt, consult your vehicle's manufacturer or handbook.
- Fully engage the key into the locking wheel bolt head and carefully insert the bolt into the correct location. Repeat for the second bolt.
- Carefully tighten the locking wheel bolts to the vehicle manufacturer's recommended torque. DO NOT overtighten or use an impact wrench as this could cause expensive damage to the locking wheel bolts or to the wheel.



Fig 3 - Rear Arm (C) location:

Place the rear arm behind the right side of the wheel rim as you face it and position the long "nose" so it rests as close as possible to the spoke gaps in the rim.

Note: It may be necessary to angle the arm to achieve this.



Fig 4 – Front Arm (B) Location:

Holding the rear arm in one hand, offer up the front arm so that its square central tube slides over that of the rear arm and the short front arm "nose" comes to rest in the recess at the edge of the rim, or in one of the spoke gaps.



Fig 5 – Fitting The Lock (D):

Push the two arms as close together as possible and insert the lock assembly into the barrel housing on top of the front arm.

Note: it may be necessary to move the assembly from side to side in order to achieve the best fit, which may not necessarily be with the arms resting on the ground.



Fig 6 - Securing The Clamp:

Rotate the key anti-clockwise until locked into position, then remove key. Fit lock cover (E) over the lock to prevent water and dirt ingress.

Warranty

This product carries a **1 year mechanical defect warranty**, plus an extra 4 years free of charge if you return the completed Warranty Card within one month from the date of purchase. Alternatively you can register online at **www.stronghold-security.com** by clicking on the "**Register your product here**" icon.

Replacement Kevs

The design of Stronghold keys means that genuine replacements are only available by special order through the place of purchase, for which you will require your key number. Please note, the use of unapproved copy keys will void your Warranty.

Customer Service Contacts

In case of product defect or malfunction please contact the place of purchase for assistance. For other questions please refer to the FAQ section of our website www.stronghold-security.com or: UK & Ireland customers - the place of purchase or the Stronghold help desk at Maypole Ltd - sales@maypole.ltd.uk or +44 (0)121 270 4301

International customers - the place of purchase or your national distributor.

Free Extended Warranty

Product SH5438 & SH5439 - Stronghold Atlas Wheel Clamp

This product carries a 12 month mechanical defect warranty, plus an extra **4 years** free of charge if you return the completed Warranty Card within one month from the date of purchase..

Alternatively you can register online at www.stronghold-security.com by clicking on the "Register your product here" icon.

Retail Outlet		
Date of purchase		
Principal security use		
Make of product being secured		
Why did you buy a Stronghold product?		
Please tick which of the following		
Magazines you read	Regularly	Occasionally
The Caravan Club		
Camping and Caravanning Club		
Caravan		
Practical Caravan		
Total Caravan		
Motor Caravan		
Which Motor Caravan		
Motorhome		
Practical Motorhome		
What Car		
Autocar		
Autoexpress		
Which daily paper do you read?		
Which Sunday paper do you read?		

Name:	
Address:	
Post Code:	
Email:	
If you do not wish to receive other security information please tick here	
Personal information will not be given or sold to any third party organisations	-