

Installation Instructions

Card Reader for TouchTunes to NGX Conversion Kit #26677532


These instructions outline the procedures to install an AMI swipe card reader into an Allegro, Ovation, or MX1 jukebox which has been converted to run on the AMI network using NGX components.

Note: This kit is designed to replace the original “dip” type card reader. If the jukebox you are working on does not now have a card reader opening in the payment bracket, order the proper payment bracket from your local TT distributor or from Suzo-Happ.

Tools Required: #2 Philips Screw driver, 1/4” Nut Driver

Parts Included with this Kit:

<u>Item #</u>	<u>Part Number</u>	<u>Description</u>	<u>Quantity</u>
1	34091605	Plate – Card Reader	1
2	22185353	Card Reader (Programmed)	1
3	22207608	Label – Card Reader	1
4	28277901	#M3 x 6 Philips Pan Head Screw	2 (not shown)
5	80662304	#6-32x1/4 Hex Washer Head Screw	4 (not shown)
6	PM0725-01	Label – Visa Mastercard Promo These Instructions	1 (not shown)

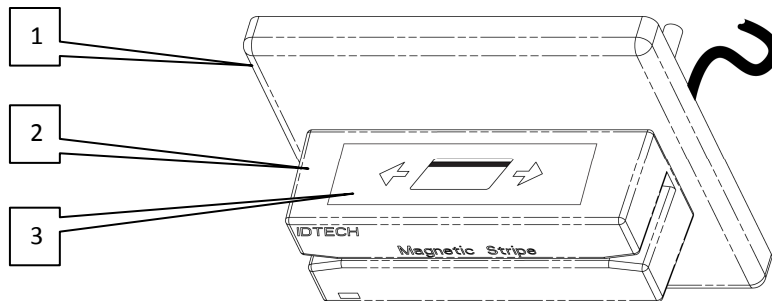

1. Turn the jukebox power off and unplug the power cord from the wall outlet.
2. Open the jukebox door and remove the “dip” card reader.
3. Install the Card Reader (item 2) onto the Card Reader Plate (item 1) using (2) #M3 x 6 Philips screws (item 4). Do not overtighten the screws.
4. Install the Card Reader Label (item 3) as shown in the diagram above.
5. Feed the USB cable into the card reader opening in the door and hold the card reader assembly in position. Secure the card reader assembly to the door using (4) #6-32x1/4” Hex Screws (item 5).
6. Plug the free end of the USB cable into any open USB port on the front panel of the Core Computer. Route the USB wiring through existing cable clamps to keep it from interfering with the door or other components in the jukebox.
7. Power up the jukebox and test the card reader using the Credit Devices Test screen in Service Mode.



