



LOFT 1200




Owner's Manual

Le Cache Premium Wine Cabinets

**531 Mercantile Drive
Cotati, CA 94931
(707) 794-8000
www.lecache.com**

1. Your Wine cabinet

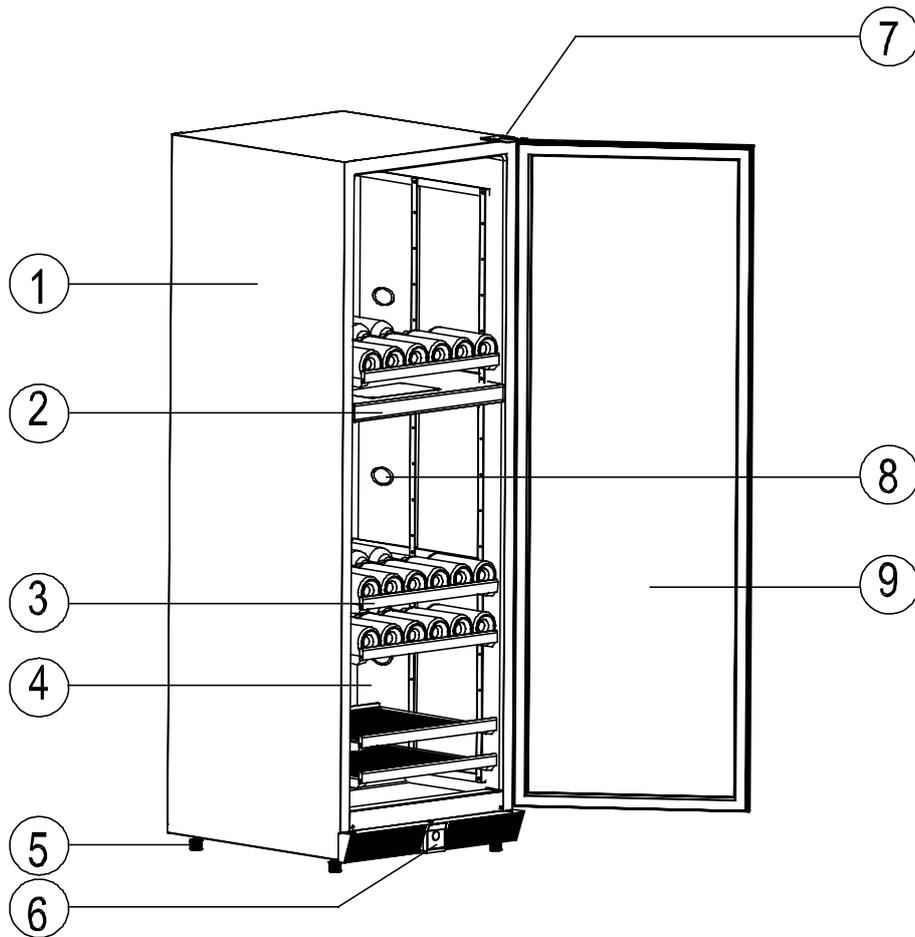

- | | |
|--|------------------|
| 1.Housing | 6.Front grill |
| 2.Control Panel and Temperature Settings | 7.Door Hinge |
| 3.Sliding shelf | 8.Interior Light |
| 4.Cabinet | 9.Door |
| 5.Adjustable Feet | |

IMPORTANT SAFETY INSTRUCTIONS


WARNING	To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:
<ul style="list-style-type: none"> ● Read all instructions before using the Wine Cooler ● DANGER or WARNING: Risk of child entrapment. Child entrapment and suffocation are not only problems of the past. Junked or abandoned appliances are still dangerous... even if they will “just sit in the garage for a few days”. ● Before you throw away an old wine Cooler: Take off the door. Leave the shelves in place so that children may not climb inside easily. ● Never allow children to operate, play with, or crawl inside the appliance. ● Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion. ● Do not store or use gasoline or any other flammable vapors in the vicinity of this appliance. The fumes can create a fire hazard or explosion. 	
-Save these instructions-	

2. INSTALLATION INSTRUCTIONS


Handle Installation

Step 1 Take out the handle from the cellar and remove the plastic bag. Remember, 2pcs of screw are packed inside the plastic bag.


Step 2 Pull out a bit of rubber gasket from the back side of the hole.

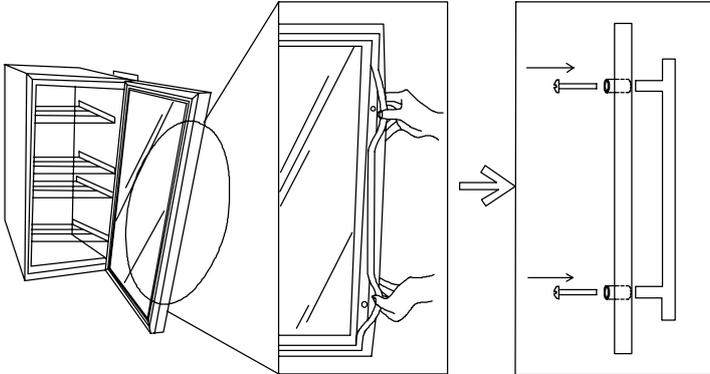

Step 3 Insert the screw through the hole and connect with the handle.

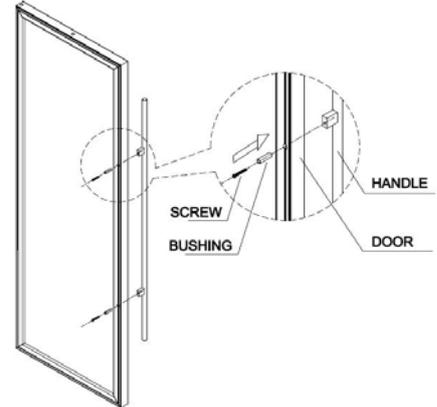

Installation of Front grill

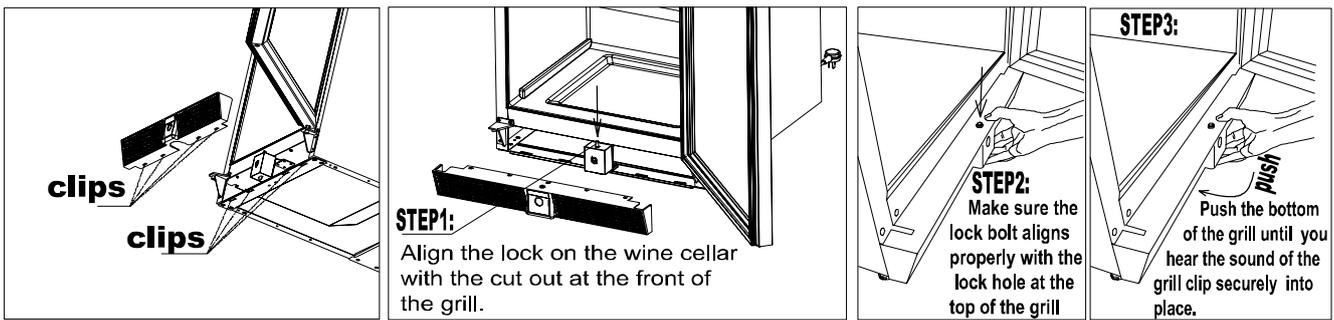

➤ Before Using Your Wine Cooler









- Remove the exterior and interior packing.
- Before connecting the Wine Cooler to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.
- Install the handle on the left side of the door.

➤ Location of Your Wine Cooler

- This appliance is designed for free standing installation or built-in (fully recessed).
- Place your Wine Cooler on a floor that is strong enough to support it when it is fully loaded. To level your Wine Cooler, adjust the front leveling leg at the bottom of the Wine Cooler.
- Locate the Wine Cooler away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the unit in humid areas.
- Plug the Wine Cooler into a dedicated, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized products service center.


➤ **Reversing the Door Swing of Your Appliance**

The door of this appliance has the capability of opening from either left or right side. The unit is delivered to you with the door opening from the left side. If you desire to reverse the opening direction, please see instructions below:

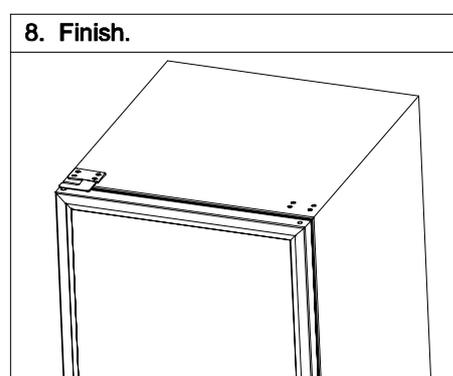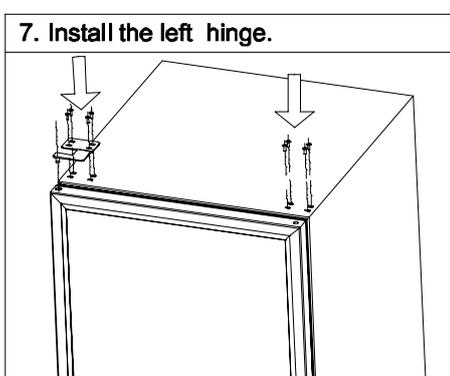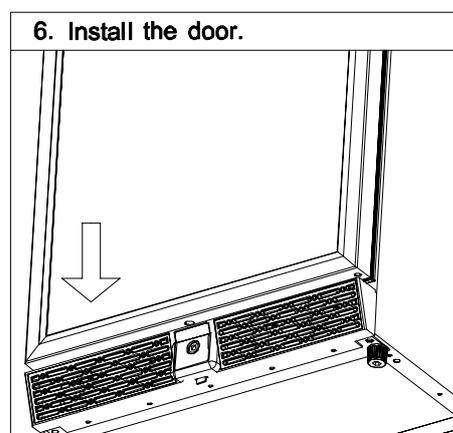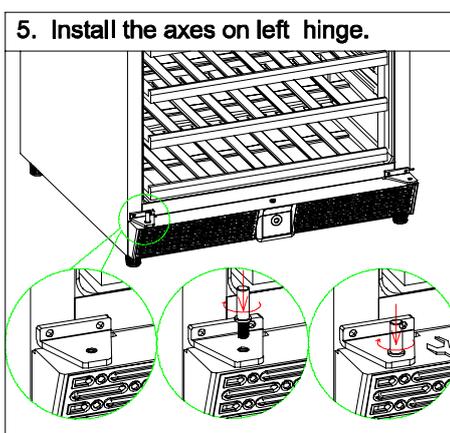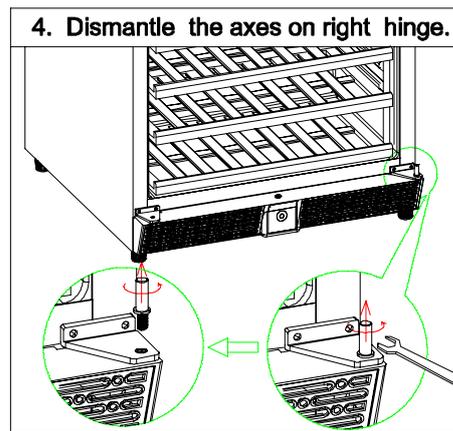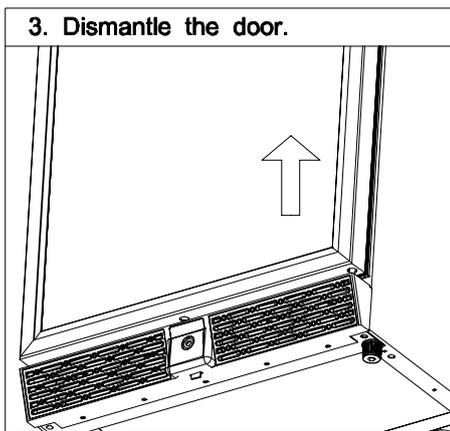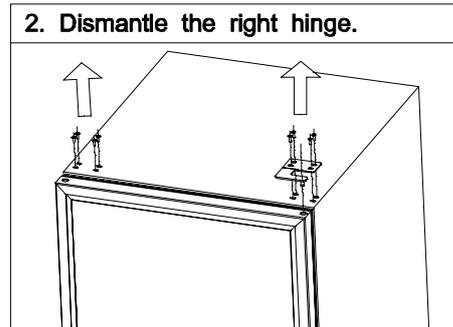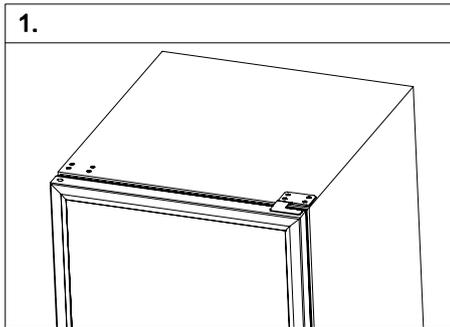

3. OPERATING YOUR WINE COOLER

Dual zone control panel:

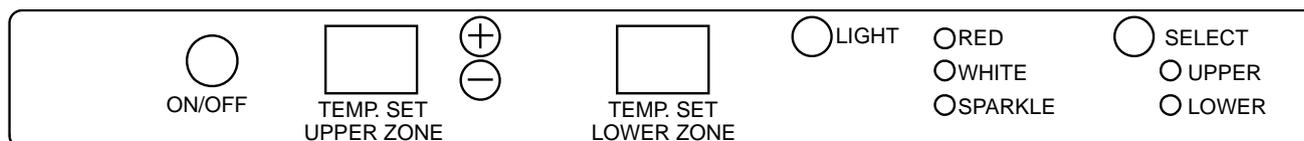

Each wine cellar includes an operating panel on the front of the unit. This operating panel includes several features to operate and control the temperature of both the upper and lower zones of the wine cellar.

The operating panel includes the following features:

ON/OFF: Turns the wine cellar power on or off.

TEMP. SET UPPER ZONE: Adjusts and displays, via LED, the desired temperature and the actual temperature of the upper zone.

TEMP. SET LOWER ZONE: Adjusts and displays, via LED, the desired temperature and the actual temperature of the lower zone.

LIGHT: Turns the interior wine cellar light on or off.

SELECT: Allows user to select to control the UPPER or LOWER zone.

CAUTION:

BEFORE YOU START: The wine cellar should be placed in a location where the ambient temperature is between 32 - 100 degree Fahrenheit. If the ambient temperature is above or below this range, the performance of the unit may be affected. For example, placing your unit in extreme cold or hot conditions may cause interior temperatures to fluctuate.

SETTING THE TEMPERATURE CONTROL

IMPORTANT: IN ORDER FOR THIS UNIT TO FUNCTION AT OPTIMUM LEVEL, THE LOWER COMPARTMENT SHOULD BE SET AT LEAST 4-DEGREES (F) HIGHER THAN THE UPPER COMPARTMENT.

1. Make sure power cord is connected to a properly grounded outlet.
2. Turn Power ON.
3. Press the "SELECT" button to choose the "UPPER" or "LOWER" zone. Each zone is independently controlled.
 - Upper Zone: The temperature setting can be adjusted between 41°F to 60°F
 - Lower Zone: The temperature setting can be adjusted between 45°F to 64°F
4. Set the temperature of the Upper Zone or Lower Zone as you desire by pushing the UP (+) or DOWN (-) button. When you push the two buttons for the first time, the LED readout will show the original temperature set at previous time. (NOTE: The temperature preset at the factory is 41°F for Upper Zone and 45°F for Lower Zone.)
5. The temperature that you desire to set will increase 1°F if you push the UP(+) button once, and alternatively will decrease 1°F if you push the DOWN (-) button once.
6. Once you have set the desired temperature, wait 5 seconds. The temperature shown in the both Upper and Lower zone display panels will automatically switch to show the actual temperature inside the unit. The actual temperature will always be shown until the next time you press the UP (+) or DOWN (-) button to change the temperature settings.
7. NOTE: The desired temperatures may fluctuate depending on whether the interior light is ON or OFF and depending on the orientation of the bottles.

➤ **Setting the Temperature Control**

1. Different varieties of wine require different temperature settings. The recommended temperature ranges for serving different varieties of wine are listed below. Your wine cellar will indicate when you have set the upper/lower zones to the below temperature ranges.
 - Red Wines: 52-64°F
 - White Wines: 44-51°F
 - Sparkle Wines: 41-43°
2. If you set the upper or lower zone between 52-64°F, the LED light next to “RED” will light up, indicating that you are within the recommended range for serving Red Wines.
3. If you set the upper or lower zone between 44-51°F, the LED light next to “WHITE” will light up, indicating that you are within the recommended range for serving White Wines.
4. If you set the upper or lower zone between 41-43°F, the LED light next to “SPARKLE” will light up, indicating that you are within the recommended range for serving Sparkle Wines

CAUTION:

1. In the event of a power interruption, all previous temperature settings will be automatically saved and each compartment will return to the previous temperature setting.
2. If the unit is unplugged, loses power, or is turned off, you must wait over 6 minutes before restarting. Within this 6 minutes, compressor protect itself and will not start even power ON again
3. When you use the wine cellar. for the first time or restart the wine cellar after having been shut off for a long time, there will be a few degrees variance between the temperature you select and the one indicated on the LED readout for the first few hours of operation. After a few hours of operation, the temperature will normalize to the displayed temperature.

➤ **Interior Light**

You can turn the interior light ON or OFF by pressing the button marked with the “light” symbol. If you would like to turn off the light just press the “light” button again.

➤ **Door Lock**


The keys are located inside the plastic bag that contains the User’s Manual. Insert the key into the lock, and turn it counterclockwise to unlock the door. To lock the door, do the reverse operation making sure the metal pin is engaged completely. Remove the key and place it in a secure place for safekeeping.

4. LAYOUT AND STORAGE

Your cabinet was designed to be flexible, to be able to adapt to your requirements




HOW TO USE YOUR STORAGE SHELF

● Loading the Shelves

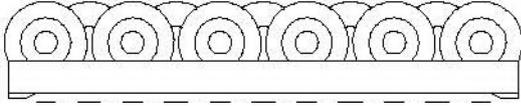

Capacity: 8-22 bottles


Max Weight: 55lbs/25kgs

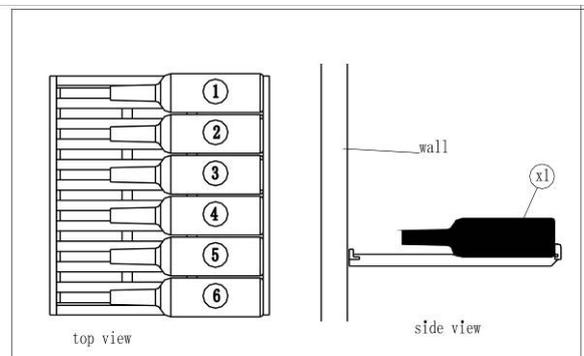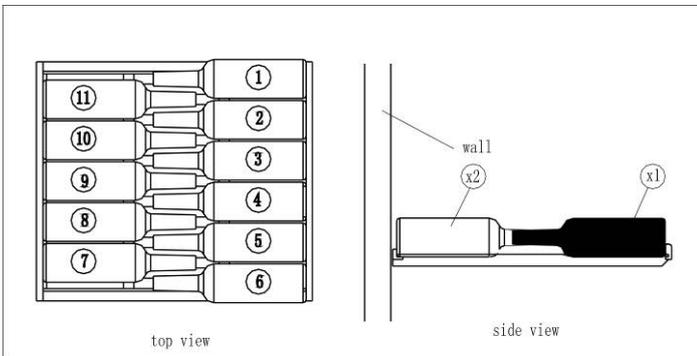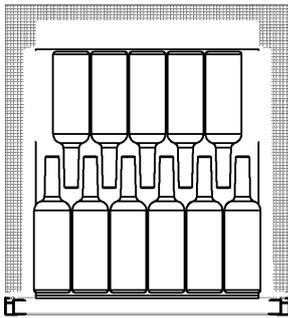

● Removing the Shelves

To move a sliding shelf:

1. Remove all bottles
2. Pull out the shelf
3. Adjust the lever as shown below
4. Pull out the shelf

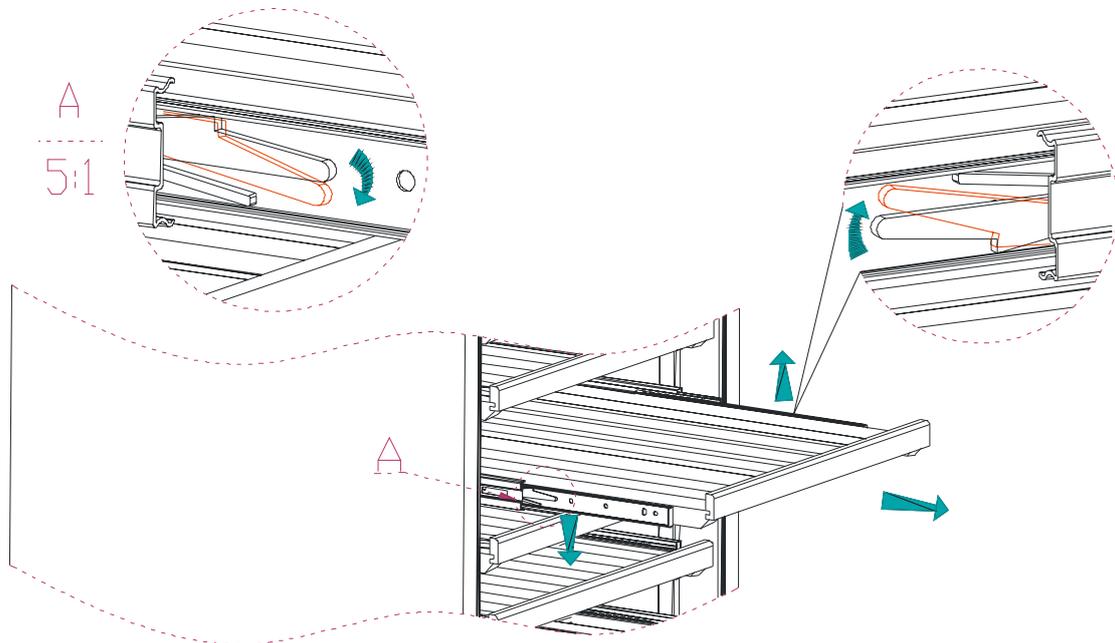

RECOMMENDATIONS FOR LAYOUT AND STORAGE OF YOUR WINE CABINET

Your cabinet was designed to store a maximum number of bottles in total security. We recommend that you observe the tips below to optimize loading.

- Spread your bottles out as evenly as possible over the shelves, so that weight is not concentrated in one area. Also make sure your bottles do not touch the back of the cabinet, or the step at bottom.
- Also make sure that bottles are not all grouped together at the top or bottom of the cabinet.
- Observe the loading instructions provided in this section and never stack bottles on a sliding shelf.
- Never try to pull out more than one sliding shelf at a time.

PLEASE NOTE

Before modifying your cabinet's original configuration in any way, be sure to ask your dealer for advice.

5. CARE AND MAINTENANCE

➤ Cleaning Your Wine Cooler

- Turn off the power, unplug the appliance, and remove all items including shelves and rack.
- Wash the inside surfaces with warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda with a quart of water.
- Wash the shelves with a mild detergent solution.
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

➤ Power Failure

- Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect your contents.

➤ Vacation time

- **Short vocations:** Leave the Wine Cooler operating during vacations of less than three weeks.
- **Long vocations:** If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent door and mold growth, leave the door open slightly: blocking it open if necessary.

➤ Moving Your Wine Cooler

- Remove all items.
- Securely tape down all loose items (shelves) inside your appliance.
- Turn the adjustable leg up to the base to avoid damage.
- Tape the door shut.
- Be sure the appliance stays secure in the upright position during transportation. Also protect outside of appliance with a blanket, or similar item.

➤ Energy saving Tips

- The Wine Cooler should be located in the coolest area of the room, away from heat producing appliances, and out of the direct sunlight.

6. PROBLEMS WITH YOUR WINE COOLER


You can solve many common Le Cache Loft Wine cooler problems easily, thereby saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem.

TROUBLESHOOTING GUIDE


PROBLEM	POSSIBLE CAUSE
Wine Cooler does not operate.	Not plugged in. The appliance is turned off. The circuit breaker is tripped or there is a blown fuse (see section 7 for details)
Wine Cooler is not cold enough.	Check the temperature control setting. External environment may require a higher setting. The door is being opened too often. The door is not closed completely. The door gasket does not seal properly.
Turns on and off frequently.	The room temperature is hotter than normal. A large amount of wine has been added to the cooler. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.
The light does not work.	Not plugged in. The circuit breaker is tripped or there is a blown fuse (Sect. 7) The bulb has burned out. The light button is "OFF".
There appears to be excessive vibration.	Check to assure that the cooler is level.
The Wine Cooler seems to make too much noise.	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant. Contraction and expansion of the inside walls may cause popping and crackling noises. The Wine Cooler is not level.
The door will not close properly.	The Wine Cooler is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.

7. FUSE REPLACEMENT


1. Disconnect the wine AC power supply. Remove sliding shelves above the control panel.

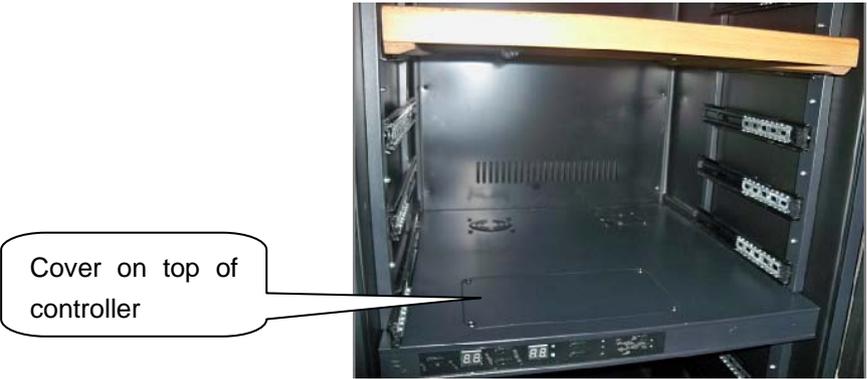


2. Use a screwdriver to remove the four screws holding down the cover over the control panel.

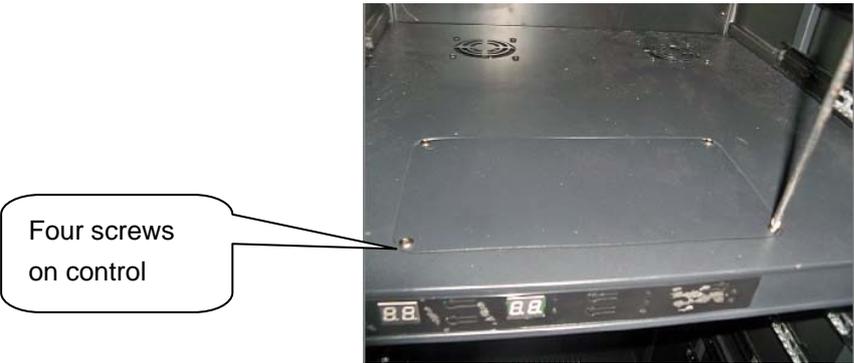

3. Inside you will see the power driver board, cable, and transformers.

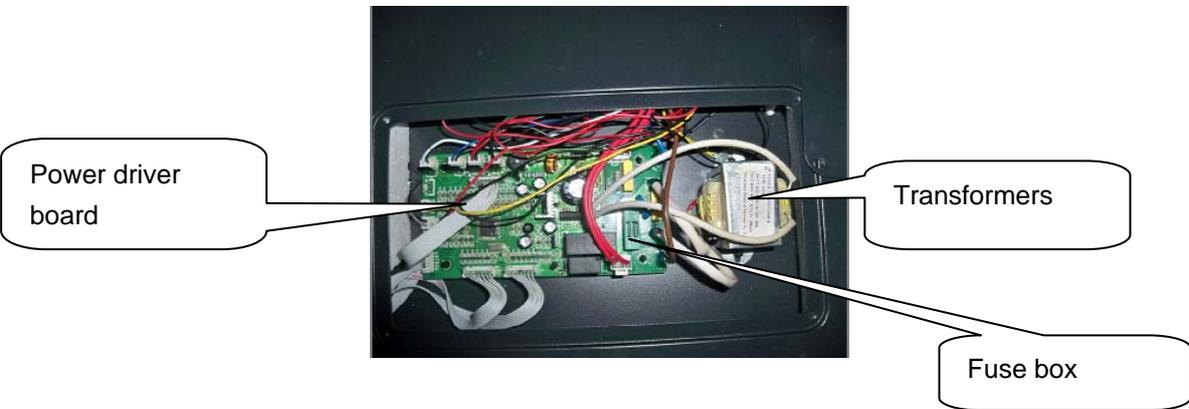

4. By hand remove the fuse box cover and check fuse. If blown then replace it.

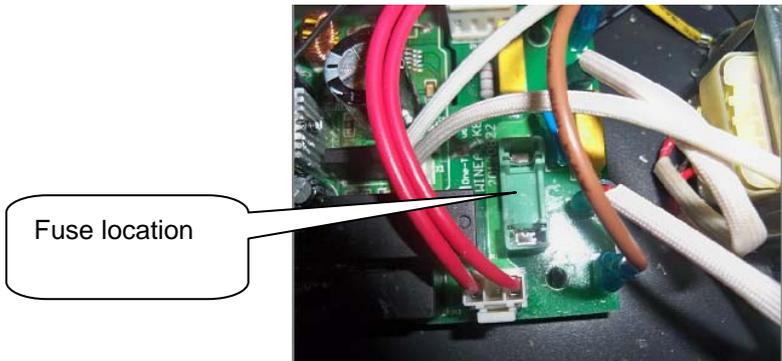

8. TECHNICAL DATA

	LOFT 1200
Volume(L/gals)	405/105
Storage (750 ML/Bottles)	144 (12 rows of 11 bottles, 2 rows of 6 bottles)
Type of cooling	Compressor & air-circulated fan cooling
Climate type	N
Electricity protection grade	I
Nominal voltage/Frequency	115V / 60HZ
Rated power(W)	200W
Ambient temperature	0-38°C / 32-100°F
Temperature range	Lower layer: 45-64°F; Upper layer: 41-60°F
Target humidity inside cabinet	>50%RH
Body size	In mm: 598W * 685D * 1821H In inches: 23.54W * 26.7D * 71.7H
Packing size	In mm: 746W * 831D * 2010H In inches: 29.4W * 32.7D * 79.1H
Net weight (kgs/lbs)	131 / 289
Gross weight (kgs/lbs)	143 / 315

