



Note: Do not remove nut from stud (C) or stud (E). Do not remove nut from stud (G)

- 1.Connect the battery cable (A) to Fuse B
- 2. Connect fuse (B) to high current stud (C) (there may be multiple wires with the battery cable. Connect all of the to the same high current stud).
- 3. Connect Key Switch Wire (AA) high current stud (C).
- 4. Connect the wire (D) from the motor/starter to high current stud (E).
- 5. Connect the wire (F) coming off the key switch to coil stud (G).