LIFEGARD®

Big Digital TEMP ALERT™

Displays both Aquarium Water and Room Temperatures in °F

Wide temperature range –58°F to +158°F

FOUR ALERT FEATURES

Alarm will sound & LED Flashes

1. **High Temp Alert Only** *(Probe)*
2. **Low Temp Alert Only** *(Probe)*
3. **Both High & Low Temp Alert** *(Air/Room)*
4. **Both High & Low Temp Alert** *(Probe)*

LIFEGARD AQUATICS
Aquarium, Pond & Aquaculture Products

Use for...

- **Aquariums**
- **Reptiles**
- **Green Houses**

- **Safe for Salt or Freshwater Use**
- **Heavy Duty Battery**
- **2-Year Battery Life**

3' Cord with all plastic probe and suction cup. For salt or freshwater use.

Big Digital TEMP ALERT™

OPERATING INSTRUCTIONS

Remove sticker from face of thermometer

To Install Battery: Battery Type: AAA. Use fingernail or coin to lift up battery cover and insert battery in direction indicated.

Digital Display Indications:

IN = AIR/ROOM TEMPERATURE
OUT = PROBE/WATER TEMPERATURE

Place probe with suction cup inside aquarium or wet/dry filter. Fully submerge probe under water. Do not submerge meter or allow meter to get wet. Damage may occur.

To Set Alert:

1. HIGH TEMP ALERT ONLY (Probe)
Slide "Temp/Alert" switch to "Alert". Press "Alert/Select" button to High Temp alert mode. (▲ symbol will appear on display.) Press "High Set" button to set desired high temperature point. Press "Alert On/Off" button to activate alert feature. ("Alert" will appear on display.) Slide "Temp/Alert" switch back to "Temp". Alarm sounds and LED light flash for 5 seconds every minute when temperature is above High temperature set point.

2. LOW TEMP ALERT ONLY (Probe)
Slide "Temp/Alert" switch to "Alert". Press "Alert/Select" button to Low Temp alert mode. (▼ symbol will appear on display.) Press "Low Set" button to set desired low temperature point. Press "Alert On/Off" button to activate alert feature. ("Alert" will appear on display.) Slide "Temp/Alert" switch back to "Temp". Alarm sounds and LED light flash for 5 seconds every minute when temperature is above Low temperature set point.

3. BOTH HIGH & LOW TEMP ALERT (Air/Room)
Slide "Temp/Alert" switch to "Alert". Press "Alert/Select" button to High & Low Room temp alert mode. (⧗ symbol will appear on display.) Press "High Set" button to set desired high temperature point. Press "Low Set" button to set desired low temperature point. Press "Alert On/Off" button to activate alert feature. ("Alert" will appear on display.) Slide "Temp/Alert" switch back to "Temp". Alarm sounds and LED light flash for 5 seconds every minute when temperature is above High or below the Low set point.

4. BOTH HIGH & LOW TEMP ALERT (Probe)
Slide "Temp/Alert" switch to "Alert". Press "Alert/Select" button to High & Low Probe temp alert mode. (⧫ symbol will appear on display.) Press "High Set" button to set desired high temperature point. Press "Low Set" button to set desired low temperature point. Press "Alert On/Off" button to activate alert feature. ("Alert" will appear on display.) Slide "Temp/Alert" switch back to "Temp". Alarm sounds and LED light flash for 5 seconds every minute when temperature is above High or below the Low set point.

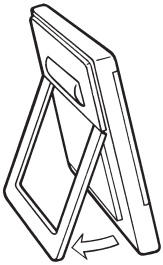

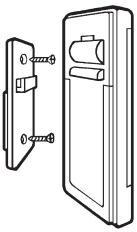

Use with pop up stand...mount with screws...or attach to any surface with pressure sensitive adhesive pad.

Made in China

LIFEGARD AQUATICS
Aquarium, Pond & Aquaculture Products

Email: info@lifegardaquatics.com
Web Site: www.lifegardaquatics.com