

Installation Instructions

Dual Bill Acceptor Kits for the ROCK-STAR Lx

Kit # 26683002 with Coinco BA

Kit # 26683003 without Coinco BA

Kit # 26683004 with MEI BA

Kit # 26683005 without MEI BA

Purpose:

These four kits contain the parts and instructions to install a second MEI or Coinco Bill Acceptor in your ROCKSTAR Lx jukebox.

Tools Required: 1/4 Nut Driver Phillips Screwdriver.

Parts Included with these Kits

#	Part #	Description	Kit # 26683002 and Qty.	Kit # 26683003 and Qty.	Kit # 26683004 and Qty.	Kit # 26683005 and Qty.
1	22135614	Coinco Downstack BA	1			
1A	22135613	MEI Downstack BA			1	
2	34098601	Bezel Coinco BA	1	1		
2A	34098701	Bezel MEI BA			1	1
3	22320201	Gasket Coinco BA	1	1		
3A	22320202	Gasket MEI BA			1	1
4	34100001	Dual BA & Cover Assy.	1	1	1	1
5	34022338	Dual BA Harness	2	2	2	2
6	80443010	#8-32x5/8 Screw	4	4	4	4
7	80403003	#8-32x3/16 Screw	2	2	2	2
8	26682902	These Instructions	1	1	1	1

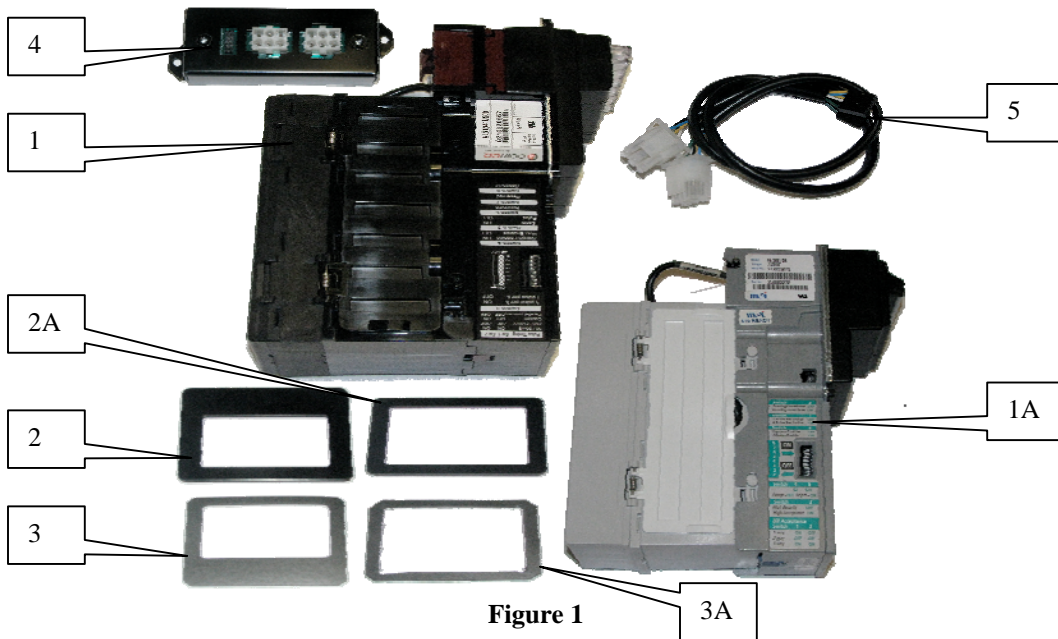


Figure 1



Installing the second Bill Acceptor (Coinco Vantage shown) See Figure 2.

1. Unplug the jukebox from the wall outlet and open the jukebox door. Disconnect the harness from the MEI or Coinco bill acceptor.
2. Remove the four hex nuts securing the BA blackout to the jukebox front door. Install the MEI Bezel (Item #2A) or the Coinco Bezel (Item #2) from outside the jukebox door, thru the clearance holes on the BA mounting bracket and secure with the four hex nuts.
3. Connect the 12 pin housing of the Dual BA Harnesses (Item #5) to the upper portion of the header on both Bill Acceptors. Ease the MEI Gasket (Item #3A) or the Coinco Gasket (Item #3) over the bill acceptor faceplate and install it thru the jukebox door. Secure the bill acceptor with the four #8-32 x 5/8 (Item #6) screws provided with this kit.
4. Attach the Dual BA and Cover Assembly (Item #4) to the existing holes in the lower display mounting bracket with 2 #8-32 x 3/16 phillips screws (Item #7).
5. Connect the two 6 pin male connectors of the Dual BA Harnesses (Item #5) to the 6 pin female connectors of the Dual BA and Cover Assembly.
6. Connect the original bill acceptor harness into the 12 pin header of the Dual BA and Cover Assembly.

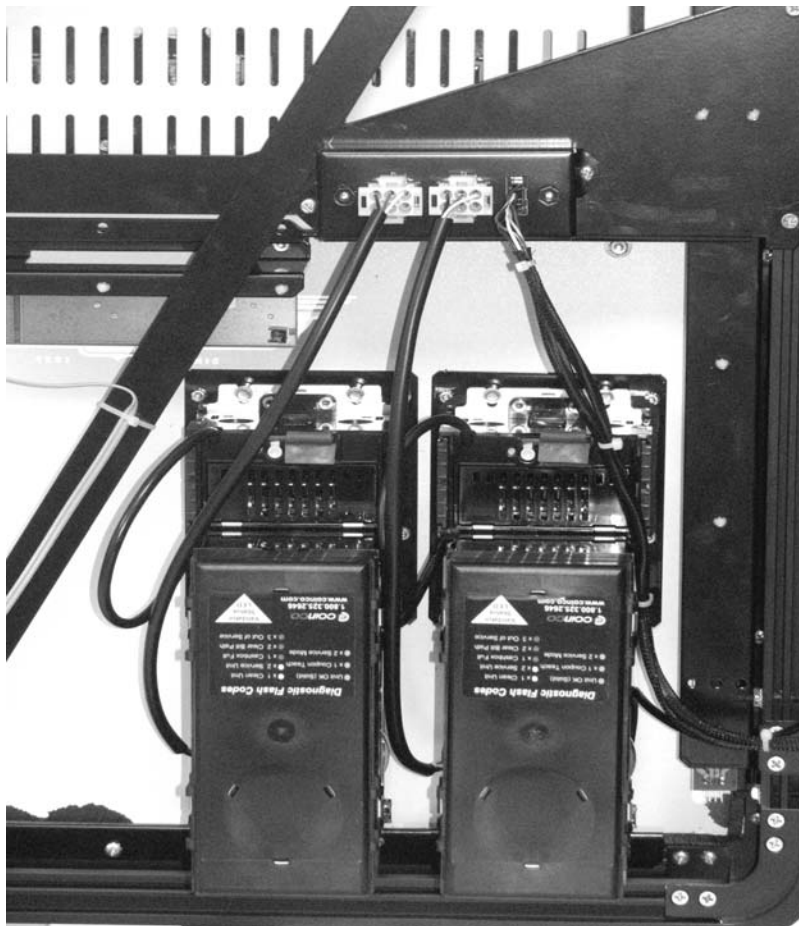


Figure 2

