



# Wall Strip Presentation Rack (WS-PR) Installation Instructions

Wine Master Cellars • 10645 E 47th Ave, Denver, CO 80239 • phone: 866.650.1500 • fax: 866.650.1501  
Please feel free to contact us regarding the assembly of this product.

## Each WS-PR kit contains:

- 1 Wall Strip Presentation Rack (WS-PR)
- 8 Plastic Mounting Hole Caps (Bagged)
- 5 Plastic Couplers (Bagged)
- 6 Plastic End Caps (Installed)

Before starting, open all Packaging for the WS-PR and take inventory to make sure you have everything.

## Tools Needed:

- Level
- Marking Pen or Pencil (Necessary in Some Cases)
- Tape Measure (Necessary in Some Cases)
- Phillips Head Power Screwdriver
- The appropriate **FASTENERS** for the wall surface you are attaching the WS-PR to.

## Fasteners:

There are eight pre-drilled Mounting Holes for fasteners on each WS-PR Series Rack. It is strongly recommended that appropriate fasteners be used in every Mounting Hole. We do not include fasteners with your WS-PR. However, we recommend the following fasteners for these surfaces:

- Wood Surface: #8 x 1-1/4" wood screw
- Drywall/Wallboard Surface: #8 x 1-1/4" screw with spiral inserts and/or expanding hollow wall anchors such as toggle bolts
- Concrete, Brick or Stucco: 3/16" x 1 3/4" masonry screw or expanding anchor

NOTE: If you are attaching the WS-PR to a VintageView® Floor to Ceiling Frame (FCF) you will attach the WS-PR to the FCF using the self-drilling screws included in the FCF packaging.

## WS-PR Installation Instructions

NOTE: If you are installing the WS-PR to a wall or FCF above or below a WS-3 or WS-4 Series Rack System:  
Install the WS Series Racks before installing the WS-PR.

### Installation to a Wall

#### 1 - Installation to a Wall above WS Series Racks

1.1 Remove the Black Plastic End Cap that is inserted into the bottom of each of the four Mounting Braces on the WS-PR.

NOTE: If you will be installing the WS-PR next to other WS-PRs also remove the Black Plastic End Caps on both sides of the WS-PR and insert a Black Plastic Coupler to one side of the WS-PR.

1.2 Remove the Black Plastic End Caps from the top of the WS Series Racks that correspond to the Mounting Braces on the WS-PR.

1.3 Insert the Black Plastic Couplers into the top of the WS Series Strips.

1.4 Align the WS-PR Mounting Braces directly over the WS Wall Strips and attach to the Wall Strips by sliding the WS-PR onto the Couplers fixed into the WS Series Strips.


1.5 Using the Appropriate Fasteners; mount the WS-PR to the wall through the hole in each of the 4 WS-PR Mounting Braces, and the hole above each Mounting Brace.

1.6 Attach the Black Plastic Mounting Hole Caps over the fasteners in the 8 Mounting Hole


#### 2 – Installation to a Wall below WS Series Racks

NOTE: If you will be installing the WS-PR next to other WS-PRs remove the Black Plastic End Caps on both sides of the WS-PR and insert a Black Plastic Coupler into one side of the WS-PR.

(Continued on back of sheet).

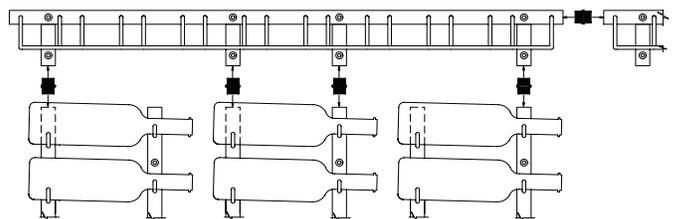

## Installation to a Wall (cont.)

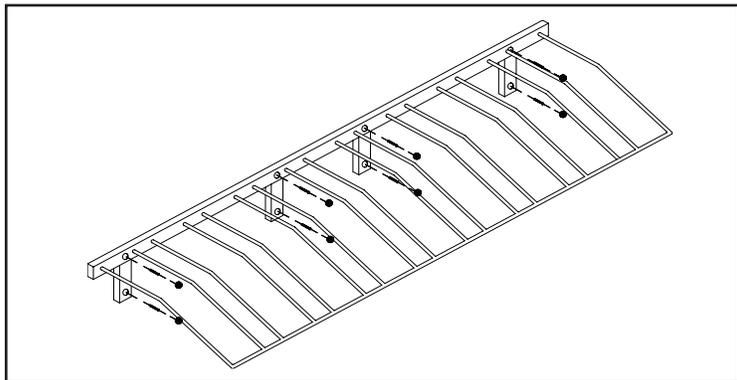

2.1 Align the WS-PR below the WS Series Wall Strips and make note of the Wall Strips that correspond to the Mounting Braces of the WS-PR.

2.2 With a tape measure, measure 8 inches down from the bottom of the two outermost corresponding Wall Strips of the WS Series Racks that are placed above the location you wish to install the WS-PR. Mark those spots on the wall with a marking pen or pencil.

2.3 Align the bottom of the legs of the Mounting Braces to the marks that you made.

2.4 Using the appropriate fastener mount the WS-PR to the wall through one of the outer Mounting Holes. Do Not fully Tighten.

2.5 Using a level make sure that the WS-PR is level and then mark the wall through the other seven Mounting Holes with a marking pen or pencil.

2.6 Mount the WS-PR to the wall with the fasteners through the seven remaining Mounting Holes on the WS-PR to the locations indicated by your markings. Fully tighten all fasteners.

2.7 Attach the Black Plastic Mounting Hole Caps over the fasteners in the 8 Mounting Holes.

### 3 – Installation to a Wall with no WS Series Racks

**NOTE: If you will be installing the WS-PR next to other WS-PRs remove the Black Plastic End Caps on both sides of the WS-PR and insert a Black Plastic Coupler into one side of the WS-PR.**

3.1 Place the WS-PR against the wall where you would like to install it and attach one appropriate fastener to the wall through a Mounting Hole on the WS-PR. Do not fully tighten.

3.2 Using a level make sure that the WS-PR is level and then mark the wall through the other seven Mounting Holes with a marking pen or pencil.

3.3 Mount the WS-PR to the wall with the fasteners through the seven remaining Mounting Holes on the WS-PR to the locations indicated by your markings. Fully tighten all fasteners.

3.4 Attach the Black Plastic Mounting Hole Caps over the fasteners in the 8 Mounting Holes.

## Installation to an FCF

### 1 - Installation to an FCF above WS Series Racks

1.1 Remove the Black Plastic End Cap that is attached to the bottom of each of the four Mounting Braces on the WS-PR.

**NOTE: If you will be installing the WS-PR next to other WS-PRs also remove the Black Plastic End Caps on both sides of the WS-PR and insert a Black Plastic Coupler into one side of the WS-PR.**

1.2 Remove the Black Plastic End Caps on top of the vertical Strips attached to the FCF of the WS Series Racks that correspond to the Mounting Braces on the WS-PR.

1.3 Insert the Black Plastic Couplers into the top of the WS Series Strips. 1.4 Align the WS-PR Mounting Braces directly over the WS Series Strips and attach to the Strips by sliding the WS-PR onto the Couplers fixed into the WS Series Strips.

1.5 Using the Self-drilling Screws; mount the WS-PR to the FCF through the Mounting Hole in each of the 4 WS-PR Mounting Braces, and the Mounting Hole above each Mounting Brace.

1.6 Attach the Black Plastic Mounting Hole Caps over the Self-Tapping Screws in the 8 Mounting Holes.

### 2 – Installation to an FCF below WS Series Racks

**NOTE: If you will be installing the WS-PR next to other WS-PRs remove the Black Plastic End Caps on both sides of the WS-PR and attach a Black Plastic Coupler to one side of the WS-PR.**

2.1 Align the WS-PR below the WS Series Strips and make note of the Strips that correspond to the Mounting Braces of the WS-PR.

2.2 With a tape measure, measure 8 inches down from the bottom of the two outermost corresponding Strips of the WS Series Racks that are placed above the location you wish to install the WS-PR.

Mark those spots on the FCF with a marking pen or pencil.

2.3 Align the bottom of the legs of the Mounting Braces to the marks that you made.

2.4 Using the Self-drilling Screws mount the WS-PR to the FCF through one of the outer Mounting Holes. Do Not fully Tighten.

2.5 Using a level make sure that the WS-PR is level and then mark the FCF through the other seven Mounting Holes with a marking pen or pencil.

2.6 Mount the WS-PR to the FCF with the Self-drilling Screws through the seven remaining Mounting Holes on the WS-PR to the locations indicated by your markings. Fully tighten all Self-drilling Screws.

2.7 Attach the Black Plastic Mounting Hole Caps over the Self-drilling Screws in the 8 Mounting Holes.

### 3 – Installation to an FCF with no WS Series Racks

**NOTE: If you will be installing the WS-PR next to other WS-PRs also remove the Black Plastic End Caps on both sides of the WS-PR and attach a Black Plastic Coupler to one side of the WS-PR.**

3.1 Place the WS-PR against the FCF where you would like to install it and attach one Self-Tapping Screw to the FCF through a Mounting Hole on the WS-PR. Do not fully tighten.

3.2 Using a level make sure that the WS-PR is level and then mark the FCF through the other seven Mounting Holes with a marking pen or pencil.

3.3 Mount the WS-PR to the FCF with the Self-drilling Screws through the seven remaining Mounting Holes on the WS-PR to the locations indicated by your markings. Fully tighten all Self-drilling Screws.

3.4 Attach the Black Plastic Mounting Hole Caps over the Self-drilling Screws in the 8 Mounting Holes.