
Installing Bear DC Contactor



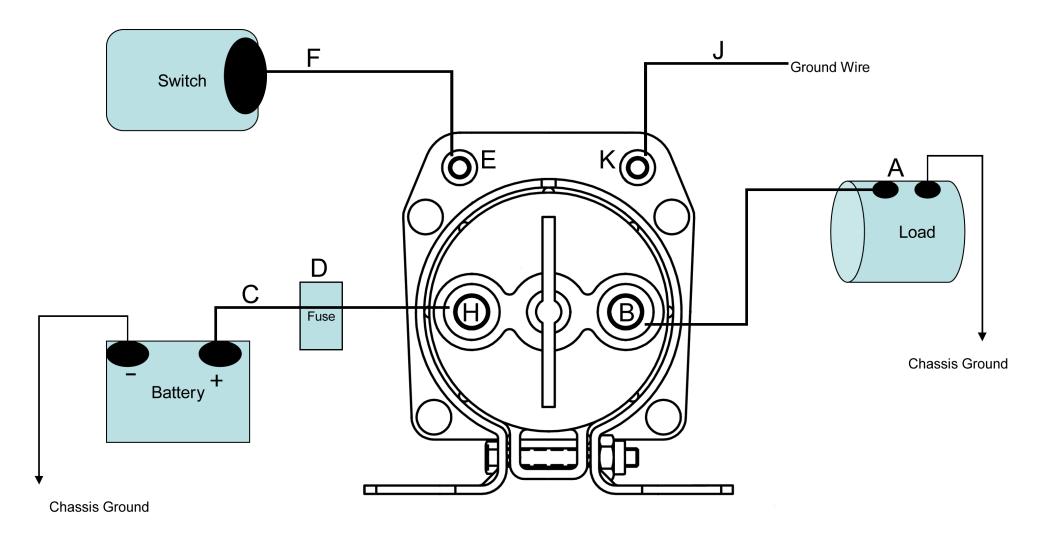

Mounting Instructions

- 1. Select a desired mounting location
- 2. Using the contactor as a template, mark the centers of the mounting holes.
- 3. Using a ¼ inch drill bit, drill the holes marked in the previous step.
- 4. Mount the contact using $\frac{1}{4}$ inch bolts and nuts.
- 5. Wire the relay according to the wiring diagram

Wiring Diagram

- 1. Connect Load (A) to high current stud (B)
- 2. Connect battery positive (C) to fuse (D)
- 3. Connect fuse (D) to high current stud (H)
- 4. Connect Switch (F) to coil stud (E)
- 5. Connect Ground Wire (J) to coil stud (K)