




**8-port 10/100TX + 2-port Gigabit  
Copper/Mini GBIC  
SNMP Managed Industrial Ethernet Switch  
with Xtreme Ring**

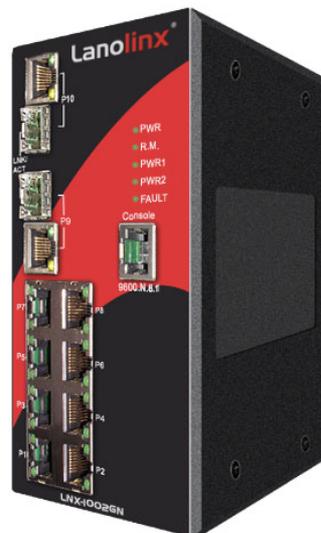

**User Manual**

## Notice

The contents in this manual were based on the listed versions shown on the table below (software kernel version, hardware version, and firmware version). If there are any discrepancies between the switch functions and the manual content descriptions, please contact your local distributor for more information.

<b>Firmware Version</b>	V1.06
<b>Kernel Version</b>	V1.15
<b>Hardware Version</b>	-----

## **FCC Warning**

This Equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Contact local Sales Dealer Distributors or an experienced radio/TV technician for help.

## **CE Mark Warning**

This is a Class-A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

# Content

---

---

<b>Introduction</b> .....	<b>1</b>
Features .....	1
Package Contents.....	3
<b>Hardware Description</b> .....	<b>4</b>
Physical Dimension.....	4
Front Panel .....	4
Bottom View.....	5
LED Indicators .....	5
Ports.....	7
Cabling.....	8
Wiring the Power Inputs .....	9
Wiring the Fault Alarm Contact .....	9
Wiring the Fault Alarm Contact .....	10
<b>Mounting Installation</b> .....	<b>11</b>
DIN-Rail Mounting.....	11
Wall Mount Plate Mounting .....	13
<b>Hardware Installation</b> .....	<b>14</b>
Installation Steps.....	14
<b>Network Application</b> .....	<b>15</b>
Xtreme Ring Application .....	15
Coupling Ring Application.....	16
Dual Homing Application.....	17
<b>Console Management</b> .....	<b>18</b>
Connecting to the Console Port .....	18

Login in the Console Interface .....	18
CLI Management .....	19
Commands Level.....	20
Commands Set List.....	22
<b>Web-Based Management .....</b>	<b>45</b>
About Web-based Management .....	45
Preparing for Web Management.....	45
System Login .....	46
Main interface .....	47
Main interface .....	47
System Information .....	48
IP Configuration .....	48
DHCP Server – System configuration.....	49
DHCP Client – System Configuration .....	50
DHCP Server - Port and IP Bindings .....	51
TFTP - Update Firmware .....	51
TFTP – Restore Configuration .....	52
TFTP - Backup Configuration .....	52
System Event Log – Syslog Configuration.....	53
System Event Log - SMTP Configuration .....	54
System Event Log - Event Configuration .....	55
Fault Relay Alarm .....	57
SNTP Configuration .....	58
IP Security.....	60
User Authentication.....	61

Port Statistics .....	62
Port Control.....	63
Port Trunk .....	64
Aggregator setting .....	64
Aggregator Information .....	66
State Activity.....	66
Port Mirroring .....	67
Rate Limiting .....	68
VLAN configuration .....	69
VLAN configuration - Port-based VLAN .....	70
802.1Q VLAN.....	72
802.1Q VLAN.....	73
Rapid Spanning Tree .....	76
RSTP - System Configuration .....	76
RSTP - Port Configuration .....	77
SNMP Configuration .....	78
System Configuration.....	78
Trap Configuration .....	79
SNMPV3 Configuration.....	80
QoS Configuration .....	84
QoS Policy and Priority Type .....	84
Port Base Priority .....	85
COS Configuration.....	86
TOS Configuration .....	86
IGMP Configuration .....	86
Xtreme Ring .....	88
802.1X/Radius Configuration .....	90

MAC Address Table.....	92
Factory Default.....	95
Save Configuration .....	95
System Reboot .....	96
<b>Troubles shooting .....</b>	<b>97</b>
<b>Technical Specification.....</b>	<b>98</b>

# Introduction

---

The 8 10/100TX plus 2 Gigabit Copper/Mini GBIC managed industrial switch is a cost-effective solution and meets the high reliability requirements demanded by industrial applications. The 8 10/100TX plus 2 Gigabit Copper/Mini GBIC managed industrial switch can be easily managed through the Web GUI. By using fiber port can extend the connection distance that increases the network elasticity and performance. It also provides the Xtreme Ring function that can prevent the network connection failure.

## Features

- System Interface/Performance
  - RJ-45 port support Auto MDI/MDI-X Function
  - Store-and-Forward Switching Architecture
  - Back-plane (Switching Fabric): 5.6Gbps
  - 1Mbits Packet Buffer
  - 8K MAC Address Table
- Power Supply
  - Input Power Isolation design for Telcom application, Pass Hi-Pot test~1.5KV
  - Wide-range Redundant Power Design
  - Power Polarity Reverse Protect
- VLAN
  - Port Based VLAN
  - Support 802.1 Q Tag VLAN
  - GVRP
- Port Trunk with LACP
- QoS (Quality of Service)
  - Support IEEE 802.1p Class of Service,
  - Per port provides 4 priority queues
  - Port Base, Tag Base and Type of Service Priority
- Port Mirror: Monitor traffic in switched networks.

- TX Packet only
- RX Packet only
- Both of TX and RX Packet
- Security
  - Port Security: MAC address entries/filter
  - IP Security: IP address security management to prevent unauthorized intruder.
  - Login Security: IEEE802.1X/RADIUS
- IGMP with Query mode for Multi Media Application
- Case/Installation
  - IP-30 Protection
  - DIN Rail and Wall Mount Design
- Spanning Tree
  - Support IEEE802.1d Spanning Tree
  - Support IEEE802.1w Rapid Spanning Tree
- Xtreme Ring
  - Xtreme Ring, Dual Homing, and Couple Ring Topology
  - Provide redundant backup feature and the recovery time below 20ms
- Bandwidth Control
  - Ingress Packet Filter and Egress Rate Limit
  - Broadcast/Multicast Packet Filter Control
- System Event Log
  - System Log Server/Client
  - SMTP e-mail Alert
  - Relay Alarm Output System Events
- SNMP Trap
  - Device cold start
  - Power status
  - Authentication failure
  - Xtreme Ring topology changed
  - Port Link up/Link down
- TFTP Firmware Update and System Configure Restore and Backup

## Package Contents

Please refer to the package content list below to verify them against the checklist.


- 8 10/100TX plus 2 Gigabit Copper/Mini GBIC managed industrial switch
- User manual
- RS-232/RJ-45 cable
- Block connector
- 2 wall mount plates and 6 screws
- One DIN-Rail (attached on the switch)



8 10/100TX plus 2 Gigabit Copper/Mini GBIC managed industrial switch




User Manual

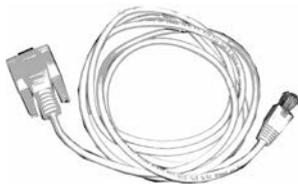

RS-232/RJ-45 connector cable




block connector

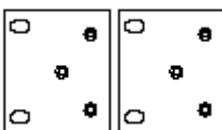

Wall Mount Plate



Screws

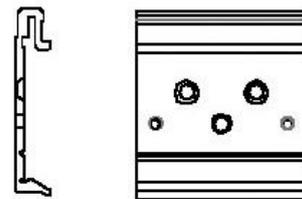

DIN-Rail

Compare the contents of the industrial switch with the standard checklist above. If any item is damaged or missing, please contact the local dealer for service.

# Hardware Description

---


In this paragraph, it will describe the Industrial switch's hardware spec, port, cabling information, and wiring installation.

## Physical Dimension

8 10/100TX plus 2 Gigabit Copper/Mini GBIC managed industrial switch dimension (W x D x H) is **72mm x 105mm x 152mm**

## Front Panel


The Front Panel of the 8 10/100TX plus 2 Gigabit Copper/Mini GBIC managed industrial switch is showed as below:

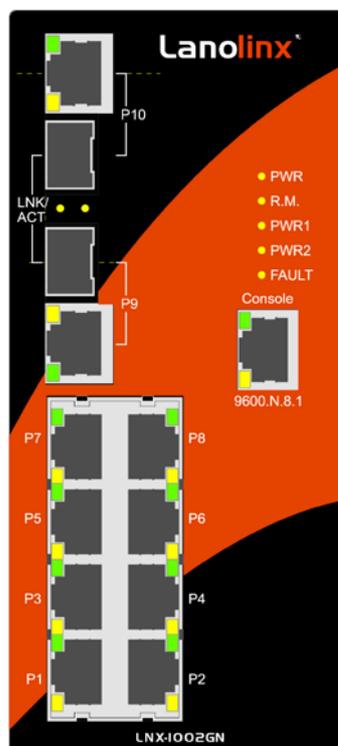

Front Panel of the industrial switch

## Bottom View

The bottom panel of the 8 10/100TX plus 2 Gigabit Copper/Mini GBIC managed industrial switch has one terminal block connector of two DC power inputs.

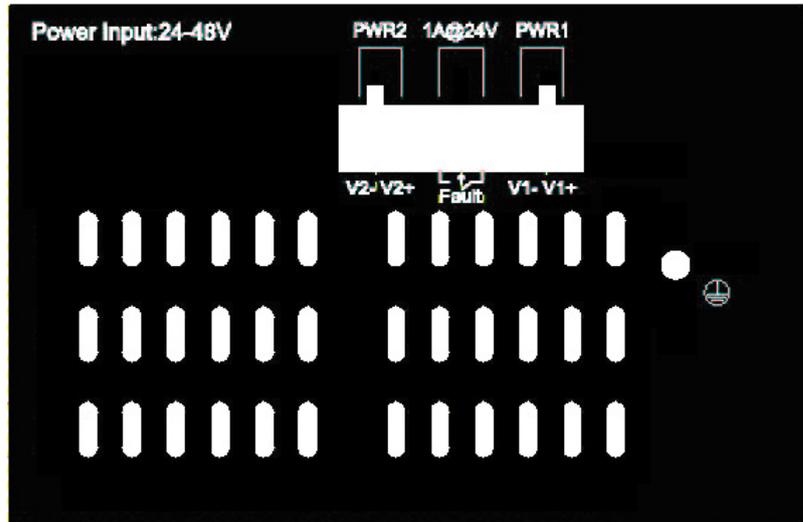

Bottom Panel of the industrial switch

## LED Indicators

There are 7 diagnostic LEDs located on the front panel of the industrial switch. They provide real-time information of system and optional status. The following table provides description of the LED status and their meanings for the switch.

LED	Status	Meaning
PWR	Green	The switch unit is power on
	Off	The switch unit is no power input
PWR1	Green	Power on
	Off	No power inputs

<b>PWR2</b>	Green	Power on
	Off	No power inputs
<b>Fault</b>	Orange	Power failure or UTP port failure or Fiber port failure
	Off	No Power failure or UTP port failure or Fiber port failure occurs
<b>R.M.</b>	Green	The industrial switch is the master of Xtreme Ring group
	Off	The industrial switch is not a ring master in Xtreme Ring group
<b>LNK/ACT</b>	Green	The fiber port is linking
	Blinks	The port is transmitting or receiving packets from the TX device.
	Off	No device attached
<b>1 ~ 8</b>	Orange	The port is operating in full-duplex mode.
	Blinking (Orange)	Collision of Packets occurs.
	Off	The port is in half-duplex mode or no device is attached.
	Green	A network device is detected.
	Blinking (Green)	The port is transmitting or receiving packets from the TX device.
	Off	No device attached

# Ports

## ■ RJ-45 ports

There are 8x 10/100Mbps auto-sensing ports for 10Base-T or 100Base-TX devices connection. The UTP ports will auto-sense for 10Base-T or 100Base-TX connections. Auto MDI/MDIX means that the switch can connect to another switch or workstation without changing straight through or crossover cabling. See the below figures for straight through and crossover cable schematic.

## ■ RJ-45 Pin Assignments

Pin Number	Assignment
1	Tx+
2	Tx-
3	Rx+
6	Rx-



---

**[NOTE]** “+” and “-” signs represent the polarity of the wires that make up each wire pair.


---

All ports on this industrial switch support automatic MDI/MDI-X operation, user can use straight-through cables (See figure below) for all network connections to PCs or servers, or to other switches or hubs. In straight-through cable, pins 1, 2, 3, and 6, at one end of the cable, are connected straight through to pins 1, 2, 3 and 6 at the other end of the cable. The table below shows the 10BASE-T/100BASE-TX MDI and MDI-X port pin outs.

Pin MDI-X	Signal Name	MDI Signal Name
1	Receive Data plus (RD+)	Transmit Data plus (TD+)
2	Receive Data minus (RD-)	Transmit Data minus (TD-)
3	Transmit Data plus (TD+)	Receive Data plus (RD+)
6	Transmit Data minus (TD-)	Receive Data minus (RD-)

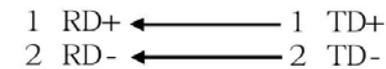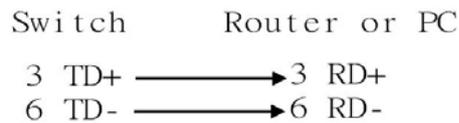

Straight Through Cable Schematic

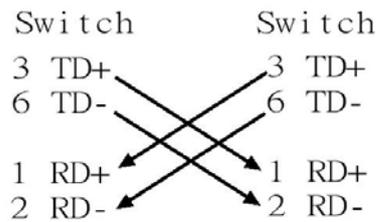

Cross Over Cable Schematic


- **2 Mini GBIC/Giga copper combo port:** 2 auto-detect Giga port—UTP or fiber. Giga fiber is the mini GBIC module that is optional.

## Cabling


- Using four twisted-pair, Category 5 cabling for RJ-45 port connection. The cable between the converter and the link partner (switch, hub, workstation, etc.) must be less than 100 meters (328 ft.) long.
- Fiber segment using **single-mode** connector type must use 8/125 or 9/125  $\mu\text{m}$  single-mode fiber cable. User can connect two devices in the distance up to **10 Kilometers**.
- Fiber segment using **multi-mode** connector type must use 50 or 62.5/125  $\mu\text{m}$  multi-mode fiber cable. User can connect two devices up to **550 meters** distances.

## Wiring the Power Inputs

Please follow the below steps to insert the power wire.

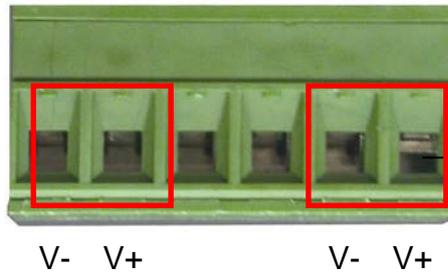

1. Insert the positive and negative wires into the V+ and V- contacts on the terminal block connector.

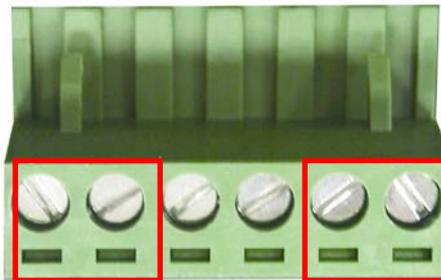

2. To tighten the wire-clamp screws for preventing the DC wires to loose.

---

**[NOTE]** The wire range of terminal block is from 12~ 24 AWG.

---

## Wiring the Fault Alarm Contact

The fault alarm contact is in the middle of terminal block connector as below picture shows. By inserting the wires, it will detect the fault status which the power is failure or port link failure and form a closed circuit. And, application example for the fault alarm contact as below:




Insert the wires into the fault alarm contact

---

**[NOTE]** *The wire gauge for the terminal block should be in the range between 12~ 24 AWG.*  
***If only using one power source, jumper Pin 1 to Pin 5 and Pin 2 to Pin 6 to eliminate power fault alarm.***

---

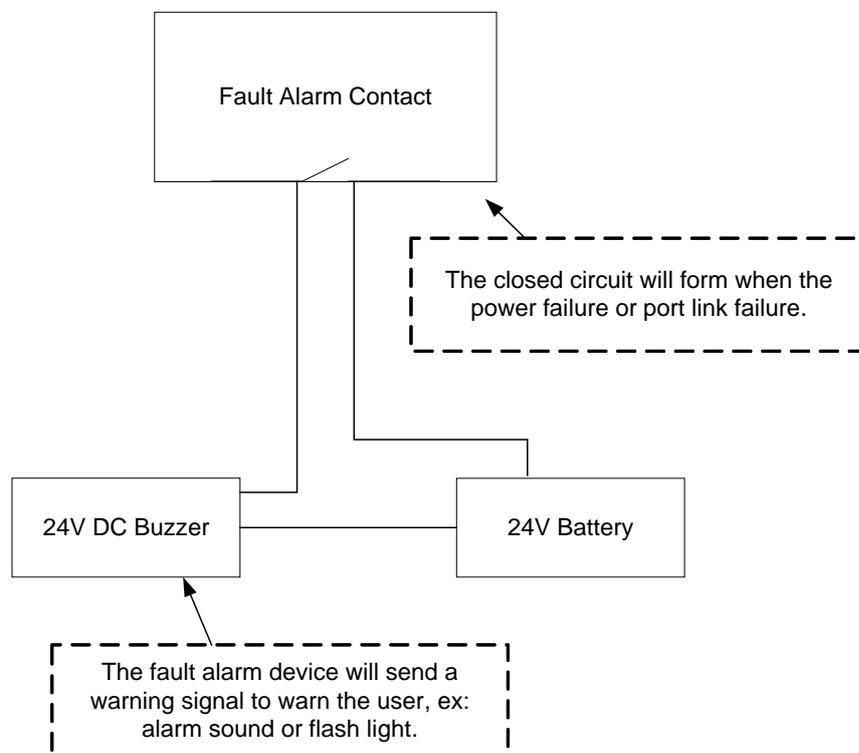


# Mounting Installation

---


## DIN-Rail Mounting

The DIN-Rail is screwed on the industrial switch when out of factory. If the DIN-Rail is not screwed on the industrial switch, please see the following pictures to screw the DIN-Rail on the switch. Follow the below steps to hang the industrial switch.

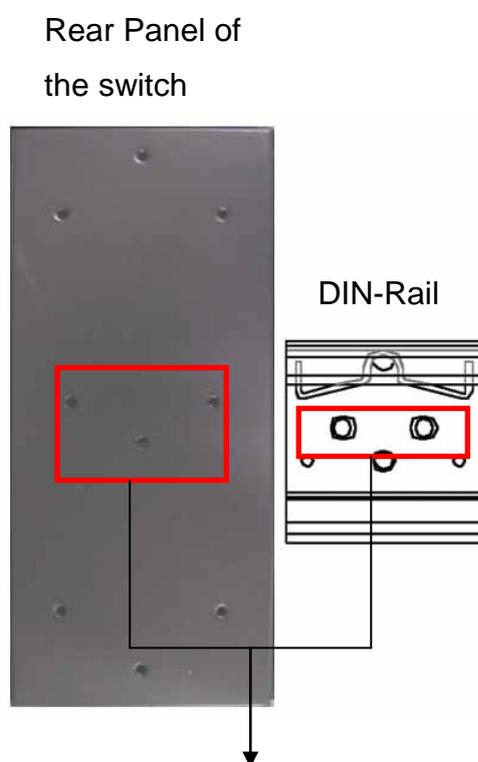


1. Use the screws to screw the DIN-Rail on the industrial switch
2. To remove the DIN-Rail, reverse the step 1.

1. First, insert the top of DIN-Rail into the track.

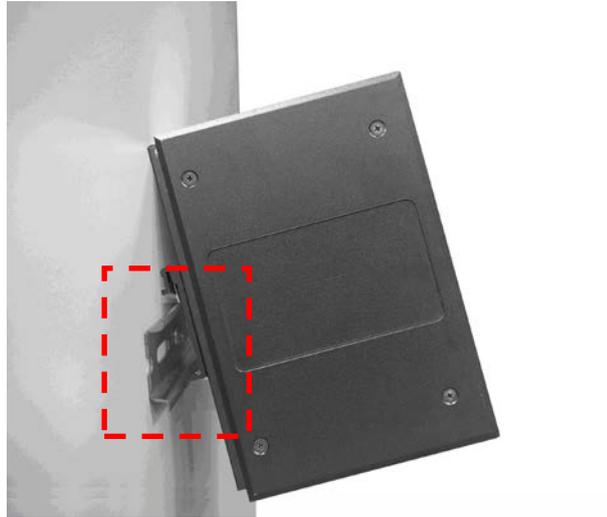

2. Then, lightly push the DIN-Rail into the track.

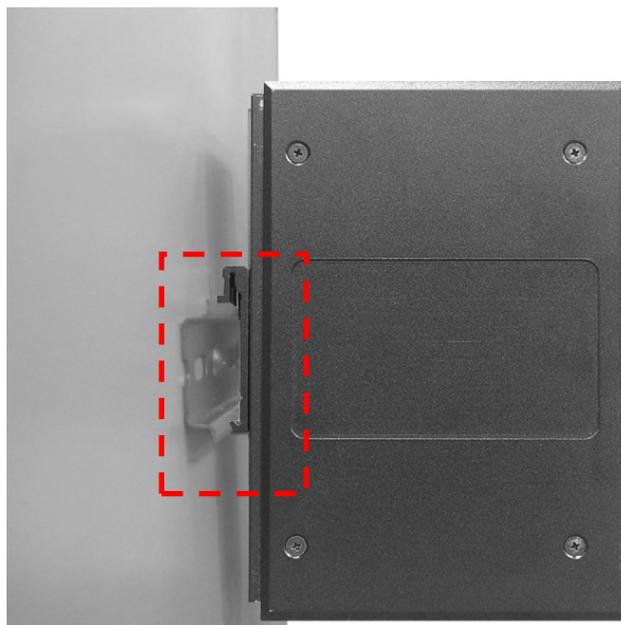


3. Check if the DIN-Rail is tightened on the track or not.
4. To remove the industrial switch from the track, reverse steps above.

## Wall Mount Plate Mounting

---

Follow the below steps to mount the industrial switch with wall mount plate.

1. Remove the DIN-Rail from the industrial switch; loose the screws to remove the DIN-Rail.
2. Place the wall mount plate on the rear panel of the industrial switch.
3. Use the screws to screw the wall mount plate on the industrial switch.
4. Use the hook holes at the corners of the wall mount plate to hang the industrial switch on the wall.
5. To remove the wall mount plate, reverse the steps above.

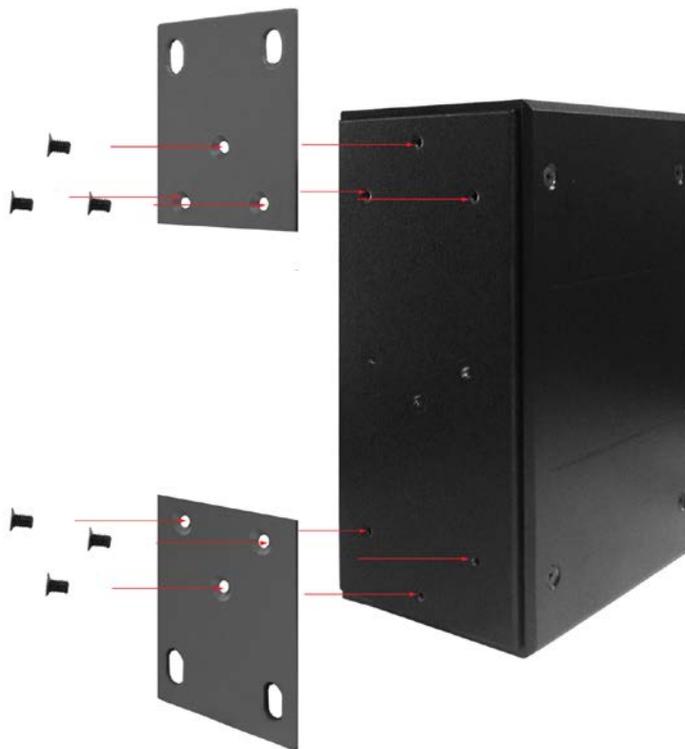

Screwing the wall mount plate on the Industrial media converter

# Hardware Installation

---

In this paragraph, we will describe how to install the 8 10/100TX plus 2 Gigabit Copper/Mini GBIC Managed Industrial Switch and the installation points to be attended to it.

## Installation Steps

1. Unpack the Industrial switch
2. Check if the DIN-Rail is screwed on the Industrial switch or not. If the DIN-Rail is not screwed on the Industrial switch, please refer to **DIN-Rail Mounting** section for DIN-Rail installation. If user want to wall mount the Industrial switch, then please refer to **Wall Mount Plate Mounting** section for wall mount plate installation.
3. To hang the Industrial switch on the DIN-Rail track or wall, please refer to the **Mounting Installation** section.
4. Power on the Industrial switch. Please refer to the **Wiring the Power Inputs** section for knowing the information about how to wire the power. The power LED on the Industrial switch will light up. Please refer to the **LED Indicators** section for indication of LED lights.
5. Prepare the twisted-pair, straight through Category 5 cable for Ethernet connection.
6. Insert one side of RJ-45 cable (category 5) into the Industrial switch Ethernet port (RJ-45 port) and another side of RJ-45 cable (category 5) to the network device's Ethernet port (RJ-45 port), ex: Switch PC or Server. The UTP port (RJ-45) LED on the Industrial switch will light up when the cable is connected with the network device. Please refer to the **LED Indicators** section for LED light indication.

---

**[NOTE]** Make sure that the connected network devices support MDI/MDI-X. If it does not support, then use the crossover category-5 cable.


---

7. When all connections are set and LED lights all show in normal, the installation is complete.

# Network Application


---

This chapter provides some sample applications to help user to have more actual idea of industrial switch function application. A sample application of the industrial switch is as below:

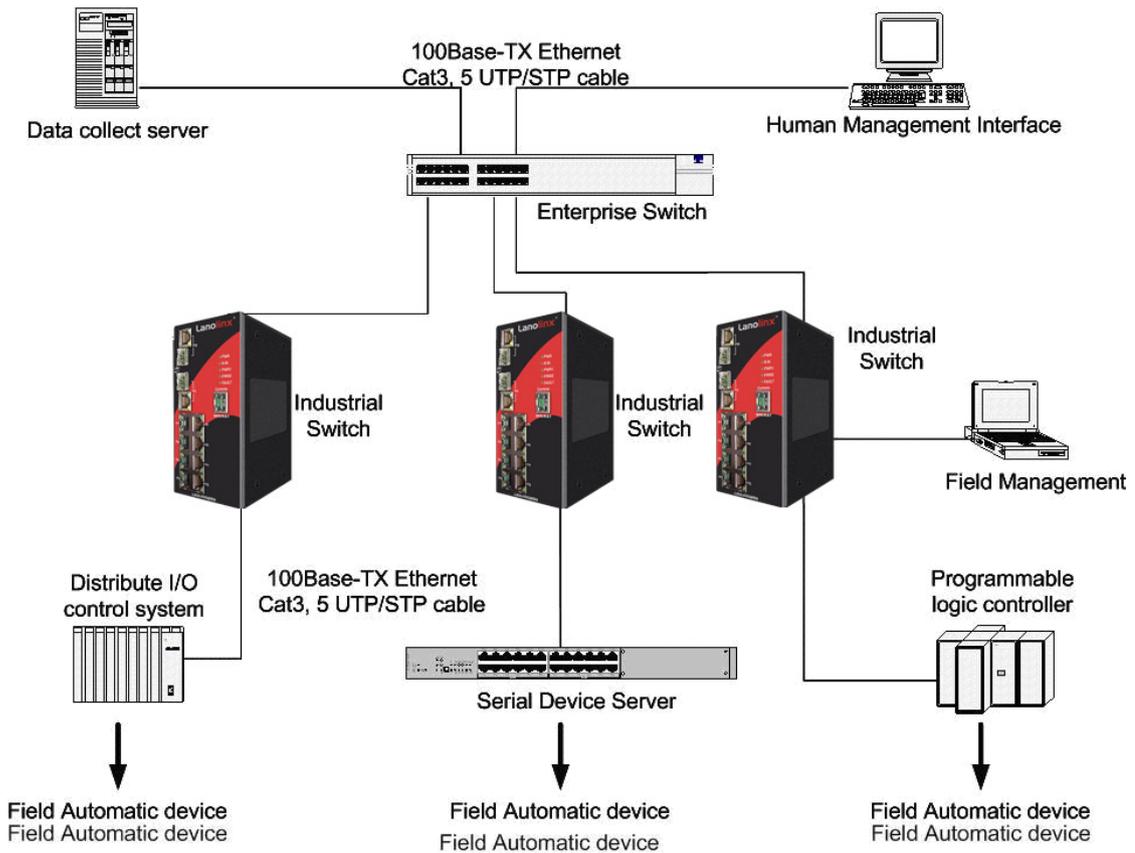


## Xtreme Ring Application

The industrial switch supports the Xtreme Ring protocol that can help the network system to recovery from network connection failure within 20ms or less, and make the network system more reliable. The Xtreme Ring algorithm is similar to Spanning Tree Protocol (STP) and Rapid STP (RSTP) algorithm but its recovery time is less than STP/RSTP. The following figure is a sample Xtreme Ring application.

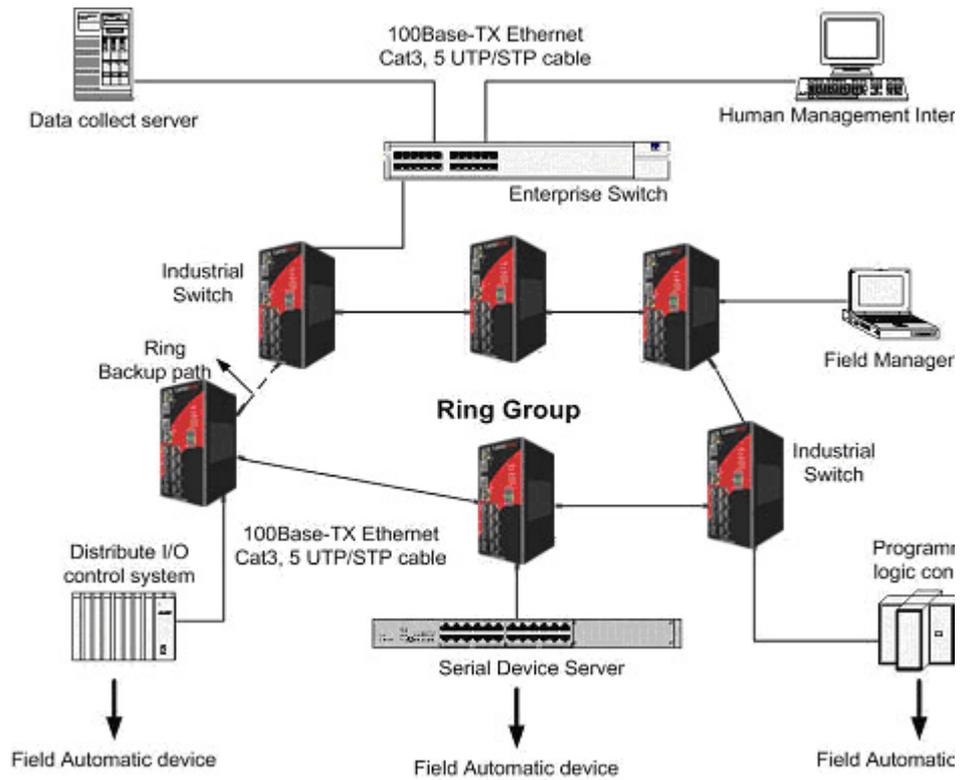

## Coupling Ring Application

In the network, it may have more than one Xtreme Ring group. By using the coupling ring function, it can connect each Xtreme Ring for the redundant backup. It can ensure the transmissions between two ring groups not to fail. The following figure is a sample of coupling ring application.

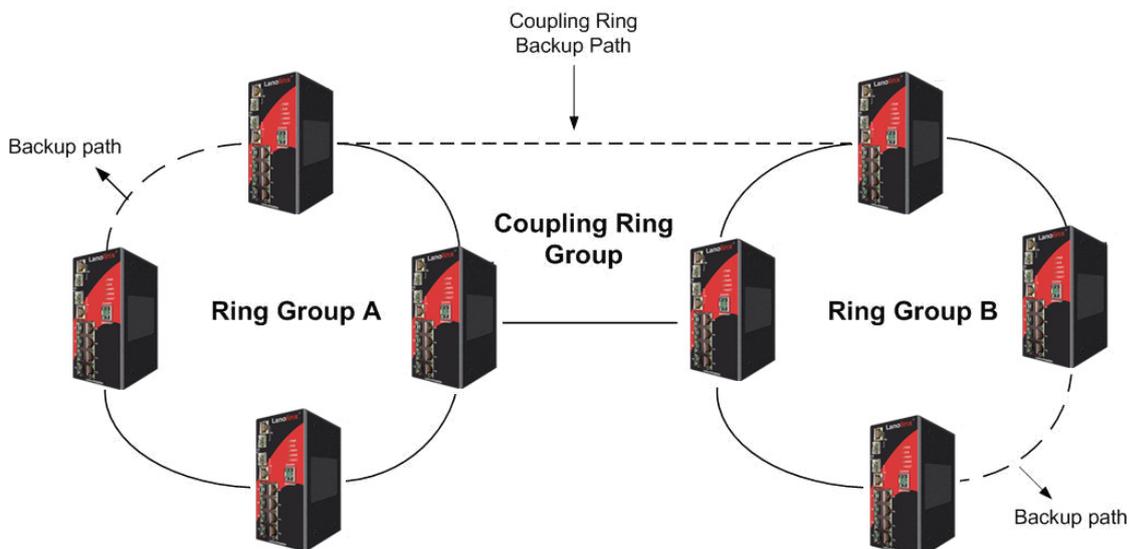


## Dual Homing Application

Dual Homing function is to prevent the connection loss from between Xtreme Ring group and upper level/core switch. Assign two ports to be the Dual Homing port that is backup port in the Xtreme Ring group. The Dual Homing function only works when the Xtreme Ring function is active. Each Xtreme Ring group only has one Dual Homing port.

---

**[NOTE]** In Dual Homing application architecture, the upper level switches need to enable the Rapid Spanning Tree Protocol.

---

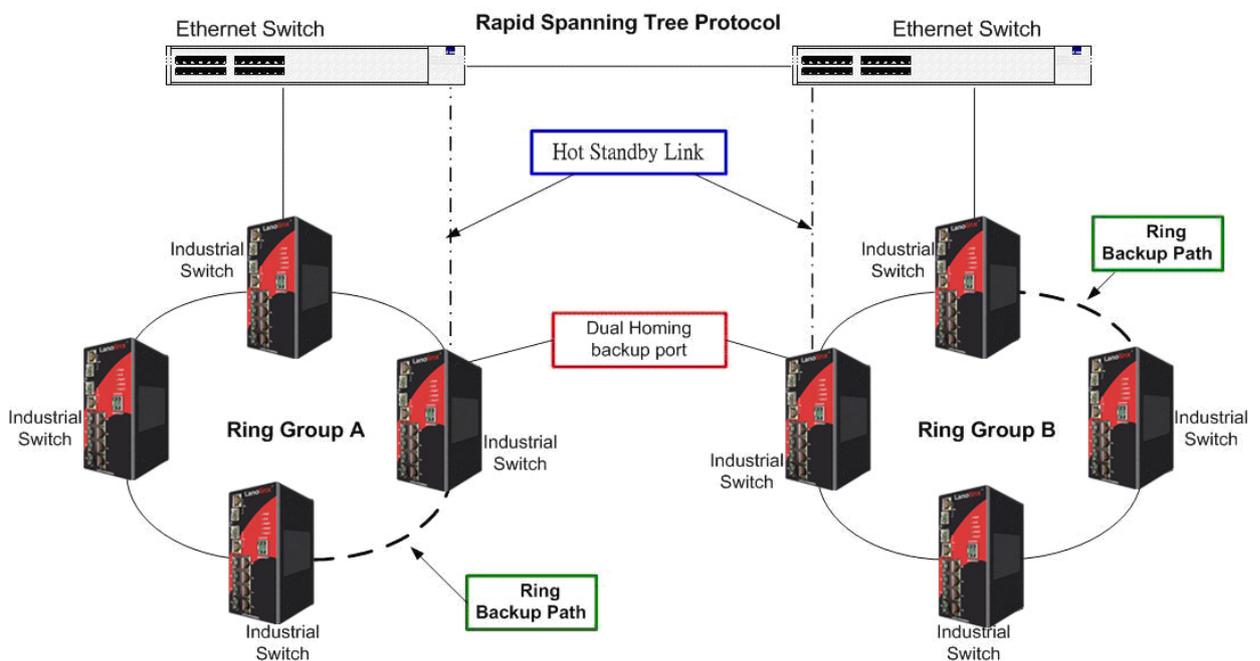

# Console Management

---

## Connecting to the Console Port

The supplied cable which one end is RS-232 connector and the other end is RJ-45 connector. Attach the end of RS-232 connector to PC or terminal and the end of RJ-45 connector to the console port of switch. The connected terminal or PC must support the terminal emulation program.

## Login in the Console Interface

When the connection between Switch and PC is ready, turn on the PC and run a terminal emulation program or **Hyper Terminal** and configure its **communication parameters** to match the following default characteristics of the console port:


**Baud Rate: 9600 bps**

**Data Bits: 8**

**Parity: none**


**Stop Bit: 1**

**Flow control: None**

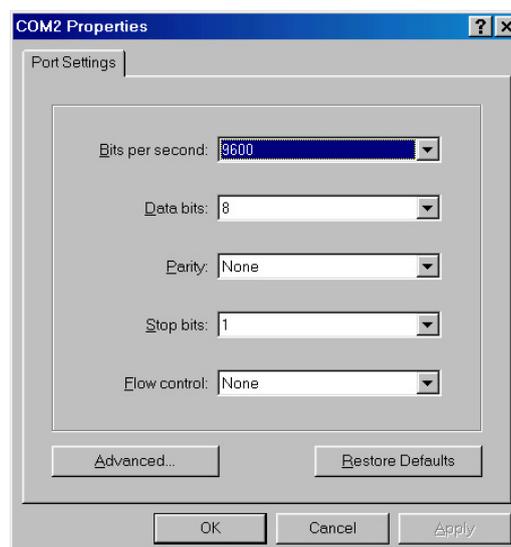

The settings of communication parameters

After finishing the parameter settings, click **OK**. When the blank screen shows up, press Enter key to bring out the login prompt. Key in the **root**(default value) for the both User name and Password (use **Enter** key to switch), then press Enter key and the Main Menu of console management appears. Please see below figure for login screen.

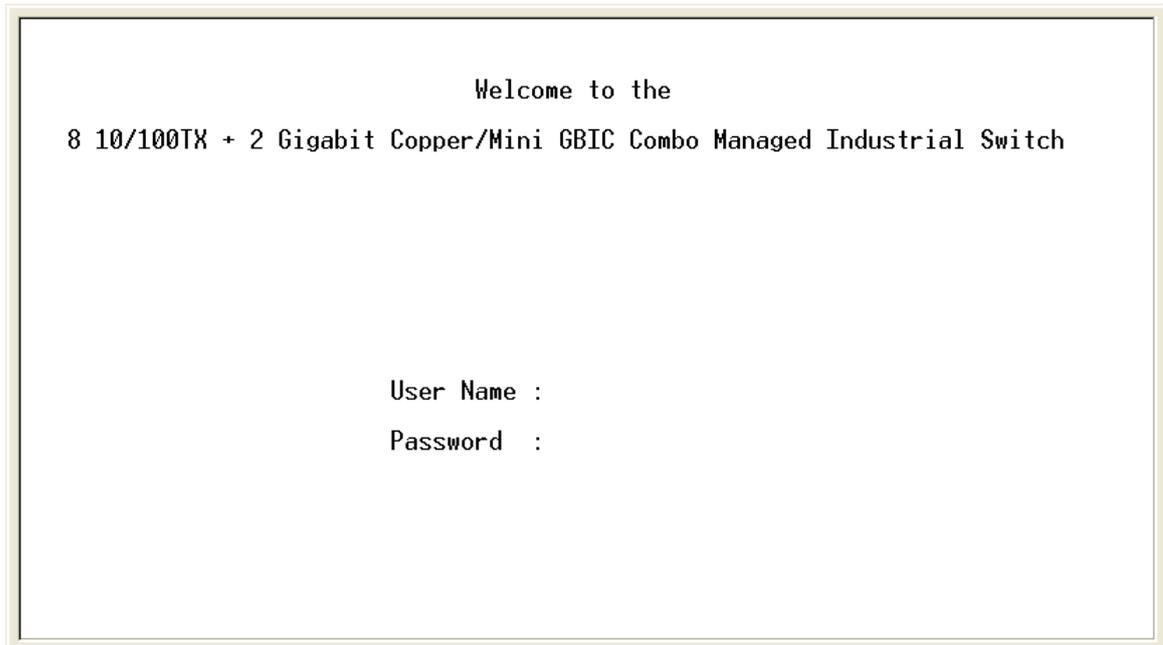

Console login interface

## CLI Management

The system supports the console management – CLI command. After you login to the system, you will see a command prompt. To enter CLI management interface, type in **enable** command.

```
switch>enable
switch#_
```

CLI command interface

The following table lists the CLI commands and description.

### Commands Level

Modes	Access Method	Prompt	Exit Method	About This Mode <sup>1</sup>
User EXEC	Begin a session with your switch.	switch>	Enter logout or quit.	The user commands available at the user level are a subset of those available at the privileged level. Use this mode to <ul style="list-style-type: none"> <li>• Perform basic tests.</li> <li>• Displays system information.</li> </ul>
Privileged EXEC	Enter the enable command	switch#	Enter disable to exit.	The privileged command is advance mode

	while in user EXEC mode.			Privileged this mode to <ul style="list-style-type: none"> <li>•Displays advance function status</li> <li>• Save configures</li> </ul>
Global Configuration	Enter the configure command while in privileged EXEC mode.	switch (config)#	To exit to privileged EXEC mode, enter exit or end	Use this mode to configure parameters that apply to your switch as a whole.
VLAN database	Enter the vlan database command while in privileged EXEC mode.	switch (vlan)#	To exit to user EXEC mode, enter exit.	Use this mode to configure VLAN-specific parameters.
Interface configuration	Enter the interface of fast Ethernet command (with a specific interface) while in global configuration mode	switch (config-if)#	To exit to global configuration mode, enter exit. To exist to privileged EXEC mode, or end.	Use this mode to configure parameters for the switch and Ethernet ports.

## Commands Set List

### System Commands Set

Commands	Level	Description	Example
<b>show config</b>	<b>E</b>	Show switch configuration	switch> <b>show config</b>
<b>show terminal</b>	<b>P</b>	Show console information	switch# <b>show terminal</b>
<b>write memory</b>	<b>P</b>	Save user configuration into permanent memory (flash rom)	switch# <b>write memory</b>
<b>system name</b> [System Name]	<b>G</b>	Configure system name	switch(config)# <b>system name xxx</b>
<b>system location</b> [System Location]	<b>G</b>	Set switch system location string	switch(config)# <b>system location xxx</b>
<b>system description</b> [System Description]	<b>G</b>	Set switch system description string	switch(config)# <b>system description xxx</b>
<b>system contact</b> [System Contact]	<b>G</b>	Set switch system contact window string	switch(config)# <b>system contact xxx</b>
<b>show system-info</b>	<b>E</b>	Show system information	switch> <b>show system-info</b>
<b>ip address</b> [Ip-address] [Subnet-mask] [Gateway]	<b>G</b>	Configure the IP address of switch	switch(config)# <b>ip address 192.168.1.1 255.255.255.0 192.168.1.254</b>
<b>ip dhcp</b>	<b>G</b>	Enable DHCP client function of switch	switch(config)# <b>ip dhcp</b>
<b>show ip</b>	<b>P</b>	Show IP information of switch	switch# <b>show ip</b>
<b>no ip dhcp</b>	<b>G</b>	Disable DHCP client function of switch	switch(config)# <b>no ip dhcp</b>

<b>reload</b>	<b>G</b>	Halt and perform a cold restart	switch(config)# <b>reload</b>
<b>default</b>	<b>G</b>	Restore to default	Switch(config)# <b>default</b>
<b>admin username</b> [Username]	<b>G</b>	Changes a login username. (maximum 10 words)	switch(config)# <b>admin username</b> <b>xxxxxx</b>
<b>admin password</b> [Password]	<b>G</b>	Specifies a password (maximum 10 words)	switch(config)# <b>admin password</b> <b>xxxxxx</b>
<b>show admin</b>	<b>P</b>	Show administrator information	switch# <b>show admin</b>
<b>dhcpserver enable</b>	<b>G</b>	Enable DHCP Server	switch(config)# <b>dhcpserver enable</b>
<b>Dhcpserver disable</b>	<b>G</b>	Disable DHCP Server	switch(config)# <b>no dhcpserver</b>
<b>dhcpserver lowip</b> [Low IP]	<b>G</b>	Configure low IP address for IP pool	switch(config)# <b>dhcpserver lowip</b> <b>192.168.1.100</b>
<b>dhcpserver highip</b> [High IP]	<b>G</b>	Configure high IP address for IP pool	switch(config)# <b>dhcpserver highip</b> <b>192.168.1.200</b>
<b>dhcpserver subnetmask</b> [Subnet mask]	<b>G</b>	Configure subnet mask for DHCP clients	switch(config)# <b>dhcpserver</b> <b>subnetmask 255.255.255.0</b>
<b>dhcpserver gateway</b> [Gateway]	<b>G</b>	Configure gateway for DHCP clients	switch(config)# <b>dhcpserver</b> <b>gateway 192.168.1.254</b>
<b>dhcpserver dnsip</b> [DNS IP]	<b>G</b>	Configure DNS IP for DHCP clients	switch(config)# <b>dhcpserver dnsip</b> <b>192.168.1.1</b>
<b>dhcpserver leasetime</b> [Hours]	<b>G</b>	Configure lease time (in hour)	switch(config)# <b>dhcpserver</b> <b>leasetime 1</b>
<b>dhcpserver ipbinding</b> [IP address]	<b>I</b>	Set static IP for DHCP clients by port	switch(config)# <b>interface</b> <b>fastEthernet 2</b> switch(config)# <b>dhcpserver</b> <b>ipbinding 192.168.1.1</b>
<b>show dhcpserver configuration</b>	<b>P</b>	Show configuration of DHCP server	switch# <b>show dhcpserver</b> <b>configuration</b>
<b>show dhcpserver clients</b>	<b>P</b>	Show client entries of DHCP server	switch# <b>show dhcpserver clients</b>
<b>show dhcpserver ip-binding</b>	<b>P</b>	Show IP-Binding information of DHCP	switch# <b>show dhcpserver ip-</b> <b>binding</b>

		server	
<b>no dhcpserver</b>	<b>G</b>	Disable DHCP server function	switch(config)# <b>no dhcpserver</b>
<b>security enable</b>	<b>G</b>	Enable IP security function	switch(config)# <b>security enable</b>
<b>security http</b>	<b>G</b>	Enable IP security of HTTP server	switch(config)# <b>security http</b>
<b>security telnet</b>	<b>G</b>	Enable IP security of telnet server	switch(config)# <b>security telnet</b>
<b>security ip</b> [Index(1..10)] [IP Address]	<b>G</b>	Set the IP security list	switch(config)# <b>security ip 1 192.168.1.55</b>
<b>show security</b>	<b>P</b>	Show the information of IP security	switch# <b>show security</b>
<b>no security</b>	<b>G</b>	Disable IP security function	switch(config)# <b>no security</b>
<b>no security http</b>	<b>G</b>	Disable IP security of HTTP server	switch(config)# <b>no security http</b>
<b>no security telnet</b>	<b>G</b>	Disable IP security of telnet server	switch(config)# <b>no security telnet</b>

### Port Commands Set

Commands	Level	Description	Example
<b>interface fastEthernet</b> [Portid]	<b>G</b>	Choose the port for modification.	switch(config)# <b>interface fastEthernet 2</b>
<b>duplex</b> [full   half]	<b>I</b>	Use the duplex configuration command to specify the duplex mode of operation for Fast Ethernet.	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>duplex full</b>
<b>speed</b> [10 100 1000 auto]	<b>I</b>	Use the speed configuration command to specify the speed mode of	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>speed 100</b>

		operation for Fast Ethernet., the speed can't be set to 1000 if the port isn't a giga port..	
<b>no flowcontrol</b>	I	Disable flow control of interface	switch(config-if)# <b>no flowcontrol</b>
<b>security enable</b>	I	Enable security of interface	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>security enable</b>
<b>no security</b>	I	Disable security of interface	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>no security</b>
<b>bandwidth type all</b>	I	Set interface ingress limit frame type to "accept all frame"	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>bandwidth type all</b>
<b>bandwidth type broadcast-multicast-flooded-unicast</b>	I	Set interface ingress limit frame type to "accept broadcast, multicast, and flooded unicast frame"	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>bandwidth type broadcast-multicast-flooded-unicast</b>
<b>bandwidth type broadcast-multicast</b>	I	Set interface ingress limit frame type to "accept broadcast and multicast frame"	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>bandwidth type broadcast-multicast</b>
<b>bandwidth type broadcast-only</b>	I	Set interface ingress limit frame type to "only accept broadcast frame"	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>bandwidth type broadcast-only</b>
<b>bandwidth in [Value]</b>	I	Set interface input bandwidth. Rate	switch(config)# <b>interface fastEthernet 2</b>

		Range is from 100 kbps to 102400 kbps or to 256000 kbps for giga ports, and zero means no limit.	switch(config-if)# <b>bandwidth in 100</b>
<b>bandwidth out</b> [Value]		Set interface output bandwidth. Rate Range is from 100 kbps to 102400 kbps or to 256000 kbps for giga ports, and zero means no limit.	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>bandwidth out 100</b>
<b>show bandwidth</b>	<b>I</b>	Show interfaces bandwidth control	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>show bandwidth</b>
<b>state</b> [Enable   Disable]	<b>I</b>	Use the state interface configuration command to specify the state mode of operation for Ethernet ports. Use the disable form of this command to disable the port.	switch(config)# <b>interface fastEthernet 2</b> (config-if)# <b>state Disable</b>
<b>show interface configuration</b>	<b>I</b>	show interface configuration status	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>show interface configuration</b>
<b>show interface status</b>	<b>I</b>	show interface actual status	switch(config)# <b>interface fastEthernet 2</b> (config-if)# <b>show interface status</b>

<b>show interface accounting</b>	<b>I</b>	show interface statistic counter	switch(config)# <b>interface fastEthernet 2</b> (config-if)# <b>show interface accounting</b>
<b>no accounting</b>	<b>I</b>	Clear interface accounting information	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>no accounting</b>

### Trunk Commands Set

Commands	Level	Description	Example
<b>aggregator priority</b> [1~65535]	<b>G</b>	Set port group system priority	switch(config)# <b>aggregator priority 22</b>
<b>aggregator activityport</b> [Group ID] [Port Numbers]	<b>G</b>	Set activity port	switch(config)# <b>aggregator activityport 2</b>
<b>aggregator group</b> [GroupID] [Port-list] <b>lACP</b> <b>workp</b> [Workport]	<b>G</b>	Assign a trunk group with LACP active. [GroupID] :1~3 [Port-list]:Member port list, This parameter could be a port range(ex.1-4) or a port list separate by a comma(ex.2, 3, 6) [Workport]: The amount of work ports, this value could not be less than zero or be large than the amount of member ports.	switch(config)# <b>aggregator group 1 1-4 lACP workp 2</b> or switch(config)# <b>aggregator group 2 1,4,3 lACP workp 3</b>

<b>aggregator group</b> [GroupID] [Port-list] <b>nolacp</b>	<b>G</b>	Assign a static trunk group. [GroupID] :1~3 [Port-list]:Member port list, This parameter could be a port range(ex.1-4) or a port list separate by a comma(ex.2, 3, 6)	switch(config)# <b>aggregator group 1 2-4 nolacp</b> or switch(config)# <b>aggregator group 1 3,1,2 nolacp</b>
<b>show aggregator</b>	<b>P</b>	Show the information of trunk group	switch# <b>show aggregator 1</b> or switch# <b>show aggregator 2</b> or switch# <b>show aggregator 3</b>
<b>no aggregator lacp</b> [GroupID]	<b>G</b>	Disable the LACP function of trunk group	switch(config)# <b>no aggregator lacp 1</b>
<b>no aggregator group</b> [GroupID]	<b>G</b>	Remove a trunk group	switch(config)# <b>no aggregator group 2</b>

## VLAN Commands Set

Commands	Level	Description	Example
<b>vlan database</b>	<b>P</b>	Enter VLAN configure mode	switch# <b>vlan database</b>
<b>Vlanmode</b> [portbase  802.1q   <b>gvrp</b> ]	<b>V</b>	To set switch VLAN mode.	switch(vlan)# <b>vlanmode portbase</b> or switch(vlan)# <b>vlanmode 802.1q</b> or switch(vlan)# <b>vlanmode gvrp</b>
<b>no vlan</b>	<b>V</b>	No VLAN	Switch(vlan)# <b>no vlan</b>
<b>Ported based VLAN configuration</b>			
<b>vlan port-based</b> <b>grpname</b> [Group Name]	<b>V</b>	Add new port based VALN	switch(vlan)# <b>vlan port-based grpname test grp id 2 port 2-4</b> or

<b>grp-id</b> [GroupID] <b>port</b> [PortNumbers]			switch(vlan)#vlan port-based grpname test grp-id 2 port 2,3,4
<b>show vlan</b> [GroupID] or <b>show vlan</b>	<b>V</b>	Show VLAN information	switch(vlan)# <b>show vlan 23</b>
<b>no vlan group</b> [GroupID]	<b>V</b>	Delete port base group ID	switch(vlan)# <b>no vlan group 2</b>
<b>IEEE 802.1Q VLAN</b>			
<b>vlan 8021q name</b> [GroupName] <b>vid</b> [VID]	<b>V</b>	Change the name of VLAN group, if the group didn't exist, this command can't be applied.	switch(vlan)# <b>vlan 8021q name</b> <b>test vid 22</b>
<b>vlan 8021q port</b> [PortNumber] <b>access-link untag</b> [UntaggedVID]	<b>V</b>	Assign a access link for VLAN by port, if the port belong to a trunk group, this command can't be applied.	switch(vlan)# <b>vlan 8021q port 3</b> <b>access-link untag 33</b>
<b>vlan 8021q port</b> [PortNumber] <b>trunk-link tag</b> [TaggedVID List]	<b>V</b>	Assign a trunk link for VLAN by port, if the port belong to a trunk group, this command can't be applied.	switch(vlan)# <b>vlan 8021q port 3</b> <b>trunk-link tag 2,3,6,99</b> or switch(vlan)# <b>vlan 8021q port 3</b> <b>trunk-link tag 3-20</b>
<b>vlan 8021q port</b> [PortNumber] <b>hybrid-link untag</b> [UntaggedVID] <b>tag</b> [TaggedVID List]	<b>V</b>	Assign a hybrid link for VLAN by port, if the port belong to a trunk group, this command can't be applied.	switch(vlan)# <b>vlan 8021q port 3</b> <b>hybrid-link untag 4 tag 3,6,8</b> or switch(vlan)# <b>vlan 8021q port 3</b> <b>hybrid-link untag 5 tag 6-8</b>
<b>vlan 8021q trunk</b> [PortNumber] <b>access-link untag</b> [UntaggedVID]	<b>V</b>	Assign a access link for VLAN by trunk group	switch(vlan)# <b>vlan 8021q trunk 3</b> <b>access-link untag 33</b>
<b>vlan 8021q trunk</b> [PortNumber]	<b>V</b>	Assign a trunk link for VLAN by trunk group	switch(vlan)# <b>vlan 8021q trunk 3</b>

<b>trunk-link tag</b> [TaggedVID List]			<b>trunk-link tag 2,3,6,99</b> or switch(vlan)# <b>vlan 8021q trunk 3</b> <b>trunk-link tag 3-20</b>
<b>vlan 8021q trunk</b> [PortNumber] <b>hybrid-link untag</b> [UntaggedVID] <b>tag</b> [TaggedVID List]	<b>V</b>	Assign a hybrid link for VLAN by trunk group	switch(vlan)# <b>vlan 8021q trunk 3</b> <b>hybrid-link untag 4 tag 3,6,8</b> or switch(vlan)# <b>vlan 8021q trunk 3</b> <b>hybrid-link untag 5 tag 6-8</b>
<b>show vlan</b> [GroupID] or <b>show vlan</b>	<b>V</b>	Show VLAN information	switch(vlan)# <b>show vlan 23</b>
<b>no vlan group</b> [GroupID]	<b>V</b>	Delete port base group ID	switch(vlan)# <b>no vlan group 2</b>

## Spanning Tree Commands Set

Commands	Level	Description	Example
<b>spanning-tree enable</b>	<b>G</b>	Enable spanning tree	switch(config)# <b>spanning-tree enable</b>
<b>spanning-tree priority</b> [0~61440]	<b>G</b>	Configure spanning tree priority parameter	switch(config)# <b>spanning-tree priority 32767</b>
<b>spanning-tree max-age</b> [seconds]	<b>G</b>	Use the spanning-tree max-age global configuration command to change the interval between messages the spanning tree receives from the root switch. If a switch does not receive a bridge protocol data unit (BPDU) message from the root switch within	switch(config)# <b>spanning-tree max-age 15</b>

		<p>this interval, it recomputed the Spanning Tree Protocol (STP) topology.</p>	
<p><b>spanning-tree hello-time</b> [seconds]</p>	<b>G</b>	<p>Use the spanning-tree hello-time global configuration command to specify the interval between hello bridge protocol data units (BPDUs).</p>	<p>switch(config)#<b>spanning-tree hello-time 3</b></p>
<p><b>spanning-tree forward-time</b> [seconds]</p>	<b>G</b>	<p>Use the spanning-tree forward-time global configuration command to set the forwarding-time for the specified spanning-tree instances. The forwarding time determines how long each of the listening and learning states last before the port begins forwarding.</p>	<p>switch(config)#<b>spanning-tree forward-time 20</b></p>
<p><b>stp-path-cost</b> [1~200000000]</p>	<b>I</b>	<p>Use the spanning-tree cost interface configuration command to set the path cost for Spanning Tree Protocol (STP) calculations. In the</p>	<p>switch(config)#<b>interface fastEthernet 2</b> switch(config-if)#<b>stp-path-cost 20</b></p>

		event of a loop, spanning tree considers the path cost when selecting an interface to place into the forwarding state.	
<b>stp-path-priority</b> <b>[Port Priority]</b>	<b>I</b>	Use the spanning-tree port-priority interface configuration command to configure a port priority that is used when two switches tie for position as the root switch.	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>stp-path-priority 128</b>
<b>stp-admin-p2p</b> <b>[Auto True False]</b>	<b>I</b>	Admin P2P of STP priority on this interface.	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>stp-admin-p2p Auto</b>
<b>stp-admin-edge</b> <b>[True False]</b>	<b>I</b>	Admin Edge of STP priority on this interface.	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>stp-admin-edge True</b>
<b>stp-admin-non-stp</b> <b>[True False]</b>	<b>I</b>	Admin NonSTP of STP priority on this interface.	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>stp-admin-non-stp False</b>
<b>show spanning-tree</b>	<b>E</b>	Displays a summary of the spanning-tree states.	switch> <b>show spanning-tree</b>
<b>no spanning-tree</b>	<b>G</b>	Disable spanning-tree.	switch(config)# <b>no spanning-tree</b>

## QOS Commands Set

Commands	Level	Description	Example
<b>qos policy</b> [weighted-fair strict]	<b>G</b>	Select QOS policy scheduling	switch(config)# <b>qos policy weighted-fair</b>
<b>qos prioritytype</b> [port-based cos-only tos-only cos-first tos-first]	<b>G</b>	Setting of QOS priority type	switch(config)# <b>qos prioritytype</b>
<b>qos priority portbased</b> [Port] [lowest low middle high]	<b>G</b>	Configure Port-based Priority	switch(config)# <b>qos priority portbased 1 low</b>
<b>qos priority cos</b> [Priority][lowest low middle high]	<b>G</b>	Configure COS Priority	switch(config)# <b>qos priority cos 0 middle</b>
<b>qos priority tos</b> [Priority][lowest low middle high]	<b>G</b>	Configure TOS Priority	switch(config)# <b>qos priority tos 3 high</b>
<b>show qos</b>	<b>P</b>	Displays the information of QoS configuration	Switch# <b>show qos</b>
<b>no qos</b>	<b>G</b>	Disable QoS function	switch(config)# <b>no qos</b>

## IGMP Commands Set

Commands	Level	Description	Example
<b>igmp enable</b>	<b>G</b>	Enable IGMP snooping function	switch(config)# <b>igmp enable</b>
<b>igmp-query auto</b>	<b>G</b>	Set IGMP query to auto mode	switch(config)# <b>igmp-query auto</b>
<b>igmp-query force</b>	<b>G</b>	Set IGMP query to force mode	switch(config)# <b>igmp-query force</b>
<b>show igmp configuration</b>	<b>P</b>	Displays the details of an IGMP configuration.	switch# <b>show igmp configuration</b>
<b>show igmp multi</b>	<b>P</b>	Displays the details of an IGMP snooping entries.	switch# <b>show igmp multi</b>
<b>no igmp</b>	<b>G</b>	Disable IGMP snooping function	switch(config)# <b>no igmp</b>
<b>no igmp-query</b>	<b>G</b>	Disable IGMP query	switch# <b>no igmp-query</b>

## Mac / Filter Table Commands Set

Commands	Level	Description	Example
<b>mac-address-table static hwaddr</b> [MAC]	<b>I</b>	Configure MAC address table of interface (static).	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>mac-address-table static hwaddr 000012345678</b>
<b>mac-address-table filter hwaddr</b> [MAC]	<b>G</b>	Configure MAC address table(filter)	switch(config)# <b>mac-address-table filter hwaddr 000012348678</b>
<b>show mac-address-table</b>	<b>P</b>	Show all MAC address table	switch# <b>show mac-address-table</b>
<b>show mac-address-table static</b>	<b>P</b>	Show static MAC address table	switch# <b>show mac-address-table static</b>
<b>show mac-address-table filter</b>	<b>P</b>	Show filter MAC address table.	switch# <b>show mac-address-table filter</b>
<b>no mac-address-table static hwaddr</b> [MAC]	<b>I</b>	Remove an entry of MAC address table of interface (static)	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>no mac-address-table static hwaddr 000012345678</b>
<b>no mac-address-table filter hwaddr</b> [MAC]	<b>G</b>	Remove an entry of MAC address table (filter)	switch(config)# <b>no mac-address-table filter hwaddr 000012348678</b>
<b>no mac-address-table</b>	<b>G</b>	Remove dynamic entry of MAC address table	switch(config)# <b>no mac-address-table</b>

## SNMP Commands Set

Commands	Level	Description	Example
<b>snmp system-name</b> [System Name]	<b>G</b>	Set SNMP agent system name	switch(config)# <b>snmp system-name I2switch</b>
<b>snmp system-location</b>	<b>G</b>	Set SNMP agent	switch(config)# <b>snmp system-</b>

[System Location]		system location	<b>location lab</b>
<b>snmp system-contact</b> [System Contact]	<b>G</b>	Set SNMP agent system contact	switch(config)# <b>snmp system-contact where</b>
<b>snmp agent-mode</b> [v1v2c v3 v1v2cv3]	<b>G</b>	Select the agent mode of SNMP	switch(config)# <b>snmp agent-mode v1v2cv3</b>
<b>snmp community-strings</b> [Community] <b>right</b> [RO/RW]	<b>G</b>	Add SNMP community string.	switch(config)# <b>snmp community-strings public right rw</b>
<b>snmp-server host</b> [IP address] <b>community</b> [Community-string] <b>trap-version</b> [v1 v2c]	<b>G</b>	Configure SNMP server host information and community string	switch(config)# <b>snmp-server host 192.168.1.50 community public trap-version v1 (remove)</b> Switch(config)# <b>no snmp-server host 192.168.1.50</b>
<b>snmpv3 context-name</b> [Context Name ]	<b>G</b>	Configure the context name	switch(config)# <b>snmpv3 context-name Test</b>
<b>snmpv3 user</b> [User Name] <b>group</b> [Group Name] <b>password</b> [Authentication Password] [Privacy Password]	<b>G</b>	Configure the userprofile for SNMPV3 agent. Privacy password could be empty.	switch(config)# <b>snmpv3 user test01 group G1 password AuthPW PrivPW</b>
<b>snmpv3 access context-name</b> [Context Name ] <b>group</b> [Group Name ] <b>security-level</b> [NoAuthNoPriv AuthNoPriv AuthPriv]	<b>G</b>	Configure the access table of SNMPV3 agent	switch(config)# <b>snmpv3 access context-name Test group G1 security-level AuthPriv match-rule Exact views V1 V1 V1</b>

<b>match-rule</b> [Exact Prefix] <b>views</b> [Read View Name] [Write View Name] [Notify View Name]			
<b>snmpv3 mibview view</b> [View Name] <b>type</b> [Excluded Included] <b>sub-oid</b> [OID]	<b>G</b>	Configure the mibview table of SNMPV3 agent	switch(config)# <b>snmpv3 mibview view V1 type Excluded sub-oid 1.3.6.1</b>
<b>show snmp</b>	<b>P</b>	Show SNMP configuration	switch# <b>show snmp</b>
<b>no snmp community-strings</b> [Community]	<b>G</b>	Remove the specified community.	switch(config)# <b>no snmp community-strings public</b>
<b>no snmp-server host</b> [Host-address]	<b>G</b>	Remove the SNMP server host.	switch(config)# <b>no snmp-server 192.168.1.50</b>
<b>no snmpv3 user</b> [User Name]	<b>G</b>	Remove specified user of SNMPv3 agent.	switch(config)# <b>no snmpv3 user Test</b>
<b>no snmpv3 access</b> <b>context-name</b> [Context Name ] <b>group</b> [Group Name ] <b>security-level</b> [NoAuthNoPriv AuthNoPriv AuthPriv] <b>match-rule</b> [Exact Prefix] <b>views</b> [Read View Name]	<b>G</b>	Remove specified access table of SNMPv3 agent.	switch(config)# <b>no snmpv3 access context-name Test group G1 security-level AuthPriv match-rule Exact views V1 V1 V1</b>

[Write View Name] [Notify View Name]			
<b>no snmpv3 mibview view</b> [View Name] <b>type</b> [Excluded Included] <b>sub-oid</b> [OID]	<b>G</b>	Remove specified mibview table of SNMPV3 agent.	switch(config)# <b>no snmpv3 mibview view V1 type Excluded sub-oid 1.3.6.1</b>

### Port Mirroring Commands Set

Commands	Level	Description	Example
<b>monitor rx</b>	<b>G</b>	Set RX destination port of monitor function	switch(config)# <b>monitor rx</b>
<b>monitor tx</b>	<b>G</b>	Set TX destination port of monitor function	switch(config)# <b>monitor tx</b>
<b>show monitor</b>	<b>P</b>	Show port monitor information	switch# <b>show monitor</b>
<b>monitor</b> [RX TX Both]	<b>I</b>	Configure source port of monitor function	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>monitor RX</b>
<b>show monitor</b>	<b>I</b>	Show port monitor information	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>show monitor</b>
<b>no monitor</b>	<b>I</b>	Disable source port of monitor function	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>no monitor</b>

### 802.1x Commands Set

Commands	Level	Description	Example
----------	-------	-------------	---------

<b>8021x enable</b>	<b>G</b>	Use the 802.1x global configuration command to enable 802.1x protocols.	switch(config)# <b>8021x enable</b>
<b>8021x system radiousip</b> [IP address]	<b>G</b>	Use the 802.1x system radious IP global configuration command to change the radious server IP.	switch(config)# <b>8021x system radiousip 192.168.1.1</b>
<b>8021x system serverport</b> [port ID]	<b>G</b>	Use the 802.1x system server port global configuration command to change the radious server port	switch(config)# <b>8021x system serverport 1815</b>
<b>8021x system accountport</b> [port ID]	<b>G</b>	Use the 802.1x system account port global configuration command to change the accounting port	switch(config)# <b>8021x system accountport 1816</b>
<b>8021x system sharekey</b> [ID]	<b>G</b>	Use the 802.1x system share key global configuration command to change the shared key value.	switch(config)# <b>8021x system sharekey 123456</b>
<b>8021x system nasid</b> [words]	<b>G</b>	Use the 802.1x system nasid global configuration command to change the NAS ID	switch(config)# <b>8021x system nasid test1</b>
<b>8021x misc quietperiod</b> [sec.]	<b>G</b>	Use the 802.1x misc quiet period global configuration command to specify	switch(config)# <b>8021x misc quietperiod 10</b>

		the quiet period value of the switch.	
<b>8021x misc txperiod</b> [sec.]	<b>G</b>	Use the 802.1x misc TX period global configuration command to set the TX period.	switch(config)# <b>8021x misc txperiod 5</b>
<b>8021x misc supportimeout</b> [sec.]	<b>G</b>	Use the 802.1x misc supp timeout global configuration command to set the supplicant timeout.	switch(config)# <b>8021x misc supportimeout 20</b>
<b>8021x misc servertimeout</b> [sec.]	<b>G</b>	Use the 802.1x misc server timeout global configuration command to set the server timeout.	switch(config)# <b>8021x misc servertimeout 20</b>
<b>8021x misc maxrequest</b> [number]	<b>G</b>	Use the 802.1x misc max request global configuration command to set the MAX requests.	switch(config)# <b>8021x misc maxrequest 3</b>
<b>8021x misc reauthperiod</b> [sec.]	<b>G</b>	Use the 802.1x misc reauth period global configuration command to set the reauth period.	switch(config)# <b>8021x misc reauthperiod 3000</b>
<b>8021x portstate</b> [disable   reject   accept   authorize]	<b>I</b>	Use the 802.1x port state interface configuration command to set the	switch(config)# <b>interface fastethernet 3</b> switch(config-if)# <b>8021x portstate accept</b>

		state of the selected port.	
<b>show 8021x</b>	<b>E</b>	Displays a summary of the 802.1x properties and also the port sates.	switch> <b>show 8021x</b>
<b>no 8021x</b>	<b>G</b>	Disable 802.1x function	switch(config)# <b>no 8021x</b>

### TFTP Commands Set

Commands	Level	Description	Defaults Example
<b>backup</b> <b>flash:backup_cfg</b>	<b>G</b>	Save configuration to TFTP and need to specify the IP of TFTP server and the file name of image.	switch(config)# <b>backup</b> <b>flash:backup_cfg</b>
<b>restore</b> <b>flash:restore_cfg</b>	<b>G</b>	Get configuration from TFTP server and need to specify the IP of TFTP server and the file name of image.	switch(config)# <b>restore</b> <b>flash:restore_cfg</b>
<b>upgrade</b> <b>flash:upgrade_fw</b>	<b>G</b>	Upgrade firmware by TFTP and need to specify the IP of TFTP server and the file name of image.	switch(config)# <b>upgrade</b> <b>lash:upgrade_fw</b>

### SystemLog, SMTP and Event Commands Set

Commands	Level	Description	Example
<b>systemlog ip</b> [IP address]	<b>G</b>	Set System log server IP address.	switch(config)# <b>systemlog ip</b> <b>192.168.1.100</b>
<b>systemlog mode</b> [client server both]	<b>G</b>	Specified the log mode	switch(config)# <b>systemlog mode</b> <b>both</b>

<b>show systemlog</b>	<b>E</b>	Displays system log.	Switch> <b>show systemlog</b>
<b>show systemlog</b>	<b>P</b>	Show system log client & server information	switch# <b>show systemlog</b>
<b>no systemlog</b>	<b>G</b>	Disable systemlog functon	switch(config)# <b>no systemlog</b>
<b>smtp enable</b>	<b>G</b>	Enable SMTP function	switch(config)# <b>smtp enable</b>
<b>smtp serverip</b> [IP address]	<b>G</b>	Configure SMTP server IP	switch(config)# <b>smtp serverip 192.168.1.5</b>
<b>smtp authentication</b>	<b>G</b>	Enable SMTP authentication	switch(config)# <b>smtp authentication</b>
<b>smtp account</b> [account]	<b>G</b>	Configure authentication account	switch(config)# <b>smtp account User</b>
<b>smtp password</b> [password]	<b>G</b>	Configure authentication password	switch(config)# <b>smtp password</b>
<b>smtp rcptemail</b> [Index] [Email address]	<b>G</b>	Configure Rcpt e-mail Address	switch(config)# <b>smtp rcptemail 1 <a href="mailto:Alert@test.com">Alert@test.com</a></b>
<b>show smtp</b>	<b>P</b>	Show the information of SMTP	switch# <b>show smtp</b>
<b>no smtp</b>	<b>G</b>	Disable SMTP function	switch(config)# <b>no smtp</b>
<b>event device-cold-start</b> [Systemlog SMTP Both]	<b>G</b>	Set cold start event type	switch(config)# <b>event device-cold-start both</b>
<b>event authentication-failure</b> [Systemlog SMTP Both]	<b>G</b>	Set Authentication failure event type	switch(config)# <b>event authentication-failure both</b>
<b>event X-ring topology-change</b> [Systemlog SMTP Both]	<b>G</b>	Set Xtreme Ring topology changed event type	switch(config)# <b>event X-ring topology-change both</b>
<b>event systemlog</b> [Link-UP Link-Down Both]	<b>I</b>	Set port event for system log	switch(config)# <b>interface fastethernet 3</b> switch(config-if)# <b>event systemlog</b>

			<b>both</b>
<b>event smtp</b> [Link-UP Link-Down Both]	<b>I</b>	Set port event for SMTP	switch(config)# <b>interface fastethernet 3</b> switch(config-if)# <b>event smtp both</b>
<b>show event</b>	<b>P</b>	Show event selection	switch# <b>show event</b>
<b>no event device-cold-start</b>	<b>G</b>	Disable cold start event type	switch(config)# <b>no event device-cold-start</b>
<b>no event authentication-failure</b>	<b>G</b>	Disable Authentication failure event typ	switch(config)# <b>no event authentication-failure</b>
<b>no event X-ring topology-change</b>	<b>G</b>	Disable Xtreme Ring topology changed event type	switch(config)# <b>no event X-ring topology-change</b>
<b>no event systemlog</b>	<b>I</b>	Disable port event for system log	switch(config)# <b>interface fastethernet 3</b> switch(config-if)# <b>no event systemlog</b>
<b>no event smpt</b>	<b>I</b>	Disable port event for SMTP	switch(config)# <b>interface fastethernet 3</b> switch(config-if)# <b>no event smpt</b>
<b>show systemlog</b>	<b>P</b>	Show system log client & server information	switch# <b>show systemlog</b>

## SNTP Commands Set

Commands	Level	Description	Example
<b>sntp enable</b>	<b>G</b>	Enable SNTP function	switch(config)# <b>sntp enable</b>
<b>sntp daylight</b>	<b>G</b>	Enable daylight saving time, if SNTP function is inactive, this command can't be applied.	switch(config)# <b>sntp daylight</b>
<b>sntp daylight-period</b> [Start time] [End time]	<b>G</b>	Set period of daylight saving time, if SNTP	switch(config)# <b>sntp daylight-period 20060101-01:01</b>

		function is inactive, this command can't be applied. Parameter format: [yyyymmdd-hh:mm]	<b>20060202-01-01</b>
<b>sntp daylight-offset</b> [Minute]	<b>G</b>	Set offset of daylight saving time, if SNTP function is inactive, this command can't be applied.	switch(config)# <b>sntp daylight-offset 3</b>
<b>sntp ip</b> [IP]	<b>G</b>	Set SNTP server IP, if SNTP function is inactive, this command can't be applied.	switch(config)# <b>sntp ip 192.169.1.1</b>
<b>sntp timezone</b> [Timezone]	<b>G</b>	Set timezone index, use "show sntp timzezone" command to get more information of index number	switch(config)# <b>sntp timezone 22</b>
<b>show sntp</b>	<b>P</b>	Show SNTP information	switch# <b>show sntp</b>
<b>show sntp timezone</b>	<b>P</b>	Show index number of time zone list	switch# <b>show sntp timezone</b>
<b>no sntp</b>	<b>G</b>	Disable SNTP function	switch(config)# <b>no sntp</b>
<b>no sntp daylight</b>	<b>G</b>	Disable daylight saving time	switch(config)# <b>no sntp daylight</b>

### Xtreme Ring Commands Set

Commands	Level	Description	Example
<b>Xring enable</b>	<b>G</b>	Enable Xtreme Ring	switch(config)# <b>Xring enable</b>

<b>Xring master</b>	<b>G</b>	Enable ring master	switch(config)# <b>Xring master</b>
<b>Xring couplering</b>	<b>G</b>	Enable couple ring	switch(config)# <b>Xring couplering</b>
<b>Xring dualhoming</b>	<b>G</b>	Enable dual homing	switch(config)# <b>Xring dualhoming</b>
<b>Xring ringport</b> [1st Ring Port] [2nd Ring Port]	<b>G</b>	Configure 1st/2nd Ring Port	switch(config)# <b>Xring ringport 7 8</b>
<b>Xring couplingport</b> [Coupling Port]	<b>G</b>	Configure Coupling Port	switch(config)# <b>Xring couplingport 1</b>
<b>Xring controlport</b> [Control Port]	<b>G</b>	Configure Control Port	switch(config)# <b>Xring controlport 2</b>
<b>Xring homingport</b> [Dual Homing Port]	<b>G</b>	Configure Dual Homing Port	switch(config)# <b>Xring homingport 3</b>
<b>show Xring</b>	<b>P</b>	Show the information of Xtreme Ring	switch# <b>show Xring</b>
<b>no Xring</b>	<b>G</b>	Disable Xtreme Ring	switch(config)# <b>no Xring</b>
<b>no Xring master</b>	<b>G</b>	Disable ring master	switch(config)# <b>no Xring master</b>
<b>no Xring couplering</b>	<b>G</b>	Disable couple ring	switch(config)# <b>no Xring couplering</b>
<b>no Xring dualhoming</b>	<b>G</b>	Disable dual homing	switch(config)# <b>no Xring dualhoming</b>

# Web-Based Management

---

This section introduces the configuration and functions of the Web-Based management.

## About Web-based Management

On CPU board of the switch there is an embedded HTML web site residing in flash memory, which offers advanced management features and allow users to manage the switch from anywhere on the network through a standard browser such as Microsoft Internet Explorer.

The Web-Based Management supports Internet Explorer 6.0 or later version. And, it is applied for Java Applets for reducing network bandwidth consumption, enhance access speed and present an easy viewing screen.

## Preparing for Web Management

Before to use web management, install the industrial switch on the network and make sure that any one of PC on the network can connect with the industrial switch through the web browser. The industrial switch default value of IP, subnet mask, username and password is as below:

- IP Address: **192.168.1.5**
- Subnet Mask: **255.255.255.0**
- Default Gateway: **192.168.1.254**
- User Name: **admin**
- Password: **admin**

# System Login

1. Launch the Internet Explorer on the PC
2. Key in “http:// +” the IP address of the switch”, and then Press “**Enter**”.



3. The login screen will appear right after
4. Key in the user name and password. The default user name and password are the same as “**admin**”
5. Press “**Enter**” or “**OK**”, and then the home screen of the Web-based management appears as below:



Login screen

# Main interface

- [Open all](#)
-  Main Page
-  System
-  Port
-  Protocol
-  Security
-  Factory Default
-  Save Configuration
-  System Reboot

## Welcome to the Lanolinx Industrial Ethernet Switches

Main interface

# System Information

Assigning the system name, location and view the system information

- **System Name:** Assign the name of switch. The maximum length is 64 bytes
- **System Description:** Displays the description of switch. Read only cannot be modified
- **System Location:** Assign the switch physical location. The maximum length is 64 bytes
- **System Contact:** Enter the name of contact person or organization
- **Firmware Version:** Displays the switch’s firmware version
- **Kernel Version:** Displays the kernel software version
- **MAC Address:** Displays the unique hardware address assigned by manufacturer (default)

## System Information

<b>System Name</b>	LNK-1002GN
<b>System Description</b>	8 10/100TX + 2 Gigabit Copper/Mini GBIC Combo Managed Indus
<b>System Location</b>	
<b>System Contact</b>	

Apply Help

<b>Firmware Version</b>	v1.06
<b>Kernel Version</b>	v1.15
<b>MAC Address</b>	001122334455

System information interface

# IP Configuration

User can configure the IP Settings and DHCP client function

- **DHCP Client:** To enable or disable the DHCP client function. When DHCP client function is enabling, the industrial switch will be assigned the IP address from the network DHCP server. The default IP address will be replace by the DHCP server assigned IP address. After user click “Apply” button, a popup dialog show up. It is to

inform the user that when the DHCP client is enabling, the current IP will lose and user should find the new IP on the DHCP server.

- **IP Address:** Assign the IP address that the network is using. If DHCP client function is enabling, and then user don't need to assign the IP address. And, the network DHCP server will assign the IP address for the industrial switch and displays in this column. The default IP is 192.168.1.5.
- **Subnet Mask:** Assign the subnet mask of the IP address. If DHCP client function is enabling, and then user do not need to assign the subnet mask.
- **Gateway:** Assign the network gateway for the industrial switch. The default gateway is 192.168.1.254.
- **DNS1:** Assign the primary DNS IP address.
- **DNS2:** Assign the secondary DNS IP address.
- And then, click

## IP Configuration

DHCP Client :  ▾

<b>IP Address</b>	192.168.1.5
<b>Subnet Mask</b>	255.255.255.0
<b>Gateway</b>	192.168.1.254
<b>DNS1</b>	0.0.0.0
<b>DNS2</b>	0.0.0.0

IP configuration interface

## DHCP Server – System configuration

The system provides the DHCP server function. Enable the DHCP server function, the switch system will be a DHCP server.

- **DHCP Server:** Enable or Disable the DHCP Server function. Enable – the switch will be the DHCP server on your local network.
- **Low IP Address:** the dynamic IP assign range. Low IP address is the beginning of

the dynamic IP assigns range. For example: dynamic IP assign range is from 192.168.1.100 ~ 192.168.1.200. 192.168.1.100 will be the Low IP address.

- **High IP Address:** the dynamic IP assign range. High IP address is the end of the dynamic IP assigns range. For example: dynamic IP assign range is from 192.168.1.100 ~ 192.168.1.200. 192.168.1.200 will be the High IP address.
- **Subnet Mask:** the dynamic IP assign range subnet mask.
- **Gateway:** the gateway in your network.
- **DNS:** Domain Name Server IP Address in your network.
- **Lease Time (sec):** It is the time period that system will reset the dynamic IP assignment to ensure the dynamic IP will not been occupied for a long time or the server doesn't know that the dynamic IP is idle.
- And then, click

## DHCP Server - System Configuration



DHCP Server :  ▾


Low IP Address	192.168.16.100
High IP Address	192.168.16.200
Subnet Mask	255.255.255.0
Gateway	192.168.1.254
DNS	0.0.0.0
Lease Time (sec)	86400

DHCP Server Configuration interface

### DHCP Client – System Configuration

When the DHCP server function is active, the system will collect the DHCP client information and displays it here.

# DHCP Server - Client Entries

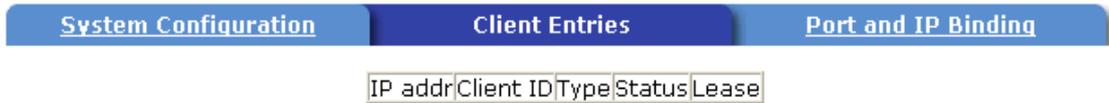


DHCP Client Entries interface

## DHCP Server - Port and IP Bindings

You can assign the specific IP address that is the IP in dynamic IP assign range to the specific port. When the device is connecting to the port and asks for dynamic IP assigning, the system will assign the IP address that has been assigned before to the connected device.

## DHCP Server - Port and IP Binding

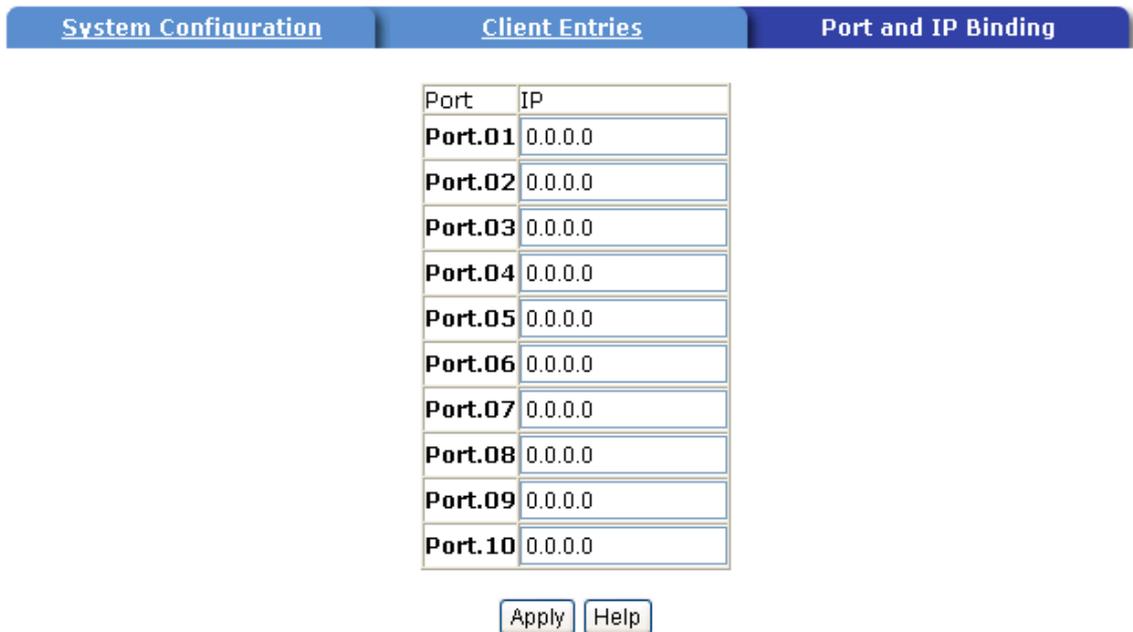

Port and IP Bindings interface

## TFTP - Update Firmware

It provides the functions to allow a user to update the switch firmware. Before updating, make sure you have your TFTP server ready and the firmware image is on the TFTP server.

1. **TFTP Server IP Address:** fill in your TFTP server IP.

2. **Firmware File Name:** the name of firmware image.
3. Click .

## TFTP - Update Firmware

Update Firmware	Restore Configuration	Backup Configuration				
<table border="1"> <tr> <td>TFTP Server IP Address</td> <td>192.168.16.2</td> </tr> <tr> <td>Firmware File Name</td> <td>image.bin</td> </tr> </table>			TFTP Server IP Address	192.168.16.2	Firmware File Name	image.bin
TFTP Server IP Address	192.168.16.2					
Firmware File Name	image.bin					
<input type="button" value="Apply"/> <input type="button" value="Help"/>						

Update Firmware interface

## TFTP – Restore Configuration

You can restore EEPROM value from TFTP server, but you must put the image file on TFTP server first, switch will download back flash image.

1. **TFTP Server IP Address:** fill in the TFTP server IP.
2. **Restore File Name:** fill in the correct restore file name.
3. Click .

## TFTP - Restore Configuration

Update Firmware	Restore Configuration	Backup Configuration				
<table border="1"> <tr> <td>TFTP Server IP Address</td> <td>192.168.16.2</td> </tr> <tr> <td>Restore File Name</td> <td>data.bin</td> </tr> </table>			TFTP Server IP Address	192.168.16.2	Restore File Name	data.bin
TFTP Server IP Address	192.168.16.2					
Restore File Name	data.bin					
<input type="button" value="Apply"/> <input type="button" value="Help"/>						

Restore Configuration interface

## TFTP - Backup Configuration

You can save current EEPROM value from the switch to TFTP server, then go to the TFTP restore configuration page to restore the EEPROM value.

1. **TFTP Server IP Address:** fill in the TFTP server IP
2. **Backup File Name:** fill the file name
3. Click .

## TFTP - Backup Configuration

<a href="#">Update Firmware</a>	<a href="#">Restore Configuration</a>	<a href="#">Backup Configuration</a>				
<table border="1"><tr><td><b>TFTP Server IP Address</b></td><td><input type="text" value="192.168.16.2"/></td></tr><tr><td><b>Backup File Name</b></td><td><input type="text" value="data.bin"/></td></tr></table>			<b>TFTP Server IP Address</b>	<input type="text" value="192.168.16.2"/>	<b>Backup File Name</b>	<input type="text" value="data.bin"/>
<b>TFTP Server IP Address</b>	<input type="text" value="192.168.16.2"/>					
<b>Backup File Name</b>	<input type="text" value="data.bin"/>					
<input type="button" value="Apply"/> <input type="button" value="Help"/>						

Backup Configuration interface

## System Event Log – Syslog Configuration

Configuring the system event mode that want to be collected and system log server IP.

1. **Syslog Client Mode:** select the system log mode – client only, server only, or both S/C.
2. **System Log Server IP Address:** assigned the system log server IP.
3. Click  to refresh the events log.
4. Click  to clear all current events log.
5. After configuring, Click .

# System Event Log - Syslog Configuration

<b>Syslog Configuration</b>		<b>SMTP Configuration</b>	<b>Event Configuration</b>
<b>Syslog Client Mode</b>	Both	Apply	
<b>Syslog Server IP Address</b>	0.0.0.0		

```
1: Jan 1 03:23:50 : System Log Enable!  
2: Jan 1 03:23:50 : System Log Server IP: 0.0.0.0
```

Page.1

Reload Clear

Syslog Configuration interface

## System Event Log - SMTP Configuration

You can set up the mail server IP, mail account, account password, and forwarded email account for receiving the event alert.

1. **Email Alert:** enable or disable the email alert function.
2. **SMTP Server IP:** set up the mail server IP address (when **Email Alert** enabled, this function will then be available)..
3. **Authentication:** mark the check box to enable and configure the email account and password for authentication (when **Email Alert** enabled, this function will then be available)..
4. **Mail Account:** set up the email account, e.g. [johnadmin@123.com](mailto:johnadmin@123.com), to receive the alert. It must be an existing email account on the mail server, which you had set up

- in **SMTP Server IP Address** column.
5. **Password:** The email account password.
  6. **Confirm Password:** reconfirm the password.
  7. **Rcpt e-mail Address 1 ~ 6:** you can assign up to 6 e-mail accounts also to receive the alert.
  8. Click  .

## System Event Log - SMTP Configuration

Syslog Configuration
**SMTP Configuration**
Event Configuration

E-mail Alert:  ▾

SMTP Server IP Address :	<input type="text" value="0.0.0.0"/>
<input checked="" type="checkbox"/> <b>Authentication</b>	
Mail Account :	<input type="text"/>
Password :	<input type="text"/>
Confirm Password :	<input type="text"/>
Rcpt e-mail Address 1 :	<input type="text"/>
Rcpt e-mail Address 2 :	<input type="text"/>
Rcpt e-mail Address 3 :	<input type="text"/>
Rcpt e-mail Address 4 :	<input type="text"/>
Rcpt e-mail Address 5 :	<input type="text"/>
Rcpt e-mail Address 6 :	<input type="text"/>

SMTP Configuration interface

## System Event Log - Event Configuration

You can select the system log events and SMTP events. When selected events occur, the system will send out the log information. Also, per port log and SMTP events can be selected. After configure, Click  .

- **System event selection:** 4 selections – Device cold start, Device warm start,

SNMP Authentication Failure, and Xtreme Ring topology change. Mark the checkbox to select the event. When selected events occur, the system will issue the logs.

- **Device cold start:** when the device executes cold start action, the system will issue a log event.
- **Device warm start:** when the device executes warm start, the system will issue a log event.
- **Authentication Failure:** when the SNMP authentication fails, the system will issue a log event.
- **Xtreme Ring topology change:** when the Xtreme Ring topology has changed, the system will issue a log event.

## System Event Log - Event Configuration



### System event selection

Event Type	Syslog	SMTP
Device cold start	<input type="checkbox"/>	<input type="checkbox"/>
Device warm start	<input type="checkbox"/>	<input type="checkbox"/>
Authentication Failure	<input type="checkbox"/>	<input type="checkbox"/>
Xtreme Ring topology change	<input type="checkbox"/>	<input type="checkbox"/>

- **Port event selection:** select the per port events and per port SMTP events. It has 3 selections – Link UP, Link Down, and Link UP & Link Down. Disable means no event is selected.
  - **Link UP:** the system will issue a log message when port connection is up only.
  - **Link Down:** the system will issue a log message when port connection is down only.
  - **Link UP & Link Down:** the system will issue a log message when port connection is up and down.

## Port event selection

Port	Syslog	SMTP
Port.01	Disable	Disable
Port.02	Disable	Disable
Port.03	Link Up Link Down Link Up & Link Down	Disable
Port.04	Disable	Disable
Port.05	Disable	Disable
Port.06	Disable	Disable
Port.07	Disable	Disable
Port.08	Disable	Disable
Port.09	Disable	Disable
Port.10	Disable	Disable

Apply

Event Configuration interface

## Fault Relay Alarm

- **Power Failure:** Mark the check box to enable the function of lighting up **FAULT** LED on the panel when power fails.
- **Port Link Down/Broken:** Mark the check box to enable the function of lighting up **FAULT** LED on the panel when Ports' states are link down or broken.

## Fault Relay Alarm

### Power Failure

Power 1  Power 2

### Port Link Down/Broken

Port 1  Port 2  
 Port 3  Port 4  
 Port 5  Port 6  
 Port 7  Port 8  
 Port 9  Port 10

Apply

Fault Relay Alarm interface

## SNTP Configuration

You can configure the SNTP (Simple Network Time Protocol) settings. The SNTP allows you to synchronize switch clocks in the Internet.

1. **SNTP Client:** enable or disable SNTP function to get the time from the SNTP server.
2. **Daylight Saving Time:** enable or disable daylight saving time function. When daylight saving time is enabling, you need to configure the daylight saving time period.
3. **UTC Timezone:** set the switch location time zone. The following table lists the different location time zone for your reference.

Local Time Zone	Conversion from UTC	Time at 12:00 UTC
November Time Zone	- 1 hour	11am
Oscar Time Zone	-2 hours	10 am
ADT - Atlantic Daylight	-3 hours	9 am
AST - Atlantic Standard EDT - Eastern Daylight	-4 hours	8 am
EST - Eastern Standard CDT - Central Daylight	-5 hours	7 am
CST - Central Standard MDT - Mountain Daylight	-6 hours	6 am
MST - Mountain Standard PDT - Pacific Daylight	-7 hours	5 am
PST - Pacific Standard ADT - Alaskan Daylight	-8 hours	4 am
ALA - Alaskan Standard	-9 hours	3 am

HAW - Hawaiian Standard	-10 hours	2 am
Nome, Alaska	-11 hours	1 am
CET - Central European FWT - French Winter MET - Middle European MEWT - Middle European Winter SWT - Swedish Winter	+1 hour	1 pm
EET - Eastern European, USSR Zone 1	+2 hours	2 pm
BT - Baghdad, USSR Zone 2	+3 hours	3 pm
ZP4 - USSR Zone 3	+4 hours	4 pm
ZP5 - USSR Zone 4	+5 hours	5 pm
ZP6 - USSR Zone 5	+6 hours	6 pm
WAST - West Australian Standard	+7 hours	7 pm
CCT - China Coast, USSR Zone 7	+8 hours	8 pm
JST - Japan Standard, USSR Zone 8	+9 hours	9 pm
EAST - East Australian Standard GST Guam Standard, USSR Zone 9	+10 hours	10 pm
IDLE - International Date Line NZST - New Zealand	+12 hours	Midnight

Standard		
NZT - New Zealand		

4. **SNTP Sever URL:** set the SNTP server IP address.
5. **Daylight Saving Period:** set up the Daylight Saving beginning time and Daylight Saving ending time. Both will be different in every year.
6. **Daylight Saving Offset (mins):** set up the offset time.
7. **Switch Timer:** Displays the switch current time.
8. Click  .

## SNTP Configuration

SNTP Client :

Daylight Saving Time :

<b>UTC Timezone</b>	<input type="button" value="(GMT)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London"/>	
<b>SNTP Server URL</b>	<input type="text" value="0.0.0.0"/>	
<b>Switch Timer</b>	<input type="text"/>	
<b>Daylight Saving Period</b>	<input type="text" value="20040101 00:00"/>	<input type="text" value="20040101 00:00"/>
<b>Daylight Saving Offset(mins)</b>	<input type="text" value="0"/>	

SNTP Configuration interface

## IP Security

IP security function allows user to assign 10 specific IP addresses that have permission to access the switch through the web browser for the securing switch management.

- **IP Security Mode:** when this option is in **Enable** mode, the **Enable HTTP Server** and **Enable Telnet Server** check boxes will then be available.
- **Enable HTTP Server:** when this check box is checked, the IP addresses among Security IP1 ~ IP10 will be allowed to access via HTTP service.

- **Enable Telnet Server:** when checked, the IP addresses among Security IP1 ~ IP10 will be allowed to access via telnet service.
- **Security IP 1 ~ 10:** Assign up to 10 specific IP address. Only these 10 IP address can access and manage the switch through the Web browser
- And then, click  button to apply the configuration

---

**[NOTE]** Remember to execute the “Save Configuration” action, otherwise the new configuration will lose when switch power off.

---

## IP Security

IP Security Mode:

Enable HTTP Server  
 Enable Telnet Server

Security IP1	<input type="text" value="0.0.0.0"/>
Security IP2	<input type="text" value="0.0.0.0"/>
Security IP3	<input type="text" value="0.0.0.0"/>
Security IP4	<input type="text" value="0.0.0.0"/>
Security IP5	<input type="text" value="0.0.0.0"/>
Security IP6	<input type="text" value="0.0.0.0"/>
Security IP7	<input type="text" value="0.0.0.0"/>
Security IP8	<input type="text" value="0.0.0.0"/>
Security IP9	<input type="text" value="0.0.0.0"/>
Security IP10	<input type="text" value="0.0.0.0"/>

IP Security interface

## User Authentication

Change web management login user name and password for the management security issue

1. **User name:** Key in the new user name(The default is “admin”)
2. **Password:** Key in the new password(The default is “admin”)

3. **Confirm password:** Re-type the new password
4. And then, click

## User Authentication

User Name :	<input type="text" value="admin"/>
New Password :	<input type="password" value="•••••"/>
Confirm Password :	<input type="password" value="•••••"/>

User Authentication interface

## Port Statistics

The following information provides the current port statistic information.

- **Port:** The port number.
- **Type:** Displays the current speed of connection to the port.
- **Link:** The status of linking—‘Up’ or ‘Down’.
- **State:** It’s set by Port Control. When the state is disabled, the port will not transmit or receive any packet.
- **Tx Good Packet:** The counts of transmitting good packets via this port.
- **Tx Bad Packet:** The counts of transmitting bad packets (including undersize [less than 64 octets], oversize, CRC Align errors, fragments and jabbers packets) via this port.
- **Rx Good Packet:** The counts of receiving good packets via this port.
- **Rx Bad Packet:** The counts of receiving good packets (including undersize [less than 64 octets], oversize, CRC error, fragments and jabbers) via this port.
- **Tx Abort Packet:** The aborted packet while transmitting.
- **Packet Collision:** The counts of collision packet.
- **Packet Dropped:** The counts of dropped packet.
- **Rx Bcast Packet:** The counts of broadcast packet.
- **Rx Mcast Packet:** The counts of multicast packet.

- Click  button to clean all counts.

## Port Statistics

Port	Type	Link	State	Tx Good Packet	Tx Bad Packet	Rx Good Packet	Rx Bad Packet	Tx Abort Packet	Packet Collision	Packet Dropped	RX Bcast Packet	RX Mcast Packet
Port.01	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.02	100TX	Up	Enable	475	0	5967	0	0	0	0	3933	1170
Port.03	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.04	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.05	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.06	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.07	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.08	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.09	1GTX/mGBIC	Up	Enable	5113	0	5087	0	0	0	0	0	0
Port.10	1GTX/mGBIC	Up	Enable	5113	0	5087	0	0	0	0	0	0

Port Statistics interface

## Port Control

In Port control, you can view every port status that depended on user setting and the negotiation result.

1. **Port:** select the port that you want to configure.
2. **State:** Current port status. The port can be set to disable or enable mode. If the port setting is disable then will not receive or transmit any packet.
3. **Negotiation:** set auto negotiation status of port.
4. **Speed:** set the port link speed.
5. **Duplex:** set full-duplex or half-duplex mode of the port.
6. **Flow Control:** set flow control function is **Symmetric** or **Asymmetric** in Full Duplex mode. The default value is **Symmetric**.
7. **Security:** When its state is "On", means this port accepts only one MAC address.
8. Click  .

# Port Control

Port	State	Negotiation	Speed	Duplex	Flow Control	Security
Port.01	Enable	Auto	100	Full	Disable	Off
Port.02						
Port.03						
Port.04						

Port	Group ID	Type	Link	State	Negotiation	Speed Duplex		Flow Control		Security
						Config	Actual	Config	Actual	
Port.01	N/A	100TX	Down	Enable	Auto	100 Full	N/A	Disable	N/A	OFF
Port.02	N/A	100TX	Up	Enable	Auto	100 Full	100 Full	Disable	OFF	OFF
Port.03	N/A	100TX	Down	Enable	Auto	100 Full	N/A	Disable	N/A	OFF
Port.04	N/A	100TX	Down	Enable	Auto	100 Full	N/A	Disable	N/A	OFF
Port.05	N/A	100TX	Down	Enable	Auto	100 Full	N/A	Disable	N/A	OFF
Port.06	N/A	100TX	Down	Enable	Auto	100 Full	N/A	Disable	N/A	OFF
Port.07	N/A	100TX	Down	Enable	Auto	100 Full	N/A	Disable	N/A	OFF
Port.08	N/A	100TX	Down	Enable	Auto	100 Full	N/A	Disable	N/A	OFF
Port.09	N/A	1GTX/mGBIC	Up	Enable	Auto	1G Full	1G Full	Disable	OFF	OFF
Port.10	N/A	1GTX/mGBIC	Up	Enable	Auto	1G Full	1G Full	Disable	OFF	OFF

Port Control interface

## Port Trunk

The Link Aggregation Control Protocol (LACP) provides a standardized means for exchanging information between Partner Systems on a link to allow their Link Aggregation Control instances to reach agreement on the identity of the Link Aggregation Group to which the link belongs, move the link to that Link Aggregation Group, and enable its transmission and reception functions in an orderly manner. Link aggregation lets you group up to 4 consecutive ports into two dedicated connections. This feature can expand bandwidth to a device on the network. **LACP operation requires full-duplex mode**, more detail information refers to IEEE 802.3ad.

### Aggregator setting

1. **System Priority:** a value used to identify the active LACP. The switch with the lowest value has the highest priority and is selected as the active LACP.
2. **Group ID:** There are three trunk groups to provide configure. Choose the "Group ID" and click  .

3. **LACP:** If enable, the group is LACP static trunk group. If disable, the group is local static trunk group. All ports support LACP dynamic trunk group. If connecting to the device that also supports LACP, the LACP dynamic trunk group will be created automatically.
4. **Work ports:** allow max four ports can be aggregated at the same time. With LACP static trunk group, the exceed ports are standby and can be aggregated if work ports fail. If it is local static trunk group, the number of ports must be the same as the group member ports.
5. Select the ports to join the trunk group. Allow max four ports can be aggregated at the same time. Click **Add** button to add the port. To remove unwanted ports, select the port and click **Remove** button.
6. If LACP enable, you can configure LACP Active/Passive status in each ports on State Activity page.
7. Click **Apply** .
8. Use **Delete** button to delete Trunk Group. Select the Group ID and click **Delete** button.

## Port Trunk - Aggregator Setting

Aggregator Setting	Aggregator Information	State Activity												
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr style="background-color: #cccccc;"> <th style="padding: 2px;">System Priority</th> </tr> <tr> <td style="text-align: center; padding: 2px;">1</td> </tr> </table>			System Priority	1										
System Priority														
1														
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%; padding: 2px;"><b>Group ID</b></td> <td style="width: 40%; padding: 2px;">Trunk.1 ▼</td> <td style="width: 40%; padding: 2px; text-align: right;">Select</td> </tr> <tr> <td style="padding: 2px;"><b>Lacp</b></td> <td style="padding: 2px;">Disable ▼</td> <td></td> </tr> <tr> <td style="padding: 2px;"><b>Work Ports</b></td> <td style="padding: 2px;">0</td> <td></td> </tr> <tr> <td style="width: 20%;"></td> <td style="width: 40%; padding: 2px; text-align: center;">           &lt;&lt;Add            Remove&gt;&gt;         </td> <td style="width: 40%; padding: 2px;">           Port.01 ▲            Port.02            Port.03            Port.04            Port.05            Port.06            Port.07            Port.08            Port.09 ▼         </td> </tr> </table>			<b>Group ID</b>	Trunk.1 ▼	Select	<b>Lacp</b>	Disable ▼		<b>Work Ports</b>	0			<<Add Remove>>	Port.01 ▲ Port.02 Port.03 Port.04 Port.05 Port.06 Port.07 Port.08 Port.09 ▼
<b>Group ID</b>	Trunk.1 ▼	Select												
<b>Lacp</b>	Disable ▼													
<b>Work Ports</b>	0													
	<<Add Remove>>	Port.01 ▲ Port.02 Port.03 Port.04 Port.05 Port.06 Port.07 Port.08 Port.09 ▼												
<table style="margin: auto;"> <tr> <td style="padding: 2px 10px;">Apply</td> <td style="padding: 2px 10px;">Delete</td> <td style="padding: 2px 10px;">Help</td> </tr> </table>			Apply	Delete	Help									
Apply	Delete	Help												

Port Trunk—Aggregator Setting interface

## Aggregator Information

When you have setup the aggregator setting with LACP disabled, you will see the local static trunk group information here.

# Port Trunk - Aggregator Information



Static Trunking Group	
Group Key	2
Port Member	2

Port Trunk – Aggregator Information interface

## State Activity

When you had setup the LACP aggregator, you can configure port state activity. You can mark or un-mark the port. When you mark the port and click  button the port state activity will change to **Active**. Opposite is **Passive**.

- **Active:** The port automatically sends LACP protocol packets.
- **Passive:** The port does not automatically send LACP protocol packets, and responds only if it receives LACP protocol packets from the opposite device.

---

### [NOTE]

1. A link having either two active LACP ports or one active port can perform dynamic LACP trunk.
  2. A link has two passive LACP ports will not perform dynamic LACP trunk because both ports are waiting for an LACP protocol packet from the opposite device.
  3. If you are active LACP's actor, after you have selected trunk port, the active status will be created automatically.
-

# Port Trunk - State Activity

Aggregator Setting    Aggregator Information    **State Activity**

Port	LACP State	Activity	Port	LACP State	Activity
1	<input checked="" type="checkbox"/>	Active	2		N/A
3		N/A	4		N/A
5		N/A	6		N/A
7		N/A	8		N/A
9		N/A	10		N/A

Port Trunk – State Activity interface

## Port Mirroring

The Port mirroring is a method for monitor traffic in switched networks. Traffic through ports can be monitored by one specific port. That means traffic goes in or out monitored (source) ports will be duplicated into mirror (destination) port.

- **Destination Port:** There is only one port can be selected to be destination (mirror) port for monitoring both RX and TX traffic which come from source port. Or, use one of two ports for monitoring RX traffic only and the other one for TX traffic only. User can connect mirror port to LAN analyzer or Netxray
- **Source Port:** The ports that user wants to monitor. All monitored port traffic will be copied to mirror (destination) port. User can select multiple source ports by checking the **RX** or **TX** check boxes to be monitored.
- And then, click  button.

# Port Mirroring

	Destination Port		Source Port	
	RX	TX	RX	TX
Port.01	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.02	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.03	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.04	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.05	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.06	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.07	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.08	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.09	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.10	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>

Port Trunk – Port Mirroring interface

## Rate Limiting

You can set up every port's bandwidth rate and frame limitation type.

- **Ingress Limit Frame type:** select the frame type that wants to filter. The frame types have 4 options for selecting: **All**, **Broadcast/Multicast/Flooded Unicast**, **Broadcast/Multicast** and **Broadcast only**.

**Broadcast/Multicast/Flooded Unicast**, **Broadcast/Multicast** and **Broadcast only** types are only for ingress frames. The egress rate only supports **All** type.

# Rate Limiting

	Ingress Limit Frame Type	Ingress	Egress
Port.01	All <input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps
Port.02	All <input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps
Port.03	All <input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps
Port.04	All <input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps
Port.05	All <input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps
Port.06	All <input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps
Port.07	All <input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps
Port.08	All <input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps
Port.09	All <input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps
Port.10	All <input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps	<input type="text" value="0"/> kbps

Rate Range is from 100 kbps to 102400 kbps or to 256000 kbps for giga ports, and zero means no limit.

Rate Limiting interface

- All the ports support port ingress and egress rate control. For example, assume port 1 is 10Mbps, users can set it's effective egress rate is 1Mbps, ingress rate is 500Kbps. The switch performs the ingress rate by packet counter to meet the specified rate
  - **Ingress:** Enter the port effective ingress rate(The default value is "0")
  - **Egress:** Enter the port effective egress rate(The default value is "0")
- And then, click  to apply the settings

---

**[NOTE]** Rate Range is from 64 kbps to 102400 kbps (250000 kbps for giga ports) and zero means no limit

---


## VLAN configuration

A Virtual LAN (VLAN) is a logical network grouping that limits the broadcast domain, which would allow you to isolate network traffic, so only the members of the VLAN will

receive traffic from the same members of VLAN. Basically, creating a VLAN from a switch is logically equivalent of reconnecting a group of network devices to another Layer 2 switch. However, all the network devices are still plugged into the same switch physically.

The industrial switch supports port-based and 802.1Q (tagged-based) VLAN. The default configuration of VLAN operation mode is “**Disable**”.

## VLAN Configuration

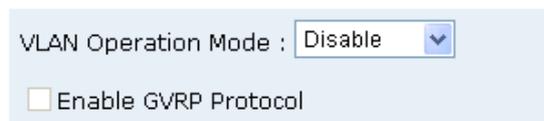

VLAN Operation Mode :

Enable GVRP Protocol

**VLAN NOT ENABLE**

VLAN Configuration interface

### VLAN configuration - Port-based VLAN

Packets can go among only members of the same VLAN group. Note all unselected ports are treated as belonging to another single VLAN. If the port-based VLAN enabled, the VLAN-tagging is ignored.

In order for an end station to send packets to different VLAN groups, it itself has to be either capable of tagging packets it sends with VLAN tags or attached to a VLAN-aware bridge that is capable of classifying and tagging the packet with different VLAN ID based on not only default PVID but also other information about the packet, such as the protocol.

# VLAN Configuration

VLAN Operation Mode :  

Enable GVRP Protocol



VLAN – Port Based interface

- Click  to add a new VLAN group(The maximum VLAN group is up to 64 VLAN groups)
- Entering the VLAN name, group ID and grouping the members of VLAN group
- And then, click

# VLAN Configuration

VLAN Operation Mode :    
 Enable GVRP Protocol

**Group Name**

**VLAN ID**

VLAN—Port Based Add interface

- You will see the VLAN displays.
- Use  button to delete unwanted VLAN.
- Use  button to modify existing VLAN group.

---

**[NOTE]** Remember to execute the “Save Configuration” action, otherwise the new configuration will lose when switch power off.

---

## 802.1Q VLAN

Tagged-based VLAN is an IEEE 802.1Q specification standard. Therefore, it is possible to create a VLAN across devices from different switch vendors. IEEE 802.1Q VLAN uses a technique to insert a “tag” into the Ethernet frames. Tag contains a VLAN Identifier (VID) that indicates the VLAN numbers.

You can create Tag-based VLAN, and enable or disable GVRP protocol. There are 256 VLAN groups to provide configure. Enable 802.1Q VLAN, the all ports on the switch belong to default VLAN, VID is 1. The default VLAN can't be deleting.

GVRP allows automatic VLAN configuration between the switch and nodes. If the switch is connected to a device with GVRP enabled, you can send a GVRP request using the VID of a VLAN defined on the switch; the switch will automatically add that device to the existing VLAN.

## VLAN Configuration

VLAN Operation Mode : 802.1Q

Enable GVRP Protocol

### 802.1Q Configuration Group Configuration

Port	Link Type	Untagged Vid	Tagged Vid
Port.02 <input type="button" value="v"/>	Access Link <input type="button" value="v"/>	1	

Port	Link Type	Untagged Vid	Tagged Vid
Port.02	Access Link	1	
Port.03	Access Link	1	
Port.04	Access Link	1	
Port.05	Access Link	1	
Port.06	Access Link	1	
Port.07	Access Link	1	
Port.08	Access Link	1	
Port.09	Access Link	1	
Port.10	Access Link	1	
Trunk.1	Access Link	1	

802.1q VLAN interface

## 802.1Q Configuration

1. **Enable GVRP Protocol:** check the check box to enable GVRP protocol.
2. Select the port that wants to configure.
3. **Link Type:** there are 3 types of link type.
  - **Access Link:** single switch only, allow user to group ports by setting the same VID.
  - **Trunk Link:** extended application of **Access Link**, allow user to group ports by setting the same VID with 2 or more switches.
  - **Hybrid Link:** Both **Access Link** and **Trunk Link** are available.
4. **Untagged VID:** assign the untagged frame VID.
5. **Tagged VID:** assign the tagged frame VID.
6. Click
7. You can see each port setting in the below table on the screen.

## Group Configuration

Edit the existing VLAN Group.

1. Select the VLAN group in the table list.
2. Click

# VLAN Configuration

VLAN Operation Mode : 802.1Q   
 Enable GVRP Protocol

## 802.1Q Configuration      Group Configuration

Default\_\_1

Group Configuration interface

3. You can Change the VLAN group name and VLAN ID.
4. Click  .

# VLAN Configuration

VLAN Operation Mode : 802.1Q   
 Enable GVRP Protocol

## 802.1Q Configuration      Group Configuration

**Group Name**   
**VLAN ID**

Group Configuration interface

## Rapid Spanning Tree

The Rapid Spanning Tree Protocol (RSTP) is an evolution of the Spanning Tree Protocol and provides for faster spanning tree convergence after a topology change. The system also supports STP and the system will auto detect the connected device that is running STP or RSTP protocol.

### RSTP - System Configuration

- User can view spanning tree information about the Root Bridge
- User can modify RSTP state. After modification, click  button
  - **RSTP mode:** user must enable or disable RSTP function before configure the related parameters
  - **Priority (0-61440):** a value used to identify the root bridge. The bridge with the lowest value has the highest priority and is selected as the root. If the value changes, user must reboot the switch. The value must be multiple of 4096 according to the protocol standard rule
  - **Max Age (6-40):** the number of seconds a bridge waits without receiving Spanning-tree Protocol configuration messages before attempting a reconfiguration. Enter a value between 6 through 40
  - **Hello Time (1-10):** the time that controls switch sends out the BPDU packet to check RSTP current status. Enter a value between 1 through 10
  - **Forward Delay Time (4-30):** the number of seconds a port waits before changing from its Rapid Spanning-Tree Protocol learning and listening states to the forwarding state. Enter a value between 4 through 30

---

**[NOTE]** Follow the rule to configure the MAX Age, Hello Time, and Forward Delay Time.

**2 x (Forward Delay Time value -1) > = Max Age value >= 2 x (Hello Time value +1)**

---

# RSTP - System Configuration

System Configuration      Port Configuration

RSTP Mode	Disable ▾
Priority (0-61440)	32768
Max Age (6-40)	20
Hello Time (1-10)	2
Forward Delay Time (4-30)	15

Priority must be a multiple of 4096  
 $2 \times (\text{Forward Delay Time} - 1)$  should be greater than or equal to the Max Age.  
 The Max Age should be greater than or equal to  $2 \times (\text{Hello Time} + 1)$ .

Apply

## Root Bridge Information

Bridge ID	N/A
Root Priority	N/A
Root Port	N/A
Root Path Cost	N/A
Max Age	N/A
Hello Time	N/A
Forward Delay	N/A

RSTP System Configuration interface

## RSTP - Port Configuration

You can configure path cost and priority of every port.

1. Select the port in Port column.
1. **Path Cost:** The cost of the path to the other bridge from this transmitting bridge at the specified port. Enter a number 1 through 200000000.
2. **Priority:** Decide which port should be blocked by priority in LAN. Enter a number 0 through 240. The value of priority must be the multiple of 16.
3. **P2P:** Some of the rapid state transactions that are possible within RSTP are dependent upon whether the port concerned can only be connected to exactly one other bridge (i.e. it is served by a point-to-point LAN segment), or can be connected to two or more bridges (i.e. it is served by a shared medium LAN segment). This function allows the P2P status of the link to be manipulated administratively. True is P2P enabling. False is P2P disabling.
4. **Edge:** The port directly connected to end stations cannot create bridging loop in the network. To configure the port as an edge port, set the port to “**True**” status.

5. **Non Stp**: The port includes the STP mathematic calculation. **True** is not including STP mathematic calculation. **False** is including the STP mathematic calculation.
6. Click  .

## RSTP - Port Configuration

System Configuration		Port Configuration			
Port	Path Cost (1-200000000)	Priority (0-240)	Admin P2P	Admin Edge	Admin Non Stp
	<input type="text" value="200000"/>	<input type="text" value="128"/>	Auto <input type="button" value="v"/>	true <input type="button" value="v"/>	false <input type="button" value="v"/>

priority must be a multiple of 16

### RSTP Port Status

Port	Path Cost	Port Priority	Oper P2P	Oper Edge	Stp Neighbor	State	Role
------	-----------	---------------	----------	-----------	--------------	-------	------

RSTP Port Configuration interface

## SNMP Configuration

Simple Network Management Protocol (SNMP) is the protocol developed to manage nodes (servers, workstations, routers, switches and hubs etc.) on an IP network. SNMP enables network administrators to manage network performance, find and solve network problems, and plan for network growth. Network management systems learn of problems by receiving traps or change notices from network devices implementing SNMP.

### System Configuration

#### ■ Community Strings

You can define new community string set and remove unwanted community string.

1. **String:** fill the name of string.
  2. **RO:** Read only. Enables requests accompanied by this string to display MIB-object information.
  3. **RW:** Read write. Enables requests accompanied by this string to display MIB-object information and to set MIB objects.
1. Click **Add**.
  2. To remove the community string, select the community string that you have defined and click **Remove**. You cannot edit the name of the default community string set.
- **Agent Mode:** Select the SNMP version that you want to use it. And then click **Change** to switch to the selected SNMP version mode.

## SNMP - System Configuration

<b>System Configuration</b>	Trap Configuration	SNMPv3 Configuration
-----------------------------	--------------------	----------------------

**Community Strings**

<b>Current Strings :</b> <div style="border: 1px solid gray; padding: 2px; min-height: 40px;"> public__RO  private__RW </div>	<b>New Community String :</b> <div style="border: 1px solid gray; padding: 2px;"> String : <input style="width: 90%;" type="text"/> </div> <div style="margin-top: 5px;"> <input type="radio"/> RO    <input type="radio"/> RW </div>
<b>Remove</b>	<b>Add</b>

**Agent Mode**

<b>Current Mode:</b> SNMP v1/v2c only	<input type="radio"/> SNMP V1/V2C only <input type="radio"/> SNMP V3 only <input type="radio"/> SNMP V1/V2C/V3
	<b>Change</b>

SNMP System Configuration interface

### Trap Configuration

A trap manager is a management station that receives traps, the system alerts generated by the switch. If no trap manager is defined, no traps will issue. Create a trap manager by entering the IP address of the station and a community string. To define

management stations as trap manager and enter SNMP community strings and selects the SNMP version.

1. **IP Address:** Enter the IP address of trap manager.
2. **Community:** Enter the community string.
3. **Trap Version:** Select the SNMP trap version type – v1 or v2c.
4. Click **Add**.
5. To remove the community string, select the community string that you have defined and click **Remove**. You cannot edit the name of the default community string set.

## SNMP - Trap Configuration

The screenshot shows the 'Trap Managers' configuration window. It features a tabbed interface with 'System Configuration', 'Trap Configuration', and 'SNMPv3 Configuration'. The 'Trap Configuration' tab is selected. The window is split into two main areas: 'Current Managers' on the left and 'New Manager' on the right. The 'Current Managers' area contains a list box with '(none)' and a 'Remove' button. The 'New Manager' area contains an 'Add' button and three input fields: 'IP Address', 'Community', and 'Trap version'. The 'Trap version' field has two radio buttons, 'v1' (selected) and 'v2c'.

Trap Managers interface

## SNMPV3 Configuration


Configure the SNMP V3 function.

### Context Table

Configure SNMP v3 context table. Assign the context name of context table. Click **Add** to add context name. Click **Remove** to remove unwanted context name.

## User Profile

Configure SNMP v3 user table.

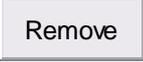- **User ID:** set up the user name.
- **Authentication Password:** set up the authentication password.
- **Privacy Password:** set up the private password.
- Click  to add context name.
- Click  to remove unwanted context name.

# SNMP Management

System Configuration	Trap Configuration	SnmpV3 Configuration
<b>Context Table</b>		
Context Name : <input type="text"/>		<input type="button" value="Apply"/>
<b>User Profile</b>		
Current User Profiles : <input type="button" value="Remove"/>	New User Profile : <input type="button" value="Add"/>	
<div style="border: 1px solid black; padding: 5px;">(none)</div>	User ID:	<input type="text"/>
	Authentication Password:	<input type="text"/>
	Privacy Password:	<input type="text"/>
<b>Group Table</b>		
Current Group content : <input type="button" value="Remove"/>	New Group Table: <input type="button" value="Add"/>	
<div style="border: 1px solid black; padding: 5px;">(none)</div>	Security Name (User ID):	<input type="text"/>
	Group Name:	<input type="text"/>
<b>Access Table</b>		
Current Access Tables : <input type="button" value="Remove"/>	New Access Table : <input type="button" value="Add"/>	
<div style="border: 1px solid black; padding: 5px;">(none)</div>	Context Prefix:	<input type="text"/>
	Group Name:	<input type="text"/>
	Security Level:	<input type="radio"/> NoAuthNoPriv. <input type="radio"/> AuthNoPriv. <input type="radio"/> AuthPriv.
	Context Match Rule	<input type="radio"/> Exact <input type="radio"/> Prefix
	Read View Name:	<input type="text"/>
	Write View Name:	<input type="text"/>
	Notify View Name:	<input type="text"/>
<b>MIBView Table</b>		
Current MIBTables : <input type="button" value="Remove"/>	New MIBView Table : <input type="button" value="Add"/>	
<div style="border: 1px solid black; padding: 5px;">(none)</div>	View Name:	<input type="text"/>
	SubOid-Tree:	<input type="text"/>
	Type:	<input type="radio"/> Excluded <input type="radio"/> Included


**Note:**  
Any modification of SNMPv3 tables might cause MIB accessing rejection. Please take notice of the causality between the tables before you modify these tables.

SNMP V3 configuration interface

## Group Table


Configure SNMP v3 group table.

- **Security Name (User ID):** Assign the user name that you have set up in user table.
- **Group Name:** Set up the group name.

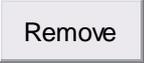- Click  to add context name.
- Click  to remove unwanted context name.


## Access Table

Configure SNMP v3 access table.

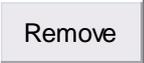- **Context Prefix:** Set up the context name.
- **Group Name:** Set up the group.
- **Security Level:** Set up the access level.
- **Context Match Rule:** Select the context match rule.
- **Read View Name:** Set up the read view.
- **Write View Name:** Set up the write view.
- **Notify View Name:** Set up the notify view.
- Click  to add context name.
- Click  to remove unwanted context name.

## MIBview Table

Configure MIB view table.

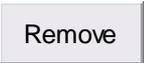- **ViewName:** Set up the name.
- **Sub-Oid Tree:** Fill the Sub OID.
- **Type:** Select the type – exclude or included.
- Click  to add context name.
- Click  to remove unwanted context name.

## QoS Configuration

You can configure Qos policy and priority setting, per port priority setting, COS and TOS setting.

### QoS Policy and Priority Type

- **Qos Policy:** select the Qos policy rule.
  - **Using the 8,4,2,1 weight fair queue scheme:** The switch will follow 8:4:2:1 rate to process priority queue from High to lowest queue. For example: the system will process 80 % high queue traffic, 40 % middle queue traffic, 20 % low queue traffic, and 10 % lowest queue traffic at the same time. And the traffic in the Low Priority queue are not transmitted until all High, Medium, and Normal traffic are serviced.
  - **Use the strict priority scheme:** Always higher queue will be process first, except higher queue is empty.
- **Priority Type:** there are 5 priority type selections available. Disable means no priority type is selected.
- **Port-base:** the port priority will follow the **Port-base** that you have assigned – High, middle, low, or lowest.
  - **COS only:** the port priority will only follow the **COS priority** that you have assigned.
  - **TOS only:** the port priority will only follow the **TOS priority** that you have assigned.
  - **COS first:** the port priority will follow the COS priority first, and then other priority rule.
  - **TOS first:** the port priority will follow the TOS priority first, and the other priority rule.
- Click  .

# QoS Configuration

## Qos Policy:

Use an 8,4,2,1 weighted fair queuing scheme  
 Use a strict priority scheme  
 Priority Type: Disable

## Port-based Priority:

Port.01	Port.02	Port.03	Port.04	Port.05	Port.06	Port.07	Port.08	Port.09	Port.10
Lowest									

## COS:

Priority	0	1	2	3	4	5	6	7
	Lowest							

## TOS:

Priority	0	1	2	3	4	5	6	7
	Lowest							
Priority	8	9	10	11	12	13	14	15
	Lowest							
Priority	16	17	18	19	20	21	22	23
	Lowest							
Priority	24	25	26	27	28	29	30	31
	Lowest							
Priority	32	33	34	35	36	37	38	39
	Lowest							
Priority	40	41	42	43	44	45	46	47
	Lowest							
Priority	48	49	50	51	52	53	54	55
	Lowest							
Priority	56	57	58	59	60	61	62	63
	Lowest							

QoS Configuration interface

## Port Base Priority

Configure per port priority level.

- **Port 1 ~ Port 10:** each port has 4 priority levels – High, Middle, Low, and Lowest.

- Click  .

## COS Configuration

Set up the COS priority level.

- **COS priority:** Set up the COS priority level 0~7 –High, Middle, Low, Lowest.
- Click  .

## TOS Configuration

Set up the TOS priority.

- **TOS priority:** the system provides 0~63 TOS priority level. Each level has 4 types of priority – high, middle, low, and lowest. The default value is “Lowest” priority for each level. When the IP packet is received, the system will check the TOS level value in the IP packet that has received. For example, user set the TOS level 25 is high. The port 1 is following the TOS priority policy only. When the port 1 packet received, the system will check the TOS value of the received IP packet. If the TOS value of received IP packet is 25(priority = high), and then the packet priority will have highest priority.
- Click  .

## IGMP Configuration

The Internet Group Management Protocol (IGMP) is an internal protocol of the Internet Protocol (IP) suite. IP manages multicast traffic by using switches, routers, and hosts that support IGMP. Enabling IGMP allows the ports to detect IGMP queries and report packets and manage IP multicast traffic through the switch. IGMP have three fundamental types of message as follows:

Message	Description
<b>Query</b>	A message sent from the querier (IGMP router or switch) asking for a response from each host belonging to the multicast group.
<b>Report</b>	A message sent by a host to the querier to indicate that the host wants to be or is a member of a given group indicated in the report message.
<b>Leave Group</b>	A message sent by a host to the querier to indicate that the host has quit being a member of a specific multicast group.

The switch support IP multicast, you can enable IGMP protocol on web management's switch setting advanced page, then displays the IGMP snooping information. IP multicast addresses range are from 224.0.0.0 through 239.255.255.255.

- **IGMP Protocol:** Enable or disable the IGMP protocol.
- **IGMP Query:** Enable or disable the IGMP query function. The IGMP query information will be displayed in IGMP status section.
- Click  .

## IGMP Configuration

IP Address	VLAN ID	Member Port
239.255.255.250	1	*2*****

**IGMP Protocol:**

**IGMP Query :**

IGMP Configuration interface

## Xtreme Ring

Xtreme Ring provides a faster redundant recovery than Spanning Tree topology. The action is similar to STP or RSTP, but the algorithms not the same.

In the Xtreme Ring topology, every switch should enable Xtreme Ring function and assign two member ports in the ring. Only one switch in the Xtreme Ring group would be set as a backup switch that would be blocked, called backup port, and another port is called working port. Other switches are called working switches and their two member ports are called working ports. When the failure of network connection occurs, the backup port will automatically become a working port to recovery the failure.

The switch supports the function and interface for setting the switch as the ring master or slave mode. The ring master can negotiate and place command to other switches in the Xtreme Ring group. If there are 2 or more switches in master mode, then software will select the switch with lowest MAC address number as the ring master. The Xtreme Ring master ring mode will be enabled by the Xtreme Ring configuration interface. Also, user can identify the switch as the ring master from the R.M. LED panel of the LED panel on the switch.

The system also supports the coupling ring that can connect 2 or more Xtreme Ring group for the redundant backup function and dual homing function that prevent connection lose between Xtreme Ring group and upper level/core switch.

- **Enable Xtreme Ring:** To enable the Xtreme Ring function. Marking the check box to enable the Xtreme Ring function.
- **Enable Ring Master:** Mark the check box for enabling this machine to be a ring master.
- **1<sup>st</sup> & 2<sup>nd</sup> Ring Ports:** Pull down the selection menu to assign two ports as the member ports. **1<sup>st</sup> Ring Port** is the working port and **2<sup>nd</sup> Ring Port** is the backup port. When **1<sup>st</sup> Ring Port** fails, the system will automatically upgrade the **2<sup>nd</sup> Ring Port** to be the working port.
- **Enable Coupling Ring:** To enable the coupling ring function. Marking the check

box to enable the coupling ring function.

- **Coupling port:** Assign the member port.
- **Control port:** Set the switch as the master switch in the coupling ring.
- **Enable Dual Homing:** Set up one of port on the switch to be the Dual Homing port. In an Xtreme Ring group, maximum Dual Homing port is one. Dual Homing only work when the Xtreme Ring function enable.
- And then, click  to apply the configuration.

## Xtreme Ring Configuration

<input type="checkbox"/> Enable Ring	
<input type="checkbox"/> Enable Ring Master	
1st Ring Port	Port.01 ▾
2nd Ring Port	Port.02 ▾
<input type="checkbox"/> Enable Couple Ring	
Coupling Port	Port.03 ▾
Control Port	Port.04 ▾
<input type="checkbox"/> Enable Dual Homing	Port.05 ▾

Xtreme Ring Interface

---

### [NOTE]

1. When the Xtreme Ring function enable, user must disable the RSTP. The Xtreme Ring function and RSTP function cannot exist at the same time.
  2. Remember to execute the “Save Configuration” action, otherwise the new configuration will lose when switch power off.
- 

## ■ Security

In this section, you can configure 802.1x and MAC address table.

## 802.1X/RADIUS Configuration

802.1x is an IEEE authentication specification that allows a client to connect to a wireless access point or wired switch but prevents the client from gaining access to the Internet until it provides authority, like a user name and password that are verified by a separate server.

### System Configuration

After enabling the IEEE 802.1x function, you can configure the parameters of this function.

1. **IEEE 802.1x Protocol:** .enable or disable 802.1x protocol.
2. **Radius Server IP:** set the Radius Server IP address.
3. **Server Port:** set the UDP destination port for authentication requests to the specified Radius Server.
4. **Accounting Port:** set the UDP destination port for accounting requests to the specified Radius Server.
5. **Shared Key:** set an encryption key for using during authentication sessions with the specified radius server. This key must match the encryption key used on the Radius Server.
6. **NAS, Identifier:** set the identifier for the radius client.
7. Click  .

## 802.1x/RADIUS - System Configuration

System Configuration	Port Configuration	Misc Configuration
<b>802.1x Protocol</b>	<input type="text" value="Disable"/>	
<b>Radius Server IP</b>	<input type="text" value="0.0.0.0"/>	
<b>Server Port</b>	<input type="text" value="1812"/>	
<b>Accounting Port</b>	<input type="text" value="1813"/>	
<b>Shared Key</b>	<input type="text" value="12345678"/>	
<b>NAS, Identifier</b>	<input type="text" value="NAS_L2_SWITCH"/>	

## 802.1x Per Port Configuration

You can configure 802.1x authentication state for each port. The State provides Disable, Accept, Reject and Authorize. Use “**Space**” key change the state value.

- **Reject:** the specified port is required to be held in the unauthorized state.
- **Accept:** the specified port is required to be held in the Authorized state.
- **Authorized:** the specified port is set to the Authorized or Unauthorized state in accordance with the outcome of an authentication exchange between the Supplicant and the authentication server.
- **Disable:** The specified port is required to be held in the Authorized state
- Click  .

## 802.1x/Radius - Port Configuration

System Configuration
Port Configuration
Misc Configuration

Port	State
<div style="border: 1px solid gray; padding: 2px;">                     Port.01 ▲                      Port.02 ▢                      Port.03 ▢                      Port.04 ▢                      Port.05 ▼                 </div>	<div style="border: 1px solid gray; padding: 5px; display: inline-block;">                         Authorize ▼                     </div>

### Port Authorization

Port	State
Port.01	Disable
Port.02	Disable
Port.03	Disable
Port.04	Disable
Port.05	Disable
Port.06	Disable
Port.07	Disable
Port.08	Disable
Port.09	Disable
Port.10	Disable

802.1x Per Port Setting interface

## Misc Configuration

1. **Quiet Period:** set the period during which the port doesn't try to acquire a supplicant.
2. **TX Period:** set the period the port wait for retransmit next EAPOL PDU during an authentication session.
3. **Supplicant Timeout:** set the period of time the switch waits for a supplicant response to an EAP request.
4. **Server Timeout:** set the period of time the switch waits for a server response to an authentication request.
5. **Max Requests:** set the number of authentication that must time-out before authentication fails and the authentication session ends.
6. **Reauth period:** set the period of time after which clients connected must be re-authenticated.
7. Click  .

## 802.1x/Radius - Misc Configuration

System Configuration	Port Configuration	Misc Configuration												
		<table border="1"> <tr> <td><b>Quiet Period</b></td> <td><input type="text" value="60"/></td> </tr> <tr> <td><b>Tx Period</b></td> <td><input type="text" value="30"/></td> </tr> <tr> <td><b>Supplicant Timeout</b></td> <td><input type="text" value="30"/></td> </tr> <tr> <td><b>Server Timeout</b></td> <td><input type="text" value="30"/></td> </tr> <tr> <td><b>Max Requests</b></td> <td><input type="text" value="2"/></td> </tr> <tr> <td><b>Reauth Period</b></td> <td><input type="text" value="3600"/></td> </tr> </table>	<b>Quiet Period</b>	<input type="text" value="60"/>	<b>Tx Period</b>	<input type="text" value="30"/>	<b>Supplicant Timeout</b>	<input type="text" value="30"/>	<b>Server Timeout</b>	<input type="text" value="30"/>	<b>Max Requests</b>	<input type="text" value="2"/>	<b>Reauth Period</b>	<input type="text" value="3600"/>
<b>Quiet Period</b>	<input type="text" value="60"/>													
<b>Tx Period</b>	<input type="text" value="30"/>													
<b>Supplicant Timeout</b>	<input type="text" value="30"/>													
<b>Server Timeout</b>	<input type="text" value="30"/>													
<b>Max Requests</b>	<input type="text" value="2"/>													
<b>Reauth Period</b>	<input type="text" value="3600"/>													
		<input type="button" value="Apply"/> <input type="button" value="Help"/>												

802.1x Misc Configuration interface

### MAC Address Table

Use the MAC address table to ensure the port security.

### Static MAC Address

You can add a static MAC address; it remains in the switch's address table, regardless of whether the device is physically connected to the switch. This saves the switch from having to re-learn a device's MAC address when the disconnected or powered-off device is active on the network again. You can add / modify / delete a static MAC address.

### ■ Add the Static MAC Address

You can add static MAC address in switch MAC table.

1. **MAC Address:** Enter the MAC address of the port that should permanently forward traffic, regardless of the device network activity.
2. **Port No.:** pull down the selection menu to select the port number.
3. Click .
4. If you want to delete the MAC address from filtering table, select the MAC address and click .

## MAC Address Table - Static MAC Addresses


The screenshot displays the 'Static MAC Addresses' configuration page. At the top, there are three tabs: 'Static MAC Addresses' (selected), 'MAC Filtering', and 'All Mac Addresses'. Below the tabs is a table with two columns: 'MAC Address' and 'Port'. The table is currently empty. Below the table, there are two input fields: 'MAC Address' with a text box and 'Port No.' with a dropdown menu showing 'Port.01'. At the bottom, there are three buttons: 'Add', 'Delete', and 'Help'.

Static MAC Addresses interface

### MAC Filtering

By filtering MAC address, the switch can easily filter pre-configure MAC address and reduce the un-safety. You can add and delete filtering MAC address.

# MAC Address Table - MAC Filtering

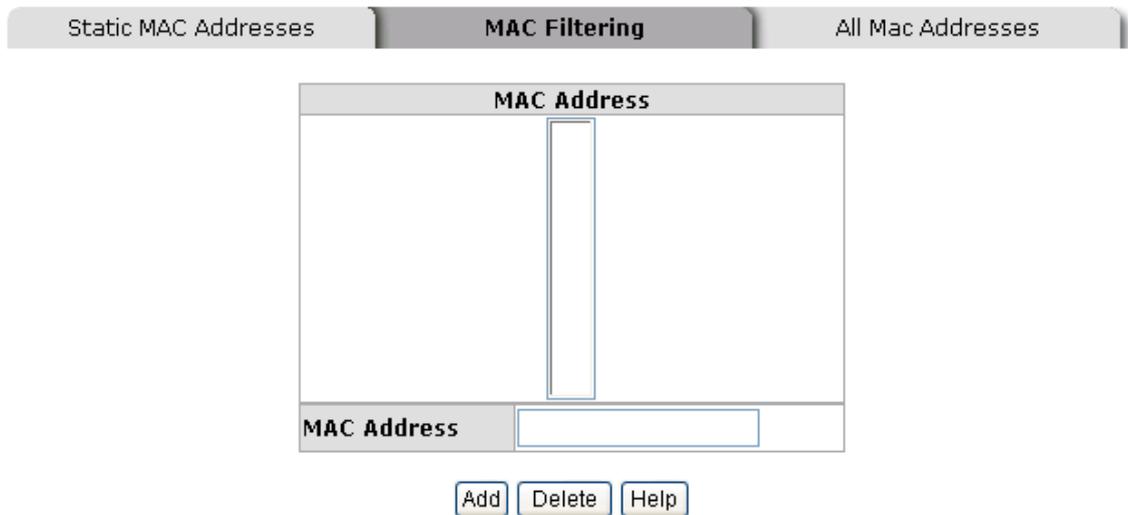

MAC Filtering interface

1. **MAC Address:** Enter the MAC address that you want to filter.
2. Click **Add**.
3. If you want to delete the MAC address from filtering table, select the MAC address and click **Delete**.

## All MAC Addresses

You can view the port that connected device's MAC address and related devices' MAC address.

1. Select the port.
2. The selected port of static MAC address information will be displayed here.
3. Click **Clear MAC Table** to clear the current port static MAC address information on screen.

# MAC Address Table - All Mac Addresses

The screenshot shows a web interface for managing MAC addresses. At the top, there are three tabs: 'Static MAC Addresses', 'MAC Filtering', and 'All Mac Addresses', with 'All Mac Addresses' being the active tab. Below the tabs is a 'Port No:' dropdown menu currently set to 'Port01'. Underneath is a table titled 'Current MAC Address' which is currently empty. Below the table, it displays 'Dynamic Address Count:0' and 'Static Address Count:0'. At the bottom of the interface is a button labeled 'Clear MAC Table'.

All MAC Address interface

## Factory Default

Reset switch to default configuration. Click  to reset all configurations to the default value.

## Factory Default

- Keep current IP address setting?
- Keep current username & password?

Factory Default interface

## Save Configuration


Save all configurations that you have made in the system. To ensure the all configuration will be saved. Click  to save the all configuration to the flash memory.

# Save Configuration




Save Configuration interface

## System Reboot

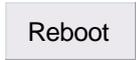Reboot the switch in software reset. Click  to reboot the system.

# System Reboot

Please click [**Reboot**] button to restart switch device.

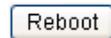

System Reboot interface

# Troubles shooting

---

- Verify that is using the right power cord/adapter (DC 24-48V), please don't use the power adapter with DC output bigger than 48V, or it will burn this converter down.
- Select the proper UTP cable to construct user network. Please check that is using the right cable. use unshielded twisted-pair (UTP) or shield twisted-pair ( STP ) cable for RJ-45 connections: 100  $\Omega$  Category 3, 4 or 5 cable for 10Mbps connections or 100 $\Omega$  Category 5 cable for 100Mbps connections. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).
- **Diagnosing LED Indicators:** the Switch can be easily monitored through panel indicators to assist in identifying problems, which describes common problems user may encounter and where user can find possible solutions.
- If the power indicator does not light on when the power cord is plugged in, user may have a problem with power cord. Than check for loose power connections, power losses or surges at power outlet. If user still cannot resolve the problem, contact user local dealer for assistance.
- If the Industrial switch LED indicators are normal and the connected cables are correct but the packets still cannot transmit. Please check user system's Ethernet devices' configuration or status.

# Technical Specification

---

The 8 10/100TX plus 2 Gigabit Copper/Mini GBIC managed industrial switch technical specification is following.

<p><b>Standard</b></p>	<p>IEEE 802.3 10Base-T Ethernet          IEEE 802.3u 100Base-TX Ethernet          IEEE 802.3ab 1000Base-T          IEEE 802.3z Gigabit fiber          IEEE 802.3x Flow Control and Back-pressure          IEEE 802.3ad Port trunk with LACP          IEEE 802.1d spanning tree / IEEE802.1w rapid spanning tree          IEEE 802.1p class of service          IEEE 802.1Q VLAN Tag          IEEE 802.1x User Authentication (Radius)          IEEE 802.1ab LLDP</p>
<p><b>Protocol</b></p>	<p>CSMA/CD</p>
<p><b>Management</b></p>	<p>SNMP management          Web interface management          Telnet interface management          Command Line Interface (CLI) management</p>
<p><b>RFC Standard</b></p>	<p>RFC 2030 SNMP          RFC 2821 SMTP          RFC 1215 Trap          RFC 2233 MIBII          RFC 1157 SNMP MIB          RFC 1493 Bridge MIB          RFC 2674 VLAN MIB</p>

	<p>RFC 2665 Ethernet like MIB</p> <p>RFC 2819 RMON MIB</p> <p>Private MIB</p>
<b>SNMP Trap</b>	<p>Up to 3 Trap stations</p> <p>Cold start</p> <p>Port link Up / Port link down</p> <p>Authentication Failure</p> <p>Private Trap for power status</p> <p>Port Alarm configuration</p> <p>Fault alarm</p> <p>Xtreme Ring topology change</p>
<b>Technology</b>	Store and forward switching architecture
<b>Transfer Rate</b>	<p>14,880 pps for 10Base-T Ethernet port</p> <p>148,800 pps for 100Base-TX/FX Fast Ethernet port</p> <p>1,488,000 pps for Gigabit Fiber Ethernet port</p>
<b>Transfer packet size</b>	64bytes to 1522 bytes (with VLAN tag)
<b>Packet filter</b>	<p>4 types of packet filter rule with different packet combination:</p> <ul style="list-style-type: none"> <li>■ All of packet</li> <li>■ Broadcast/ multicast/ flooded unicast packet</li> <li>■ Broadcast/ multicast packet</li> <li>■ Broadcast packet only</li> </ul>
<b>MAC address</b>	8K MAC address table
<b>Memory Buffer</b>	1Mbits

<b>LED</b>	<p><b>RJ-45 port:</b> Link/Activity (Green), Full duplex/Collision (Orange)</p> <p><b>Fiber port:</b> Link/Activity (Green)</p> <p><b>Per unit:</b> Power (Green), Power 1 (Green), Power 2 (Green), Fault (Orange), Master (Green)</p>
<b>Network Cable</b>	<p>10Base-T: 2-pair UTP/STP Cat. 3, 4, 5 cable EIA/TIA-568 100-ohm (100m)</p> <p>100Base-TX: 2-pair UTP/STP Cat. 5 cable EIA/TIA-568 100-ohm (100m)</p>
<b>Optical cable</b>	<ul style="list-style-type: none"> <li>■ <b>LC (Multi-mode):</b> 50/125um or 62.5/125um</li> <li>■ <b>LC (Single mode):</b> 9/125um or 10/125um</li> <li>■ <b>Available distance:</b> 2KM (Multi-mode) / 30KM (single-mode)</li> <li>■ <b>Wavelength:</b> 1310nm (multi-mode/ single mode)</li> </ul>
<b>Back-plane</b>	5.6Gbps
<b>Packet throughput ability</b>	8.3Mpps at 64bytes
<b>Power Supply</b>	<p>24 ~48 VDC</p> <p>Redundant power with polarity reverse protects function and removable terminal block.</p>
<b>Power consumption</b>	12 Watts
<b>Xtreme Ring</b>	<p>2 ports for Xtreme Ring to provide redundant backup feature and the recovery time below 20ms and start by Web interface management. The ring port can be defined by Web interface.</p>

<b>VLAN</b>	<p>Port based VLAN</p> <p>IEEE802.1Q Tag VLAN.</p> <p>Both of port based and Tag based VLAN group up to 256 VLANs.</p>
<b>Port Trunk with LACP</b>	<p>LACP Port Trunk: 4 Trunk groups/Maximum 4 trunk members</p>
<b>Class of service</b>	<p>IEEE802.1p class of service</p> <p>Per port provides 4 priority queues.</p>
<b>Quality of service</b>	<p>Port based/Tag based, IPv4 Tos, IPv6 Different Service.</p>
<b>Spanning tree</b>	<p>IEEE802.1d spanning tree</p> <p>IEEE802.1w rapid spanning tree.</p>
<b>IGMP</b>	<p>IGMP v1, v2 and Query mode</p> <p>Up to 256 multicast groups.</p>
<b>SMTP</b>	<p>Support SMTP Server and 6 e-mail accounts for receiving event alert</p>
<b>SNTP</b>	<p>Support SNTP to synchronize system clock in Internet</p>
<b>Management IP security</b>	<p>IP address security to prevents unauthorized intruder</p>
<b>Port mirror</b>	<p>TX packet only</p> <p>RX packet only,</p> <p>Both of TX and RX packet</p>
<b>Firmware update</b>	<p>TFTP firmware update</p> <p>TFTP backup and restore</p>

<b>Alarm</b>	<p>One relay output for port breakdown and power fail alarm</p> <p>Alarm Relay current carry ability: 1A @ DC24V</p>
<b>Bandwidth control</b>	<ul style="list-style-type: none"> <li>■ Ingress packets filter and egress packet limit.</li> <li>■ The egress rate control supports all of packet type and the limit rate range is from 100 kbps to 102400 kbps or to 256000 kbps for giga ports, and zero means no limit.</li> <li>■ Ingress filter packet type combination rule for Broadcast/Multicast/Flooded Unicast packet, Broadcast/Multicast packet, Broadcast packet only and all of packet.</li> <li>■ The ingress packet filter rate range is from 100 kbps to 102400 kbps or to 256000 kbps for giga ports, and zero means no limit.</li> </ul>
<b>DHCP client</b>	DHCP client function to obtain IP address from DHCP serve
<b>Install</b>	DIN rail kit and wall mount ear for wall mount or DIN-type cabinet install
<b>Operation Temperature (Standard Model)</b>	-10°C to 70°C (14°F to 158°F)
<b>Operation Temperature (Extended Model)</b>	-40°C to 75°C (-40°F to 167°F)
<b>Operation Humidity</b>	5% to 95% (Non-condensing)
<b>Storage Temperature</b>	-40°C to 85°C

<b>Case Dimension</b>	IP-30, 72 mm (W) x 105 mm (D) x 152mm (H)
<b>EMI</b>	FCC Class A, CE EN61000-4-2 (ESD), CE EN61000-4-3 (RS), CE EN61000-4-4 (EFT), CE EN61000-4-5 (Surge), CE EN61000-4-6 (CS), CE EN61000-4-8, CE EN61000-4-11, CE EN61000-4-12, CE EN61000-6-2, CE EN61000-6-4
<b>Safety</b>	UL cUL CE/EN60950-1
<b>Stability testing</b>	IEC60068-2-32 (Free fall) IEC60068-2-27 (Shock) IEC60068-2-6 (Vibration)